

# ARIVA

HIGH DEFINITION MULTIMEDIA

## Ariva EN User manual

*HDcombo  
high definition  
satellite and  
terrestrial  
receiver*



DVB-S2  
SATELLITE

DVB-T  
TERRESTRIAL



card  
reader



Common  
Interface



USB  
PVR

TIME SHIFT  
()



HD  
OSD

HDMI™  
HIGH DEFINITION MULTIMEDIA INTERFACE



PAL  
video upscaling



AUDIO  
FILES  
PLAYBACK



PHOTO  
FILES  
PLAYBACK



OPTICAL  
DIGITAL AUDIO



FERGUSON



EN

This equipment is marked with the above recycling symbol. It means that at the end of the life of the equipment you must dispose of it separately at an appropriate collection point and not place it in the normal domestic unsorted waste stream. This will benefit the environment for all.

PL

To urządzenie oznakowane jest specjalnym symbolem odzysku. Po okresie użytkowania trzeba je zwrócić do odpowiedniego punktu zbiórki i nie wolno umieszczać go razem z nieposortowanymi odpadami domowymi. Takie działanie przynosi korzyść dla środowiska.

DE AT

Dieses Produkt trägt das Recycling-Symbol gemäß der EU-Richtlinie 2002/96/EC. Das bedeutet, dass das Gerät am Ende der Nutzungszeit bei einer kommunalen Sammelstelle zum Recycling abgegeben werden muss (kostenlos). Eine Entsorgung über den Haus-/Restmüll ist nicht gestattet. Dies ist ein aktiver Beitrag zum Umweltschutz.

CZ

Toto zařízení je označeno výše uvedeným recyklačním symbolem. To znamená, že na konci doby života zařízení musíte zajistit, aby bylo uloženo odděleně na sběrném místě, zřízeném pro tento účel, a ne na místech určených pro ukládání běžného netříděného odpadu. Přispěje to ke zlepšené stavu životního prostředí nás všech.

HU

A készülék a fenti újrafelhasználási szimbólummal van megjelölve. Ez azt jelenti, hogy a készüléket használati időtartama után egy külön gyűjtőhelyen kell leadni. A normál háztartási hulladékkel és egyéb szeméttel együtt a készüléket kidobni nem szabad. Ezáltal hozzájárulunk környezetünk védelméhez.

ES

Este equipo está etiquetado con el símbolo de reciclado que puede verse arriba. Esto quiere decir que al final de la vida del equipo, éste debe ser llevado a un punto de recogida específico para equipos electrónicos, y no a los contenedores normales de residuos domésticos. Esto beneficiará al medio ambiente para todos.

RU

Это устройство обозначено специальным символом утилизации. После истечения эксплуатационного срока следует его вернуть в соответствующий пункт сборки, и запрещено его размещать с не отсортированными домашними отходами. Этим Вы не наносите вреда для окружающей среды.

NL

Dit Produkt draagt het Recycling-Symbool volgens de EU-norm 2002/96/EC en kan worden gerecycled. Deponeer hem bij een recycle-punt.

**ENGLISH** 

ENGLISH



## 1. What's in the box?



Ariva HDcombo high definition satellite and terrestrial receiver



User manual



Remote Control Unit




2x AAA batteries



HDMI cable


## 2. Connect - basic audio/video and dish connection

**HDMI** (Best quality, cable supplied)

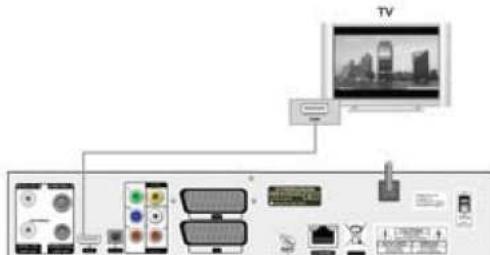

and

**Satellite Dish** (LNB, cable not supplied)

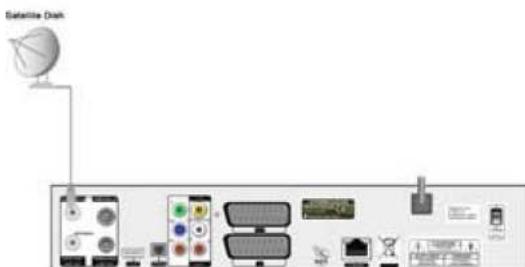


# Quick Start Guide

ENGLISH

and

Aerial antenna (terrestrial antenna not supplied, cable not supplied)

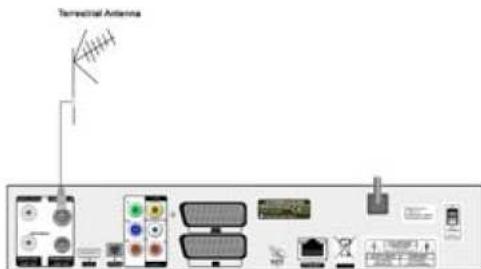


## 3. Setup

- ① Press to turn on.
- ② Use keys to select a language option in the menu and press **OK** to confirm.
- ③ The receiver is delivered with pre-programmed TV channels and can be used immediately. You can search more channels by using Installation > Satellite Start Search or Installation > Satellite TP Setup menu or Installation > Terrestrial Search menu.

and

CAM and smartcard (optional, not supplied)

- ① Insert CAM module , if required.
- ② Insert smartcard to CAM module or smart card interface, if required.

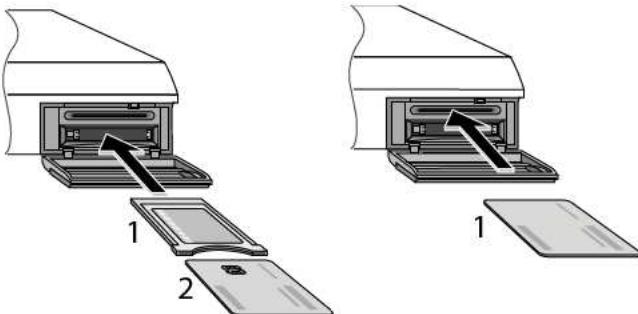

### CAUTION!

Refer to the user manual for more information.

---

## Introduction

- 1 Safety Information
- 1 User manual
- 2 Symbols used on the receiver
- 2 Software upgrade

---

## General Information

- 3 General information
- 3 1. Main Features
- 3 2. Unpacking
- 3 3. General Operation of STB

---

## Functional Overview

- 4 Remote Control Unit (RCU640)
- 5 Front and Rear Panels

---

## Connections

- 6 Connection Diagram
- 6 1. Connecting to Satellite Dish
- 6 2. Connecting to Terrestrial (aerial) antenna
- 6 3. Connecting to TV
- 8 4. To make the audio connection:
- 8 5. To make connection to another STB or VCR/DVR recorder:
- 9 6. Connecting to dishes using DiSEqC Mode
- 10 7. Connecting to Dish using USALS Mode

---

## Menu Options

- 11 Main menu
- 12 Edit Channel menu
- 12 1. Channel Edit
- 12 1.1 Rename Channel
- 12 1.2 Delete Channel
- 13 1.3 Move Channel
- 13 1.4 Lock Channel
- 13 2. Favorite Edit
- 14 Installation menu
- 14 1. Satellite Start Search
- 14 1.1 Sattelite
- 14 1.2 Antenna Config
- 14 1.3 DiSEqC
- 15 1.4 Positioner
- 15 1.4.1 DiSEqC1.2
- 15 1.4.2 USALS
- 16 1.5 Satellite Search
- 16 2. Satellite TP Setup
- 16 3. Terrestrial Search
- 17 Settings menu
- 17 1 Language
- 17 2 Parental Control

17 3 Local Time Setting

18 4 Timer Setting

18 5 A/V Setting

18 6 Advance Settings

18 7 System Information

18 8 Factory Default

19 Interfaces menu

19 1 Common Interface

19 2 Smart Card

20 3 USB Device

20 3.1 Firmware Upgrade

21 3.2 Save and restore user channel list

22 3.3 Update embeded channel list

23 PVR menu

23 1 PVR File List

23 2 Recording info

24 3 Schedule List

24 4 PVR Setting

25 5 USB Uninstalation

26 6 HDD Format

---

## Daily Usage

- 27 General Viewing Function
- 27 1 Watching television
- 27 2 Listening radio
- 28 3 Viewing program information
- 28 4 Selecting audio tracks
- 28 5 Selecting subtitle tracks
- 29 6 Viewing teletext
- 29 7 Viewing EPG (Electronic Program Guide)
- 29 8 Watching multifeed program
- 30 9 Pausing live television (Using time shift function)
- 30 10 Manual recording
- 31 11 Scheduling recordings using the EPG
- 31 12 Playing recordings

---

## RCU640

- 32 Setup TV via brand name code
- 32 Setup TV via auto search
- 33 Setup TV via manual search
- 33 Display TV Code
- 33 Reset / delete function
- 34 TV brand codes

---

## Troubleshooting

---

## Specification

---

## Glossary

ENGLISH

## Safety Information

- Please observe all warnings and instructions on the equipment and contained in these operating instructions. You must install the dish with correct direction and angle.
- Please carefully read this user's manual before using the receiver.
- To avoid electric-shock hazards, do not open the cabinet, refer servicing to qualified personnel only. If cabinet is opened warranty will be invalid.
- Please switch off completely the receiver during thunder, during abnormal phenomenon, before cleaning it and in case it remains out of service for a long period.
- Do not expose the receiver under the sunlight. And keep it away from the heat source or humid environments. Do not block ventilation holes of the receiver so that air can circulate freely.
- Please place the receiver in horizontal and stable conditions, keeping it away from vibrating.
- If device is moved from warmer place to a colder one some problem might occur. Please switch off the receiver and turn it on after 1 or 2 hours.
- Keep the receiver away from flower vases, tubs, sinks, etc., in order to avoid damaging the equipment. Do not touch power supply with wet hands.
- Don't put any objects on the device.
- Be sure to turn the receiver off and disconnect the AC power cord before cleaning the receiver surface. If the surface is dirty, wipe clean with a cloth which has been dipped in a weak soap/and/water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Do not connect cables while power is plugged.
- Do not use damaged cables for connections: you could cause fires.
- Please switch off completely the receiver while making all connections.
- The product purchased is a sophisticated electronic device which is not suitable for children under 18 years.
- We do not assume responsibility for damages caused to people or object, deriving from use of the device made by people under 18 years.

## User manual

Ferguson has used all the available means to ensure the latest information regarding its products. Ferguson does not give a warranty regarding the contents of this User Manual and waives any implied warranties regarding market value or fitness for specific purposes. The information contained herein provide guidelines allowing the operation and maintenance of the receiver.

Ferguson reserves the right to make changes, corrections or to translate the User Manual without giving prior notice of such changes. Therefore, it is recommended that users visit our website regularly to receive the latest information.

# Introduction

## Symbols used on the receiver

### The Digital Video Broadcasting logo

This logo tells you that this receiver is compliant with the DVB standards.

### The caution risk of electrical shock - do not open symbol

This symbol tells you that you are not allowed to open the receiver. Only authorized (service) technicians are allowed to open the box.

### The CE mark

This mark tells you that the receiver is following the provisions of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to the electromagnetic compatibility and the provisions of Council Directive 73/23/EEC and 93/68/EEC on the approximation of the laws of the Member States relating to low voltage and electrical safety.

### The double insulation symbol

This symbol tells you that the receiver is electrically safe within the normal use of the receiver as stated in the safety chapter.

### The RoHS mark

This mark tells you that the receiver is following The Directive on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment 2002/95/EC (commonly referred to as the Restriction of Hazardous Substances Directive or RoHS)

## Software upgrade

Ferguson has used all the available means to deliver to its users software updates guaranteeing the best possible parameters of the satellite television receivers. Ferguson reserves the right to make corrections, changes or modifications of the software used in the receiver on any basis whatsoever and without prior notice. The current version of the software is available on the following website <http://www.ferguson-digital.eu>

## General information

This digital satellite and terrestrial HD receiver is a highly cost-effective digital satellite and terrestrial receiver integrated. It provides 8000 channels storage with fast searching and inter-channel switching capability. The receiver is definitely one of the best choices to deliver your digital life.

## 1. Main Features

- For high definition TV (up to 1920x1080)
- High Definition OSD
- USB PVR function (manual recording, scheduled recording, recording from EPG, TimeShift function)
- internal scaler - upscaling standard definition channels up to 1920x1080
- Up to 8000 Channels TV & Radio Programmable
- 2 Common Interface slots in order to support CAM modules
- Smart card interface for pay TV
- Receive satellite and terrestrial channels
- Up to 100 Satellites Programmable
- Digital Audio Stream through optical S/PDIF
- Component (YPbPr) output
- HDMI - 1080i, 720p, 576p and 576i resolution
- USB 2.0 port
- Advanced Electronic Program Guide (EPG)
- Supports Timers
- Supports Teletext and Subtitles
- Multi Language OSD Menu
- Quick search function
- Separate TV/Radio List & Favourite Group List
- Channel search in automatic and manual way
- DiSEqC1.0 and 1.2, USALS Control Compatible

- Channel list and software update through USB port.
- Audio files playback
- Photo viewer

## 2. Unpacking

Unpack the receiver and check to make sure that all of the following items are included in the packaging.

- 1x Digital Receiver
- 1x HDMI cable
- 1x Remote Control Unit (RCU)
- 2x AAA batteries
- 1x User's Guide

## 3. General Operation of STB

Throughout this manual you will notice that the everyday operation of your STB is based on a series of user friendly on screen display and menus. These menus will help you get the most from your STB, guiding you through installation, channel organizing, viewing and many other functions.

All functions can be carried out using the buttons on the RCU, and some of the functions can also be carried out using the buttons on the front panel.

Please be aware that new software may change the functionality of the receiver. Should you experience any difficulties with the operation of your unit, please consult the relevant section of this manual, including the Problem Shooting, or alternatively call your dealer or a customer service adviser.

### NOTE:

Please be aware that new software may change the functionality of the receiver. The photo and the function explanation involved in this specification is for reference only. If there is any mistake, please refer to the entity.

# Functional Overview


## Remote Control Unit (RCU640)

Due to standardization fact most of Ferguson units is using the same remote control unit RCU640. That is why NOT all keys are being used by this STB model!! RCU640 4 in 1 universal remote control is suitable for all TV sets (TV), Ferguson digital satellite receivers (STB), Ferguson amplituner AV-770 (AMP), Ferguson DVD players (DVD). The universal remote control can execute almost all basic TV device functions. The "TV" key is used to program the TV level and to select it after programming. Per default, the TV level is not programmed. The levels for STB, AMP and DVD are not programmable and can be selected by a short press of the corresponding key. Red symbols on RCU applies to DVD or AMP functions.




- POWER** - Turns the device on or switches it to standby mode
- MUTE** - Turn on/off sound
- STB** - Selects Ferguson satellite receiver (STB)
- TV** - Selects or program TV
- AMP** - Selects Ferguson amplituner
- DVD** - Selects Ferguson DVD or Blu-ray player
  
- Alphanumeric keypad 0-9** - Selects numbered items in a menu
- BACK** - Returns to the previously viewed channel
- EPG** - Displays EPG (Electronic Program Guide)
  
- MENU** - Displays the menu on the screen
- ▲ PG UP** - To move up faster on any list
- OPT** - Used in submenus (E.g. in EPG for setting up timer events)
- ◀ ▶ ▲ ▼** - Cursor buttons for moving left, right, up, down.
- OK** - Shows the channel list or selects an item on the menu
- USB/PVR** - Shows USB menu
- ▼ PG DOWN** - To move down faster on any list
- FAV** - Displays the favorite channel list
  
- VOL + -** - Increase / decrease the volume
- EXIT** - Returns to the previous menu and the screen
- INFO** - Displays the program information bar (InfoBar)
- CH + -** - Turns to the next or previous channel
  
- TEXT (RED)** - Shows the TELETEXT on the screen if the TV can be available
- AUDIO (GREEN)** - Selects the audio track for the current channel if applicable.
- SUBTITLE (YELLOW)** - Selects the subtitle language for the current channel if applicable.
- FIND (BLUE)** - Quick Find channel function
- EDIT(WHITE)** - You can edit the current channel information
- TV/STB** - Change SCART loop functionality.
- FORMAT** - Selects various video resolution
- PIP** - Not used in this model
- REW** - Starts reverse playback. Subsequent presses increase the rewind speed.
- PLAY** - Starts playback
- PAUSE** - Pauses live television or playback of a recorded program
- FF** - Starts fast motion playback. Subsequent presses increase the playback speed.
- STOP** - Stops playback or recording
- SAT** - Changes the satellite/terrestrial on the channel list
- TV/RADIO** - Switches between TV and Radio mode
- REC** - Activates manual recording

## Front and Rear panels

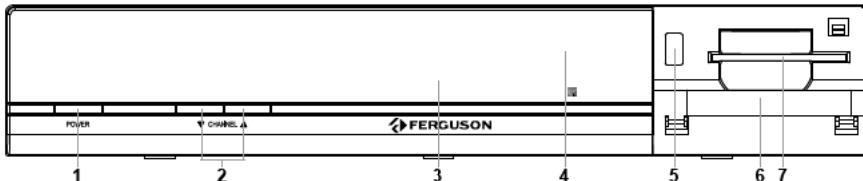

- ① **POWER** - Turns the receiver on or switches it to standby mode
- ② **▲CHANNEL ▼** - Turns to the next or previous channel; Cursor buttons for moving up, down
- ③ **VFD display**
- ④ **IR Sensor**
- ⑤ **USB port** - for firmware update, data transfer and PVR function
- ⑥ **2 Common Interface slots**
- ⑦ **Smard card interface for payTV**

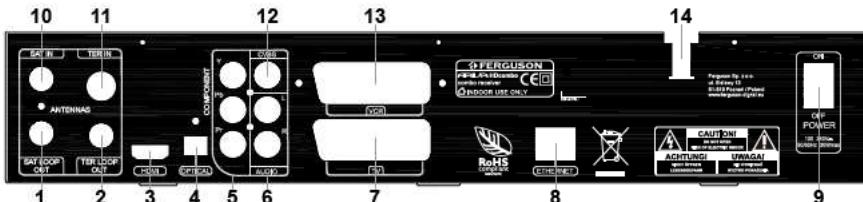

- ⑧ **Satellite Loop Out** - connect to another satellite receiver if required
- ⑨ **Terrestrial Loop Out** - connect to another terrestrial receiver if required
- ⑩ **HDMI** - Audio and video output socket for the high definition television set
- ⑪ **OPTICAL (Digital Audio Out)** - connect to optical audio input of an amplifier
- ⑫ **Y Pb Pr (Component Video Out)** - connect to Y, Pb and Pr input of a TV
- ⑬ **Stereo Audio Out** - connect to audio left and right input of a stereo system
- ⑭ **SCART TV** - Audio and video output socket for the legacy standard definition television set
- ⑮ **Ethernet** - RJ-45 connector for future use (data transfer)
- ⑯ **Power** - power switch
- ⑰ **Satellite In** - connect the coaxial cable from the LNB
- ⑱ **Terrestrial In** - connect the coaxial cable from the aerial antena
- ⑲ **CVBS** - provides a composite video output to standard definition TV or other equipments.
- ⑳ **SCART VCR** - Audio and video output socket for the standard definition recorder
- ㉑ **Main (AC Power Cord)** - connect to a standard AC outlet

# Connections

## Connection Diagram

This section explains the installation of the receiver. Refer to the manuals supplied with the equipment for the installation of outdoor equipment such as the dish antenna. When adding new equipment, be sure to refer to the related parts of the manual for the installation.

### 1. Connecting to Satellite Dish



Connect satellite antenna cable directly to the SATELLITE IN socket of the receiver.

### 2. Connecting to Terrestrial (aerial) antenna



Connect terrestrial (aerial) antenna cable directly to the TERRESTRIAL IN socket of the receiver.


### 3. Connecting to TV

According to your TV type, please connect Receiver with:




- **HDMI** If you have a high definition television set you should use a HDMI cable for best results. Plug one end of the cable into the HDMI socket on the digital receiver, and plug the other end into the matching socket on your television. In this case, you do not have to make audio connection because the HDMI connector can output stereo audio or Dolby digital audio.

or

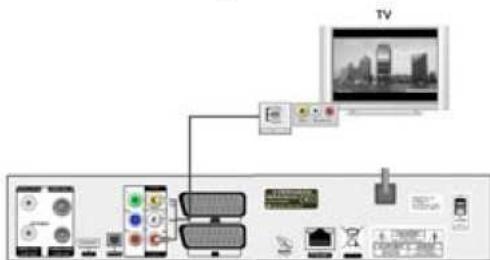

- **CVBS** **RCA** **cable**. You need to obtain a composite video cable (RCA cable) to use the composite video connector. Plug one end of the cable into the VIDEO (yellow) socket on the digital receiver, and plug the other end into the matching socket on your television.

or

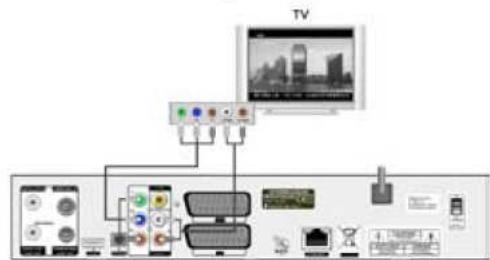

- **Component Y Pb Pr** **RCA** **cables**. You need to obtain a component video cable (3x RCA cable) to use the component video connector.


or




- **SCART** **cable**. You need to obtain a SCART (Euro connector) video and audio cable to use the component video connector. In this case, you do not have to make audio connection because the SCART connector can output stereo audio.

# Connections

## 4. To make the audio connection:

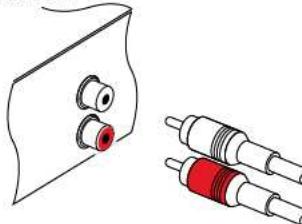


You need to obtain an audio cable (2x RCA cable) to connect the audio connectors. Plug one end of the cable into the AUDIO L (white) and AUDIO R (red) sockets on the digital receiver, and plug the other end into the matching sockets on your television or audio system.

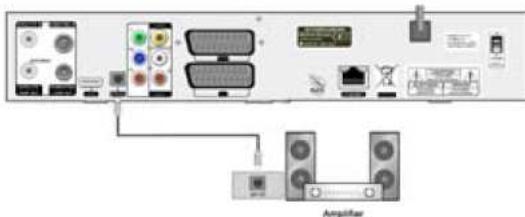

To enjoy Dolby digital audio, your television or audio system must be able to decode Dolby Digital audio, and you need to obtain a S/PDIF cable. Plug one end of the cable into the OPTICAL socket on the digital receiver, and plug the other end into the matching socket on your audio system.

## 5. To make connection to another STB or VCR/DVR recorder:

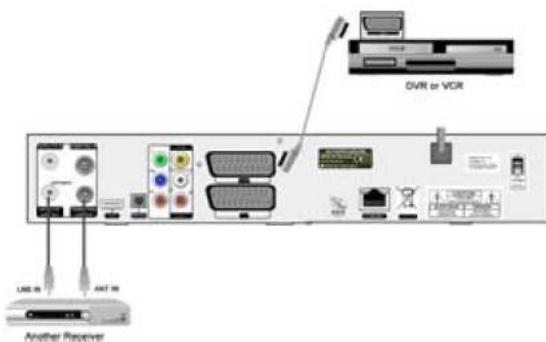

## 6. Connecting to dishes using DiSEqC Mode

In order to connect external equipment including a satellite dish and converter, use the installation instructions or assistance from expert - installer!



The precise setting antenna is the basis for good reception. Even the best antenna, which is ill-adjusted will cause problems with quality. Even small mistakes can prevent the receipt or very worsen its quality. Before the installation, make sure whether the place lends itself to that. The competent direction can be pre-determined by comparing with other antennas. Immediately before the antenna can not be any obstacles cover seeking to signal the dish! When you are choosing the best place for the antenna, to attach and it initially set, it still must be carefully adjusted. Each antenna is enabling regulatory adjustment screws in vertical position and level.

In digital receivers regulation is difficult. Settings can no be done base on picture, because it appears with delay. Also available indicators in the menu settings receiver typically operate with a delay, so the regulation can take a long time and be very inaccurate. For the antenna setting is necessary some meter antenna signal. Meter turns on a cable television converter between a receiver. We will confirm the presence of switch voltage converter with a tuner, and will show the size of the signal to satellites encountered. We invite you to benefit from expert assistance - installer!



If you want to use a DiSEqC switch for more than one satellite, connect DiSEqC switch OUT to LNB IN connector of the receiver.

You can use Toneburst switch or DiSEqC 1.0 / 1.1 / 1.2 switch.


# Connections

## 7. Connecting to Dish using USALS Mode

Proper work of Ferguson receiver ensures motorized system by USALS company Stab. To connect the installation of the dish with motorized system USALS, connect the output of USALS to LNB IN on rear panel of Ferguson receiver. The motor is what actually moves the antenna between the various satellite positions and is installed in between the antenna mast and the antenna mount. It is designed such that the axis of rotation is aligned with the North Star. This type of mount is often referred to as a Polar Mount. As a result, azimuth and elevation do not have to be adjusted individually. Instead, the antenna rotates on only one axis. The antenna motor is installed on the already existing vertical mast. The local latitude position of the location is then setup on the motor's scale thus aligning the axis of rotation in the correct position. Similar to a fixed antenna installation, the elevation scale on the antenna mount must be set for a satellite as close to south as possible. In the southern hemisphere you would be looking for a northern-most satellite. The selected satellite should lie within 5° of your southern-most position; the southern-most position being equal to your local longitude. For example, if your local longitude is 73° west, then the satellite you select should be located within +/- 5° of 73° west, or within the range 68° to 78° west.

USALS greatly simplifies the antenna setup. Ferguson receiver simply asks you for your local geographical coordinates and calculates the satellite positions on its own using a complex mathematical formula. The receiver then drives the motor directly to the selected satellite position. Once you have a signal, you need only finely adjust the antenna mount and horizontal position (on the mast itself) for maximum signal. If the initial southern setting was slightly off, it would now be corrected. Once the first satellite is perfectly set, all the other satellites in the arc would also be automatically set as soon as the orbital position of these additional satellites is entered into the receiver.

Without USALS, the alignment of the antenna system is somewhat more difficult. DiSEqC 1.2 drives the antenna to the selected satellite position in almost the same way. But since the local geographical data is missing, the motor drives to a satellite position based on the prime meridian and the equator. Therefore, when aligning the motor for the first time – and then again later on with all the other satellite positions – alignment with the actual satellite position has to be achieved with the motor commands "move east/west". Because of these difficulties, manufacturers of these motors make available helpful software on their web sites that enable you to easily calculate the true position of a satellite.

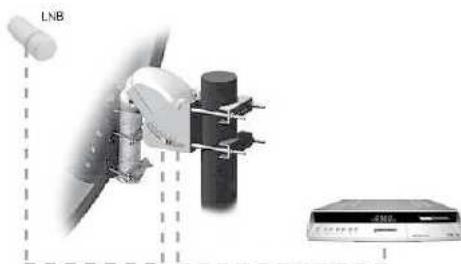

If you want to use a USALS motorized antenna, connect antenna OUT connector to LNB IN connector of the receiver.

The user interface has various ways to navigate through the menus and functions. Some of the keys on the remote control unit give direct access to functions. The most important keys are identified as EPG, colored keys, MENU and OK. Other keys are multi-functional which means that their function changes dependent of the mode that you are in.

Unless otherwise specified; this note explains the way you can navigate through the pages of the user menu.

1. Use the **▲▼** keys to move the cursor up or down from one line to another line.
2. Use the **◀▶** keys to move the cursor left or right from one line to another line.
3. Use the **OK** key to enter the sub-menu.
4. Use the **EXIT** key to leave the menu and return to the view mode.
5. In a sub-menu:
  - use the **◀▶** keys to select one from the preprogrammed options in the sub-menu.
  - use the **OK** key to confirm the selection;
  - the orange cursor indicates the active selection

---

## Main menu

This receiver setup is carried out via the TV, enabling you to customise the receiver to suit your particular requirement.

Press **MENU** key on the RCU to display the following menu on the non-menu mode.

The menu consists of 5 sub-menus such as the following:



- Edit Channel
- Installation
- Settings
- Interfaces
- PVR

# Menu Options

---

## Edit Channel menu



- Channel Edit
- Favorite Edit

### 1. Channel Edit

If you want to edit your channel list press **OK** button on this menu. You will be prompted for password (Default password is "0000").

#### 1.1 Rename Channel



To rename a channel:

1. Select the desired channel.
2. Press **RED** key.
3. In the keypad dialog window type new name  
**GREEN** key can be used to cancel a letter on the caption bar at a time.  
**RED** key is used to cancel all letters  
**BLUE** key is used to place a blank  
**◀▶▲▼** keys are used to move the cursor.
4. Press **EXIT** to exit.

#### 1.2 Delete Channel



To delete a service:

1. Firstly press **GREEN** key on the RCU
2. Secondly select the channel you want to delete and press **OK** to confirm.
3. After pressing **OK**, a "X" mark appears on the right side of the selected service name. That means this service is going to be deleted.  
Press **GREEN** key again to cancel the deleting mark.
4. Press **EXIT** to exit.

#### Warning:

If you delete a service from the current activated list, it is also deleted from all lists.

### 1.3 Move Channel



To move the channel

1. Firstly select the desired channel you want to move.
  2. Secondly press **YELLOW** key on the RCU and move the selected channel to the position you want to place
  4. Finally press **OK** key to confirm.

## 1.4 Lock Channel



To lock a channel, please follow the instructions shown as below.

1. Select the desired channel you want to lock.
  2. After pressing **BLUE** key, a lock mark appears in the selected channel name. It means that this service is locked.

If somebody want to play this channel, the correct password is required.

## 2. Favorite Edit



If you want to add several TV programs to Favorite. When you enter the Favorite Edit menu, default favorite list will be shown on the screen as Movies. By pressing **BLUE** key on the RCU, you can access the next favorite list.

In left program list, select the program that you want to add and press **OK** key. The selected program is shown in the right FAV list. In the same way, you can add more programs to right FAV list.

If you want to cancel one program in FAV list: move cursor to right column and select desired one, and you will delete this item from FAV list by pressing **GREEN** key on it.

**RED** key is used to rename the favorite group.

# Menu Options

## Installation menu




- Satellite start search
- Satellite TP setup
- Terrestrial search

When you enter this menu you will be prompted for password (Default password is "0000").

### 1. Satellite start search

#### 1.1 Sattelite

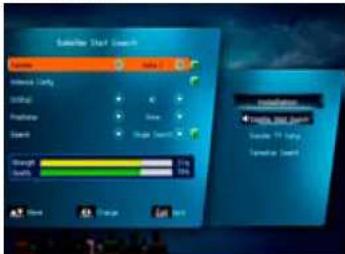

Select the desired satellite by using **◀▶** keys. You can also press **OK** key to display a draw-down list, the pre-programmed satellites is list here. You can select one or more satellites by using **▲▼** keys, and press **OK** to confirm. The selected satellites will be marked with the checkmark symbol.

#### 1.2 Antenna Config



**Satellite:** Select the desired satellite.

**LNBType:** Select the desired option among WideBand, User, Standard and Universal1.

**High Frequency:** The settings can be altered using the numeric buttons.

**Low Frequency:** The settings can be altered using the numeric keys.

**LNB Power:** If your receiver is connected to the LNB, select YES. But if your STB is connected to another receiver through Loop Through support, you should check which receiver is connected directly to the LNB. In case the other receiver is directly connected to the LNB, then select OFF.

**22kHz :** Select the switch with which you want to configure the antenna.

#### 1.3 DiSEqC

The individual satellite can be allocated directly to a DiSEqC position. Please select the proper protocol version (none, DiSEqC 1.0, DiSEqC 1.1 or Unicable) and coresponding settings (port number).

## 1.4 Positioner

The settings are for the motor control of the satellite antenna. These only apply to an antenna with corresponding function.

### Caution:

Leave the setting-up of the motor control to properly-trained personnel. Otherwise the satellite equipment may not function correctly.

### 1.4.1 DiSEqC1.2



**Satellite:** Make a choice from the pre-programmed satellites by using **◀▶** keys.

**TP:** Select the desired TP under the current satellite.

**Limit Setup:** Use this item to set the East and West limits of the motor. This should be used to prevent your dish from hitting anything that may be obstructing the path of the dish. Highlight this item and press **◀▶** keys to move your motor east or west until the motor is at the position you wish to use as your East Limit.

**Warning:** If this item is disabled, your motor will be able to move beyond any limits. Please take care in case there is anything obstructing the path of your dish.

**Movement :** Please select this item and then keep pressing **◀** or **▶** key on the RCU to move your antenna east or west. Use the signal strength and signal quality bars at the bottom of the screen to judge the best position of the antenna.

**Nudge:** Press **▶** to nudge the antenna until it is turned into the desired direction.

**Recalculation:** It is used to shift the position for all the satellites. Recalculation by using **OK** key makes above movement function.

**Go to Reference :** A starting point for the satellite search function can be selected by pressing the **OK** key.

## 1.4.2 USALS



**Satellite:** Make a choice from the pre-programmed satellites by using **◀▶** keys.

**TP:** Select the desired TP under the current satellite.

**Local Longitude:** Enter here the longitude of the local satellite antenna.

**Local Latitude:** Enter here the latitude of the local satellite antenna.

**Dish Position:** Set the position of satellite antenna.

**Go to Reference:** Select YES or NO.

**Go to :** Press **OK** to toward the satellite.

# Menu Options

## 1.5 Satellite Search



**current satelite:** The function is used to search channels in one satellite, which has been selected.  
**all satelite:** The function is used to search channels in all satellites, which has been selected.

Press **OK** key to enter the Search window. First select search mode by using arrow keys, and press **OK** to search channels for TV and Radio.

## 2. Satellite TP setup



In the menu, firstly select a desired satellite and TP, then you can set the frequency, symbol rate and polarity for the current TP.

**Transmission:** DVB-S, DVB-S2

**FEC:** Auto, 1/2, 2/3, 3/4, 5/6, 7/8, 8/9, 3/5 4/5, 9/10, 6/7.

If you want to delete the current TP, press **Green** key and select YES.

Press **Yellow** key to add a new TP.

After setting finished, press **Red** key to search channel under the current TP.

## 3. Terrestrial search



**Auto search:** The function is used to search channels on all multiplexes

**Manual search:** The function is used to search channels on selected multiplex

**MUX number:** Select the desired multiplex for manual search option

**Frequency MHz:** Frequency of currently selected multiplex

**Bandwidth:** Bandwidth of currently selected multiplex

Press **OK** key (on Auto Search or Manual Search menu item) to enter the Search window. First select search mode by using arrow keys, and press **OK** to search channels for TV and Radio.

**Terrestrial Setting:** Advanced settings

## Settings menu



- Language
- Parental Control
- Local Time Setting
- Timer Setting
- A/V Setting
- Advance Settings
- System Information
- Factory Default

### 1 Language



Select the desired language for menu.

### 2 Parental Control

You will be prompted for password (Default password is "0000").



**Channel Lock:** Select YES or NO. If "YES" is selected, you must input the correct password before playing the locked channel.

**Menu Lock:** Select YES or NO. If "YES" is selected, you must input the correct password before entering the menu.

**Change Password:** The password can be changed and any four-digit number can be set as a personal password. Select the menu item "Change Password" and press OK button. Enter the new password using the numeric buttons, then press the new password again to confirm. The new password has now been accepted.

### 3 Local Time Setting



**GMT Usage:** Press ▲▼ key to select YES or NO.

**GMT Offset:** You can set the time zone in where you live.

**Summer Time:** " YES" sets summer time, "NO" sets standard mean time.

# Menu Options

## 4 Timer Setting

The receiver can be programmed so that at a set time it switches over to a specified channel. Up to ten timer functions are possible. This function can be used, for example, to record a programme on a DVD recorder.



**Timer Number:** Select the number of the timer from 1 to 10.

**Enable:** Select Yes or No. If "No" is selected, the following items can not be used.

**Execute:** Select the desired timer type between one time and daily.

**Event Type:** Select the desired type between turn ON and turn OFF.

**Channel Number:** Input the number of the channel.

**Channel Name:** It is changed according on the channel number.

**Date:** Enter the value using the numeric keys.

**Hour:** Enter the value using the numeric keys.

## 5 A/V Setting



**Resolution:** 576p/720p 50Hz/720p 60Hz/1080i 50Hz/1080i 60Hz

**Match method:** 4:3 Ignore, 16:9 LetterBox, 16:9 PanScan, 16:9 Combined, 16:9 Ignore, 4:3 LetterBox, 4:3 PanScan, 4:3 Combined.

**TV mode:** Select the one that fits your television.

**TV aspect ratio:** Select the one that fits your television.

## 6 Advance Settings



**VFD text display mode:** Select preferred mode: Channel name/ChannelNum + Name.

**VFD Scroll Mode:** Select preferred mode: Always/One Time/No Scroll

**VFD Brightness Set:** Select preferred brightness level.

**InfoBar Time Out Set:** Select delay time to hide InfoBar.

**Teletext background:** turn on or off background under teletext pages and teletext subtitles.

**CAM messages:** turn on or off displaying CAM popup messages.

## 7 System Information

You can check the information about model name, firmware version, hardware version.

## 8 Factory Default

In this menu, you can make all data and configurations as factory default status.

You will be prompted for password (Default password is "0000").

**Warning:** All stored data, channel list, settings will be erased and returned to factory default.

## Interfaces menu




- Common Interface
- USB device
- Smart Card

### 1 Common Interface

The Digital Receiver makes you enjoy various scrambled channels encrypted by smartcard.




To be able to receive scrambled digital satellite channels you need a Smartcard and a Common Interface CA (Conditional Access) module from the Service Provider of your choice. The Smartcard and the CA module may also provide access to special menus not described in this manual. If so, please follow the instructions from the Service Provider. Only free to air channels are available without the Smartcard and CA Module.

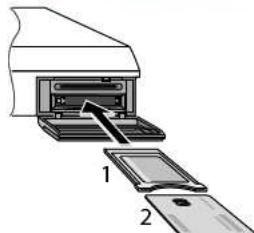

Insert the CA Module in the slot of the receiver and insert the Smartcard to the CA module. This will give you access to scrambled channels.

### 2 Smart Card


The Digital Receiver makes you enjoy various scrambled channels encrypted by smartcard.

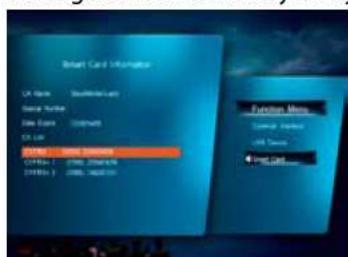

To be able to receive scrambled digital satellite channels you need a Smartcard from the Service Provider of your choice. Smart Card menu item may provide information about smart card and your subscription (not described in this manual, depends on smart card type). If so, please follow the instructions from the Service Provider. Only free to air channels are available without the Smartcard.

**Note:** Not all smart card types are supported by receiver. If your smart card does not work in smart card interface please use proper CA Module.

# Menu Options

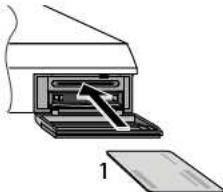

Insert the supported smart card chip side down) to the smart card interface. This will give you access to scrambled channels.

## 3 USB device




**Note:** Make sure that the USB-disc is plugged in the USB port of STB before your operation. In this menu, move cursor to the desired item and press **OK** to enjoy.

You can enjoy music or audio books with the Ferguson receiver. To play supported files enter Audio files menu item, select desired file and press **OK** button.

You can view photos with the Ferguson receiver. To view supported files enter Photos menu item, select desired file and press **OK** button.


### 3.1 Firmware Upgrade

**Warning:** Do not turn off the power during the update. This risks lasting damage to equipment.

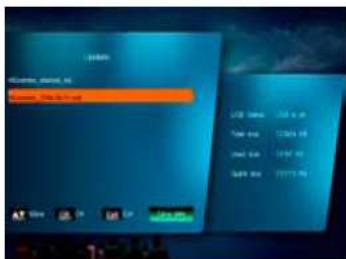

**Note:** It is not possible to load lower version firmware onto higher firmware version.

- 1 Format your USB disk to FAT32 file system.
- 2 Download firmware from DOWNLOAD section of <http://www.ferguson-digital.eu/>.
- 3 Extract \*.usb file from zip archive and copy it to USB disk.
- 4 Power on receiver.
- 5 Insert USB disk to receiver's USB port.
- 6 Press USB button on RCU.
- 7 Select "Update" menu item.
- 8 Select proper firmware file and press OK.
- 9 Press RED button to confirm firmware upgrade.
- 10 Receiver will upgrade firmware by itself. The software upgrading takes a few minutes to be complete. Receiver will display the progress of updating. When the software is successfully upgraded, the receiver restart by itself.

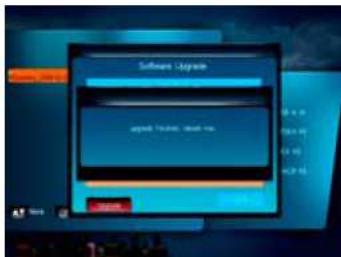

**Note:** Remember that after upgrade receiver can be automatically set to factory default settings.


**Note:** The software version can be checked on TV screen.

- 1 On remote control, press "MENU" button.
- 2 Go to "Settings" menu.
- 3 Select "System information" menu item.
- 4 Check "SW Version" (second line).

### 3.2 Save and restore user channel list

**Note:** Only this kind of channel list are available on Ferguson website. Channel list file has 512KiB.

#### Save channel list

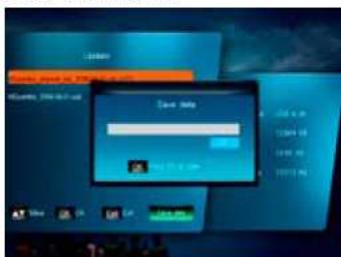

- 1 Power on Ferguson receiver.
- 2 Insert USB disk to receiver's USB port.
3. Press **USB** button on RCU, select "UPDATE" submenu
4. Press **GREEN** button
5. Press **OK** button to confirm
6. Channel list will be saved to "channel\_list\_data\_YYYY-MM-DD.usb" file

**Note:** This kind of channel list has 512KiB.

#### Restore user channel list




- 1 Power on Ferguson receiver.
- 2 Insert USB disk to receiver's USB port.
3. Press **USB** button on RCU, select "UPDATE" submenu
4. Select channel list file
5. Press **OK** button to confirm
6. Press **RED** button
7. Wait until Ferguson reboot itself

**Note:** Remember that your current channel list will be replaced with loaded one.

## Menu Options

### 3.3 Update embedded channel list

**Note:** Channel list file has 64KiB.

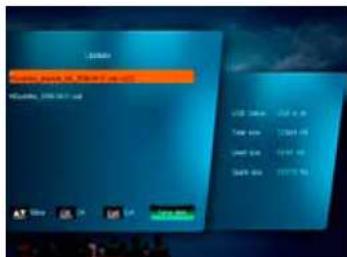

- 1 Power on Ferguson receiver.
  - 2 Insert USB disk to receiver's USB port.
  3. Press **USB** button on RCU, select "UPDATE" submenu
  4. select channel list file
  5. press **OK** button
  6. press **RED** button (now embeded channel list is replaced by new one)
  7. wait until Ferguson reboot itself
  8. after reboot language selection window will appear – select proper language
  9. restore factory defaults (now user channel list is replaced by new one)
  10. wait until Ferguson reboot itself
  11. after reboot language selection window will appear – select proper language

**Note:** Remember that your current channel list will be replaced with loaded one.

## PVR menu



- PVR File List
- Recording info
- Schedule List
- PVR Setting
- USB Uninstalation
- USB disc format

### 1 PVR File List

You can also get directly to this menu by pressing **USB/PVR** button and selecting PVR File List menu item.



**Note:** When a program is recorded, no additional contents such as multiple audio tracks or teletext are available.

The instructions on how to play a recording are as follows:

1. Put the highlight bar on a desired recording.
2. Press the **OK** button to start playback.
3. To stop playback, press the **STOP** button.

Press **RED** button to delete the selected file. The system will ask your confirmation when return the menu.

Press **YELLOW** button to rename the selected file.

### 2 Recording info

When there is recording, you can enter the Recording Info directly by pressing **REC** button on the RCU.



Recording Info displays current recording information such as: Mode, Valid Record Time, Past Time and Duration. There are two modes quick and schedule. Quick means manual recording (activated by REC button on RCU), and Schedule means scheduled earlier recording. If Quick is selected, the default duration is set to three hours.

Press **RED** button to stop recording, **GREEN** button is used to resume recording.

If duration is changed, press **YELLOW** key to save the new time.

# Menu Options

## 3 Schedule list

You can set a channel to be recorded at a specific time. Even if the Ferguson receiver is in standby mode, it will switch into operation mode and start recording at a specified time.



To input a timer recording, select the Schedule List menu; then the timer list will be displayed.

To add a new timer event, press the **GREEN** button, and a box like the left figure appears. Take the following steps:

1. Set the Schedule Type option to Record to make a recording
2. Set the Schedule Start Time and Schedule End Time options to a desired date and time
3. Select Schedule Mode. There are three timer modes:
  - Once means literally 'one time'.
  - Daily means literally 'every day'.
  - Weekly means 'one day every week'.
4. Set the channel which provides the program you want. Pressing the **OK** button displays a channels list, from which you can select your desired channel.

### NOTE:

1. The time when channel recording start-up and finished can not be the same. The maximal recording time can be 24 hours.
2. Can not record more than one channel simultaneously.

For a selected item, press **RED** key to delete the item and you can also press **BLUE** key to delete all the items. The system will ask your confirmation when exit the menu.

To modify a schedule item press **YELLOW** button.


## 4 PVR setting



**TimeShift mode:** You can enable or disable TimeShift function.

**Default record time:** default duration of manual recording Default 3 hours.

## 5 USB Uninstalation

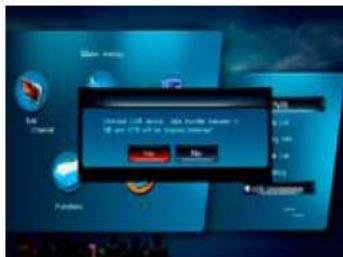

Before pull out the USB device from Ferguson receiver, please uninstall.

Select USB Uninstall item in PVR menu and press OK, a message will be display on the screen for your confirmation. After successful uninstallation, you could remove USB device from Ferguson receiver.




**NOTE:** USB device removed without uninstallation will be checked as soon as you connect device again. Disc checking may take up to couple of minutes.



# Menu Options

## 6 USB disc format

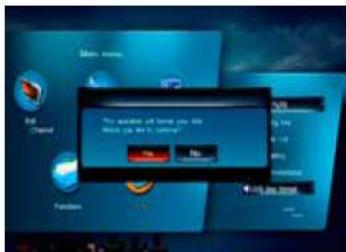

You can delete all contents stored in the hard disk drive by formatting it.

Select HDD Format item in the PVR menu. This operation will format your USB device (external hard disk, pendrive) to FAT32. Before format, the system will ask your confirmation. If you select Yes, formatting will start.

**CAUTION:** Formatting the hard disk will delete all files permanently.

**NOTE:** If a new hard disk drive is installed, it must be formatted because the file system of the Ferguson receiver (FAT32) is different from the personal computer (usually NTFS). You can neither record nor use TimeShift with an unformatted hard disk.



## General Viewing Function

## 1 Watching television

To change channels, press the **▲**, **▼** or **CH+/CH-** button. Pressing the **BACK** button switches to the previously viewed channel. In addition, you can switch to your desired channel by entering its channel number with the numeric buttons. You can also select a channel to watch in the channel list.



To view the channel list, press the **OK** button. A dollar sign (\$) may be marked on some entries, indicating pay channel. To watch pay channels, you need the subscription card.




You can select a channel to watch on a favourite list as well as on the channels list. To display the favourite lists, press the **FAV** button.



By pressing **Find** button, you can activate Quick Find function. Type whole channel name or starting characters to quickly find desired channel.


## 2 Listening radio

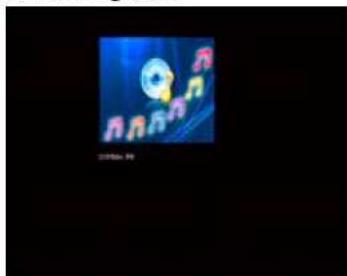

To switch between TV and radio channel lists press **TV/RADIO** button.

# Daily Usage


## 3 Viewing program information

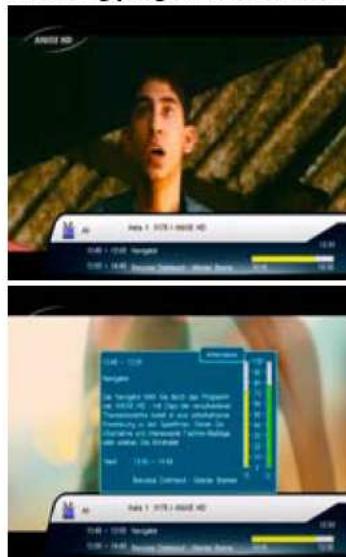

Pressing the **INFO** button displays the InfoBar box.

Pressing the **INFO** button once more displays detailed information about the current program. You can use **RIGHT** button to check detailed information about next program. To hide the InfoBar box, press the **EXIT** button.

## 4 Selecting audio tracks

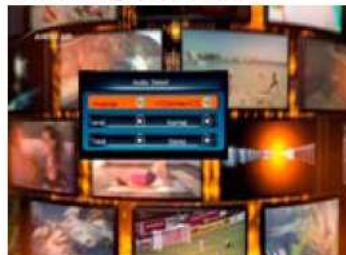

Some programs are provided with audio tracks in one or more languages. Pressing the **AUDIO (GREEN)** button displays available audio tracks. Once you select an audio track, it will be sounded.

## 5 Selecting subtitle tracks



Some programs are provided with subtitle tracks in one or more languages. Pressing the **SUB.T (YELLOW)** button displays available subtitle tracks. Once you select a subtitle track, it will be displayed. To turn off subtitle, press the **EXIT** button.

## 6 Viewing teletext



# Daily Usage

## 9 Pausing live television (Using TimeShift function)

**Note:** USB disk should support USB 2.0 with writing speed over 8 MiB/s for stable time shift function.



You can pause and resume a live television program, and even rewind and replay it. When you are watching a program and you miss something, you can rewind and replay it. Or when your attention is needed elsewhere, you can pause it and resume it a short time later without losing any of it.

When you do this, you are no longer watching the live program, instead you are watching a delayed presentation of it. This is called time shifted function. Then, you can skip commercials until you catch up to the live broadcast.

In order to use the time shift function, the TimeShift Mode (menu PVR > PVR Settings) must be set to ON. When enabled, the Ferguson receiver will keep as much as 1.8GiB recording buffer of current service by utilizing the connected USB storage. The buffer will reset each time you change to another service.

When TimeShift mode is enabled, the following operations are possible:

- To pause current program press **PAUSE** button.
- To resume paused program press **PLAY** button.
- To go back in time, press the **REW** button; to go forward, press the **FF** button. To change play speed press again **REW** or **FF** button.
- In **PAUSE**, **FF**, **REW** mode, press **PLAY** key to resume to normal play speed.
- To end time shift, press the **STOP** button. The live program will be presented.



## 10 Manual recording

**Note:** USB disk should support USB 2.0 with writing speed over 8 MiB/s for stable recording.



To manually record the program you are watching at present, press the **REC** button.

Pressing the **PAUSE** button will pause the live show and begin time shifting within the current recording even with the Time Shifting Mode disabled.

To stop recording, press the **STOP** button, Ferguson will ask you for confirmation.



It is possible to pause a recording. After a recording is started, pressing the **REC** button displays a menu like the left figure, in which you can set the recording duration, pause and resume.

**Note:** The default duration of manual recording is set to three hours.

While a recording is going on, you can watch another FTA service from the same transponder (frequency).

## 11 Scheduling recordings using the EPG (program guide)

**Note:** USB disk should support USB 2.0 with writing speed over 8 MiB/s for stable recording.



If the EPG (electronic program guide) is properly provided, you can make timer events on it. The instructions on how to make timer recordings using the EPG guide are as follows:

1. Press the **EPG** button to display the EPG.
2. Select a channel you want to record
3. Select a program you want to record
4. To make a timer event with recording, press **OPT**.
5. EPG Schedule menu will appear.
6. Adjust settings if needed and press OK.

## 12 Playing recordings

**Note:** USB disk should support USB 2.0 with writing speed over 8 MiB/s for stable playback.



Press **USB/PVR** button and select PVR File List menu item.

Press **PLAY** to start playback

Press the **REW** key to fast rewind, **FF** key to fast forward. The system support 2X, 4X, 8X, 16X and 32X.

Press **PAUSE** key to stop playback.

When in Pause, FF and REW mode, press **PLAY** to resume to normal mode

Press **STOP** to stop playing and exit to PVR File List menu.

During playback mode, press **PLAY** to display the playback process bar. It shows current playing file information including process, pass time, etc.

## Setup TV via brand name code

1. Switch on the TV for which you wish to use the remote control.
2. Find the code number of your TV brand in the code list (e.g. LG 0075; 0082; 0083; ...).
3. Press TV button for three seconds The POWER button on your remote control lights up, i.e. RCU640 is in set-up mode.
4. You now have to enter the 4-digit device code (e.g. 0075 for LG TV set). If an entry does not occur within 15 seconds, the set-up mode is automatically terminated.
5. The POWER button LED goes out if the remote control accepts the code.  
If the POWER button LED flashes twice the code is incorrect; and you need to start from step 2.  
If this occurs, re-enter the correct code from the list.
6. Check the function of the buttons on your remote control. If the majority of the buttons on your new remote control do not function correctly, enter another 4-digit device code (e.g. 0082...) from the list under the same brand name. Repeat steps 3 to 6 until all the basic functions operate correctly. The TV is set up correctly as soon as you enter the correct code.

**NOTE:** Exit the set-up mode by pressing the TV button or OK button. The set-up mode is automatically terminated if a button is not pressed during a 15 second period.

**NOTE:** After entering the state of setup, ONLY the numeric keyboard, OK, POWER and TV button can work accordingly, the other buttons do not have response when you press them.

## Setup TV via auto search

If the set up via brand name and code was not successful or you were unable to find your brand name in the list, you can use the auto search function to find the correct TV code for your remote control.

1. Switch on the TV for which you wish to use the remote control.
2. Point the remote control at the TV. Press and hold down the the TV button for 3 seconds, (or just press TV button for three seconds). The POWER button should start to flash, i.e. the RCU640 is in Auto Search mode.
3. Press MUTE button and then release, the OFF signal is automatically transmitted from the remote control to the TV (code scan). As soon as the TV switches off, immediately press OK button or TV button to terminate Auto Search, now the POWER button LED light goes out.
4. Switch on the TV via the POWER button. Check whether the other buttons on your remote control function correctly. If none of the buttons function (i.e. the search was not be stopped at the correct time) or the majority of the buttons do not function correctly, restart the search (see steps 3 to 4) to find a suitable code. If the majority of the buttons function correctly, set up has been successful. Re-press the TV button to save the code and to terminate the set-up mode.

**NOTE:** After entering the state of setup, ONLY the MUTE, OK, LEFT, RIGHT and TV button can work accordingly, the other buttons did not have response when you press them.

**NOTE:** Entering the auto searching mode, it will search backward from the current code backwards ,but you can press LEFT (forward) or RIGHT (backward) to change Search direction.

**NOTE:** After all codes have been gone through, The POWER button will flash three times and go off. The RCU640 exit from auto search automatically.

## Setup TV via manual search

1. Switch on the TV for which you wish to use the remote control.
2. Point the remote control at the TV. Press and hold down the TV button. (or just press TV button for three seconds). Then release the button.
3. The POWER button lights up and the remote control is in set-up mode.
4. Press the POWER button approx. every 1.5 seconds. The device should start to flash, i.e. the device is in Manual Search mode.
5. As soon as the TV switches off (or is reactive), press OK or TV button to save the codes and exit from Manual Search mode, now the POWER button light goes off.
6. Check whether the other buttons on the remote control function correctly. If the majority of the buttons do not function correctly, press the POWER button approx. every 1.5 seconds to initiate the reactive code (manual search is continued, see steps 4 to 5).

**NOTE:** The Manual Search is automatically terminated if no entry occurs during a 15 second period.

**NOTE:** After entering the state of setup, ONLY the POWER, OK, LEFT and RIGHT button, and TV button can work accordingly, the other buttons did not have response when you press them.

**NOTE:** Entering the manual searching mode, it will search backward from the current code backwards, but you can press LEFT (forward) or RIGHT (backward) to change Search direction

## Display TV Code

You can call up the TV code which you have set in your new remote control as follows:

1. Press and hold down the TV button simultaneously press number button 1 to display the thousands of the 4-digit code. Count how often the POWER button flashes. If the POWER button does not flash, the number is ZERO.
2. Press and hold down the TV button simultaneously press number button 2 to display the hundreds of the 4-digit code.
3. Press and hold down the TV button simultaneously press number button 3 to display the tens of the 4-digit code.
4. Press and hold down the TV button simultaneously press number button 4 to display the ones of the 4-digit code.

Example for code 0075:

1. Press TV and 1 LED flashes Zero times.
2. Press TV and 2 LED flashes Zero times.
3. Press TV and 3 LED flashes Seven times.
4. Press TV and 4 LED flashes Five times.

## Reset / delete function

1. Press TV button for three seconds the POWER button on your remote control lights up.
2. You now have to enter the 4-digit device code 9990.

All the set-up data and commands for TV in the remote control are deleted and the POWER button light goes off.

## TV brand codes

@DIKON	1551;1525	AOC	1540	BEKNTTEKNIK	0337;0207;1657	
A.R. SYSTEM	0237;0544;0322;0513;0540;0246	AQP	0096; 0103; 0157; 0295; 0327; 0335; 0549; 1450; 1491; 1649; 1652; 1692; 0351; 1702	BEKO	0141; 0207; 0227; 0230; 0336; 0496; 0540; 0513; 1435; 0557	
ACCENT	0322;0359;1637;0540;0131			BENNET	0540;0513	
ACCUPHASE	0540			BEST	0556	
ACEC	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	ARC EN CIEL	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	BESTAR	1657; 0114; 0415; 0359; 0540; 0336; 0513; 0455	
ACER	1363	ARCAM	0067	BIAZET	0513;0052	
ACTION	0359	ARCELIK	0141; 0230; 0557	BIFONIC	0067;0359	
ADMIRAL	0024;0080;0359;0428;0429;0222	ARDEM	0141; 0513; 0336; 0557	BIGSTON	0354;0359;0322	
ADYSON	0359;0329;0067;0505	ARGENTINA	0572; 1711; 0569	BINATONE	0067	
AEA	0540;0513	ARISTONA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	BLACK DIA-MOND	0513;0540	
AEG	0540;1423;0513	ARPHONE	0246; 0114; 0025; 0230; 0359; 0513	BLACK STRIP	1608	
AG	0557	ART-TECH	0359; 1638; 0424; 0513	BLACKSTAR	0262	
AGASHI	0359;0322;0111;0513	ARTHUR	0075; 0080; 0082; 0083; 0137; 0540; MARTIN	BLACKTRON	0262	
AGB	0242; 0095; 0119; 0229; 0094; 0090; 0092; 0051; 0052; 0513; 0181; 0055; 0025; 0024	AS-BERG	0131; 0077; 0302; 0374; 0513	BLACKWAY	0351;0262	
AGEF	0262; 0540; 0242; 0359; 0336; 0363; 1611; 0024; 0077; 0311	ASA	0136; 0066; 0222; 0390; 0282; 0513	BLAUPUNKT	0039; 0069; 0096; 0103; 0148; 0149; 0157; 0266; 0276; 0540; 0544; 0351	
AIKO	0262;0359;0067;1608;0513	ASORA	0322	BLAUSONIC	0067	
AIM	0540; 0329; 0539; 0354; 0237; 0513; 1302	ASTHON	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0547; 0196; 0607; 1317; 0336	BLOOM	0540; 0513; 0556; 1399; 1433; 1390; 1386	
AIOSTAY	0136	ASTRO	0237; 0230	BLUE SKY	0556; 057; 1423; 0501; 0097; 0513; 0540; 0549; 0065; 0141; 0262; 0467	
AIWA	1038;0581;0513	AUDIO SOUND	0067; 0322; 0262; 0230	BLUE STAR	0230	
AKAI	0067; 0070; 0374; 0103; 0111; 0143; 0162; 0262; 0290; 0296; 0298; 0337; 0345; 0354; 0359; 0361; 0375; 0415; 0431; 0222; 0151; 0549; 0556; 0558; 1243; 1311; 1314; 1396; 1423; 0540; 0513; 1652; 0230; 1684	ASUKA	0067; 0322; 0262; 0230	BOCA	0143; 0196; 0222; 0262; 0322; 0359; 0415; 0513; 1343; 1410; 1423; 0540; 1440; 1469; 1559; 1578; 1587; 1588; 1638; 1639; 1666; 1711	
AKI	1638;0513	ATAKI	0424	BONDSTEC	0125	
AKIBA	0540;0513;0262	ATLANTIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639;	BOOTS	0067	
AKIO	1139;1318	ASTRA	0415; 0329; 0296; 0302; 0359; 0067; 0354; 1485	BOSCH/BAUER	0069	
AKIRA	1485;1637;0141;0374;0513	ASTRO	0237; 0230	BOSTON	1621;0067	
AKITA	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 047; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540	AUDIO SONIC	0359; 0141; 0262; 0125; 0149; 0111; 1638; 0067; 0025; 1227; 0077; 0230; 0162; 0322; 0060; 0490; 0424; 0336; 0354; 0545; 0540; 0513; 0557; 1657	BOSUN	0001	
AKITO	0540;0513	ATORI	0359	BPL	0540;0513	
AKTRON	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	AUDIOILA	1432	BRANDT	1435; 0051	
AKURA	0143; 0231; 0190; 0359; 0322; 1637; 0513; 0540	AUDIOTON	0359; 0141; 0262; 0125; 0149; 0111; 1638; 0067; 0025; 1227; 0077; 0230; 0162; 0322; 0060; 0490; 0424; 0336; 0354; 0545; 0540; 0513; 0557; 1657	BRANDT ELEC- TRONIQUE	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	
ALBA	0415;0300;0262;0230;0513;0359	AUDIOVOX	0114; 0359; 0067; 0125	BRAUN	0067	
ALBATRON	1378	AURORA	0572	BRENDSTAR	0359	
ALBIRAL	0025; 0237; 0513; 0262; 0322; 0125; 0230; 1174; 1639	AUSIND	0131; 0136; 1126	BRIGMTON	0067; 0111; 0237	
ALBRECHT	1586	AUTOVOX	1423; 0067; 0136; 0131; 1124; 0391; 1126; 1653; 0108; 1367; 0556; 1395; 0513; 0111	BRINKMANN	0540;0513	
ALHORI	0067	AUVISAT	0513	BRIONVEGA	1622; 0295; 0247; 1367; 1124; 0024; 0111; 0428; 0223; 0222; 1181	
ALKOS	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	AVIOUS	1550	BRITANNIA	0067; 0162	
ALL TEL	0550;0513;0145;1383	AWA	0149; 0359; 0067; 0354; 0540; 0513	BROKLINE	1319	
ALLORGAN	0391;0108;0067	AWATRON	0359	BROKSONIC	0513; 1323	
ALTEK	1494;1399;1526;1401;1395;1546	AIXWANT	0513	BROTHER	0322; 0513	
ALTUS	0557	AIXWANT	0375; 0378; 0539	BROWN	1317	
AMBRESSADOR	0196	BAIRD	0024	BRUNNS	0262; 0540; 0242; 0359; 0336; 1611; 0024; 0363; 0077; 0311	
AMPLIVISION	0067;0237	BANG & OLDPSEN		BSR	0300; 0052; 0329; 0230	
AMSTRAD	0143; 0196; 0222; 0262; 0322; 0359; 0415; 0513; 1343; 1410; 1423; 0540; 1440; 1469; 1559; 1578; 1587; 1588; 1638; 1639; 1666; 1711	BARCO	0146; 0024; 0090	BTIC	0262	
ANAM	0540;0513	BASTIDE	0067	BUSH	0097; 0052; 0083; 0513	
ANEX	1639;0513	BAUER	0561; 1302; 0513; 0069; 0275; 0114	CADMOS	0513; 0246; 0114; 0025; 0230; 0359; 1319	
ANGLO	0322;0359	BAUMATIC	0322	CALIFORNIA	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639;	
ANIS	0322;0336	BAUR	0111; 0083; 0103; 0133; 0157; 0162; 0178; 0290; 0337; 0351; 0540; 0359;	1654	CAMPER	0230; 0336; 0513; 0141
ANITECH	0111; 0513; 0077; 0359; 0505; 0322; 0424; 0329; 0114; 0540	BAZIN	0067; 0441	CANAIS	0042	
ANSONIC	0322; 1657; 0336; 0057; 0359; 0077; 0141; 0513	BEAUMARK	0547	CANALERA	1363	
ANTECNO	0262			CANALSANTE	0230	

CANDLE	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	CROWN	0540; 0374; 1639; 1657; 0336; 0359; 0262; 0057; 0513; 0131; 0077; 0097; 0141; 1420	DOMOH	1639; 0513
CANTON	0252	CTC CLA-TRONIC	0057; 0322; 0114; 0374; 1423; 0067; 0230; 0262; 0415; 0359; 0513; 0077; 0557; 0540; 0227; 0131; 0424	DORIC	0052
CAPSONIC	0322; 0513			DTS	0359; 0513; 0153
CARAD	0540; 0513			DUAL-TEC	0047; 0057; 0097; 0111; 0067; 0125; 0133; 0141; 0153; 0052; 0162; 0126; 0540; 0222; 0298; 0312; 0329; 0354; 0359; 0391; 0409; 0434; 0513; 0230; 2315
CARENA	0544; 0513; 0540	CXC	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0237; 0547; 0196; 0067; 1317; 0336	DUMONT	0390; 0066; 0374; 0131; 0282; 0077; 0115; 1639; 0513; 0136; 0024
CARREFOUR	0540; 0513	CYBERTRON	0262	DUNAI	0230
CARYONSE	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	CYMATIC	0067; 0025; 0230	DURABRND	0557; 0513
CASCADE	0540; 0513	CVV	0513	DUX	0111; 0540
CASIO	1611; 0540; 0409	D-VISION	0554; 0513; 0540	DYNAMTC	0359; 0374
CASONIO	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341	DAEWO	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	DYNATRON	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
CAT	4575; 1410	DAICHI	0540; 0359	EASY LICING	1525; 1394; 1398; 1399
CATHAT	0540; 0513	DAIMOND	1637	ECCO	1346
CCE	0540; 0513	DAINICHI	0067; 0262	ECHO	0561
CDV	1410	DALMAN	1453	ECHOSTAR	0359; 0513; 0067
CELTIN	0052	DANSAI	0329; 1608; 0513; 0067	ECO LINE	0513
CENTURION	0540; 0513	DANTAX	1423; 0513	EDAN LINE	0513
CENTURY	0057; 0024; 1227	DATRONIC	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	EDISON	0549
CGE	0057; 0131; 0227; 0298; 1711; 0374; 0513; 1638; 0230	DAWA	0513	EL	1525
CGM	0097; 0227; 0322; 0336; 0359; 0424; 0513; 0064; 1657; 0230	DAYMATER	0024; 0025; 0060; 0077; 0115; 0359; 1009; 1639; 0230	ELBE	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
CIE	0060; 0196; 0262; 0354; 0359; 0513	DAYTEK	1121; 0572; 0513	ELCIT	0024; 0025; 0060; 0077; 0115; 0359; 1009; 1639; 0230
CIHAN	0230; 0115	DAYTRON	0359; 0540; 0513; 1318	ELECTRO	0359
CIMLINE	0359	DAYTRONIC	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	TECH	
CINEMA	0513	DCE	0557	ELEKTRA	0359; 0424; 0322; 0354; 0111; 0513
CITIZEN	1324	DE GRAAF	0513	ELEKTRONIKA	1657; 0516
CITY	0359	DECCA	0065; 0067; 0111; 1637; 0246; 0254; 0302; 0375; 0540; 0513	ELEKTRONSKA	0025; 0230
CLARITRONIC	1657	DEITRON	0540; 0513	IND.	
CLARIVOX	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611	DELTON	0557	ELEMIS	0230; 0513; 0336
CLATRONIC	0540	DEMACION	0513	ELG	0540; 0513
CLAYTON	0230; 0513	DENKO	0322	ELIN	0111; 0359; 0513; 0067; 0153; 0162; 0282; 0083; 0066; 0431
COFANDEL	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	DESMET	0246; 0114; 0025; 0230; 0359; 0513	ELITE	0262; 0322; 0114; 0513
COLOR MAT	0024	DEYVISION	0513	ELLEVISION	0322; 0527
COLUMBIA	0111	DENTAL	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	ELMAN	0025; 0230; 0077; 0196; 0067; 1700
COMBITECH	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0427; 0448; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540	DENVER	1546; 0359; 1638; 0513; 1522	ELTA	0359; 0435; 0057; 0067; 0322; 0513
COMET	0540; 0556; 0536; 0262; 0513	DIAGRAM	0246; 0114; 0025; 0230; 0359; 0513	EMATEC	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
COMPUTRON	0431; 0415; 0359; 0513	DHS	0415; 0329; 0296; 0302; 0359; 0067; 0354; 1485	EMCO	0057; 0060; 0131; 0227; 0298; 0374; 0435; 0540; 1247; 0467; 0513; 0230
CONCERTO	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	DIADEM	022	EMERSON	1638; 0415; 0141; 0149; 0409; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0153; 0077; 0024; 1227; 0111; 0327; 0454; 0196; 0067; 1317; 0336
CONCORDE	0359	DIAMOND	0359; 0354; 1264; 1112; 1121; 1241; 0513; 0540; 1338; 0047	ENERGY	0016; 0017
CONDOR	0114; 0131; 0227; 0337; 0322; 0359; 0374; 0424; 0513; 0540	DHS	0415; 0329; 0296; 0302; 0359; 0067; 0354; 1485	ENGEL	1563; 0230; 1611
CONFARAMA	0431	DIGATRON	0540; 0513	ENIE	0513
CONIC	0002; 0329; 0296	DIGHOME	1435; 0557	ENZER	0579; 0513; 0561; 1485
CONRAC	1435	DIGILINE	0513	EROICA	0329
CONRAD	0513	DIGITOR	0513; 0540	ERRRES	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
CONTEC	0322; 0359; 0197; 0067; 0540; 0424	DIK	0540; 0513; 0359	ESC	0067; 0539; 0336; 0513; 0540
CONTI M.	0513	DIKON	1551	ESTEL	0230
CONTIN. EDIS.	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	DINASTY	0359; 0354; 0513	ETRON	0230; 0384; 1082; 0359; 0513; 0415; 1063
CONTINENTAL	0549; 1639; 0513; 0114	DISTAR	1085; 0513	EULANDER	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
COSMEL	0359; 0490; 0513; 0540	DIXI	0513; 0540; 1611; 0359	EUMIG	0114
COSMOS	0513; 0359; 0262	DMTECH	1489	EUROCOM	0230
CRC	0111	DOMEOS	0513; 0434		
CROSLEY	0115; 0057; 0024; 0131	DOMLAND	0047; 0057; 0097; 0111; 0067; 0125; 0133; 0141; 0153; 0052; 0162; 0196; 0540; 0222; 0298; 0312; 0329; 0354; 0359; 0391; 0409; 0434; 0513; 0230; 2315		

EUROLINE	0513;0540	GALAXY-	0409; 0057; 0227; 0374; 0513; 0067	HAIER	0540
EUROMAN	0111;0322;0513;0067;0336	GALAXIS		HALIFAX	0322
EUROPA	0540;0513	GALERIA	0359	HAMMER-	0322;0067;0384;0422;1082;0359
EUROPHON	0067; 0025; 0077; 1227; 0114; 0127; 0238; 0230	GBC	0262; 0230; 0359; 0513; 0375; 0354; 1489; 0125; 0197; 0415; 0060; 0424; 0115	STEIN	
EUROSTATUS	0513			HAMPTON	0067;0115
EUROVISION	1423	GE	0242; 0547; 0051	HANIMEX	0262
EVELUX	0513	GEANT CA-	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341	HANNOVER	1139; 1420
EXCEL	0540;0513	SONTI		HANSEATIC	0359; 1639; 0114; 0424; 0162; 0195; 0230; 0554; 0540; 0435; 0513; 1638; 0262; 0351; 0557; 1601; 0391; 0296; 0336; 0067; 0025
EXPERT	0153;0204;1654	GERBER	0162		
EXQUISIT	0540;0513	GEC	0052; 0067; 1076; 0083; 0246; 0375; 1714; 0189; 0513; 1372	HANTAREX	0513; 1436; 1383; 0077; 0238; 0359; 0025
FAGOR	0513;0435	GELOSO	0359; 0262; 0230; 0115; 0025; 0080; 0060; 0354	HARROW	0513
FAIRMOST	0359	GEMSSOUND	0359; 0262	HARWOOD	0540;0513
FALCON	0359	GENERAL	0359; 0067; 0354; 0111; 0513; 0540; 0197	HAUPPAGE	0540;0513
FAMILY LIFE	0540;0513	GERICOM	1383	HB	0557; 0513; 1489; 1459
FELIX	0262;0322;0415;0513	GIANT	0067; 0108; 0153; 0513	HCM	0322; 0359; 0424; 0513; 0543; 0540; 0067; 0230
FENNER	0359; 0424; 0513; 0540; 0544; 0354; 0111; 0516	GOLDTOP	0354; 0359	HEDZON	0540;0513
FERGUSON	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	GENERIC	0242; 0513; 0511; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HEIRU	0322
FIDELIS	0067;0296;0359;0513	GENESIS	0540; 0513	HELECTRONIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639;
FIDELITY	0391;0067;0329;1713;0359;0415;1637;0513;0262	GENEXXA	0390; 0162; 0540; 0262	HEMMER-	0391;0127;1009;0077
FILSAI	0359;0067	GERICOM	1383	MANN	0322
FINLANDIA	0083	GITEM	0067; 0527; 0111; 0561; 0359	HENA	0513
FINLUX	0066; 0077; 0115; 0127; 0131; 0136; 0137; 0230; 0246; 0282; 0295; 0359; 0374; 0375; 0390; 0431; 0513; 0556; 0558; 1126; 0557; 0540; 0222	GM - GMC	0359; 0513; 0322	HEXA	0230;0204
FIRST LINE	0237; 0359; 0354; 1453; 0391; 0111; 0302; 0375; 0067; 0057; 0097; 1654; 0540; 0298; 0114; 0539; 0222; 0513; 0557; 0230; 1435; 0203; 1637; 1009; 1420	GOLDTOP	0424	HIFIVOX	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0320; 0424; 0455; 0549; 1045; 1435; 1478; 1445; 2026
FISHER	0363; 0133; 0066; 0067; 0314; 0115; 0197; 0149; 0290; 0024; 1657; 0391; 0539; 1658; 0572	GOLDFUNK	0094	HIGASHI	0067
FLINT	0513;0073;0544	GOLDHAND	0359; 0067	HIGHIWA	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
FLORIDA	0067	GOLDLINE	0073	HIGHLINE	0540; 0513
FNR	0077	GOLDSTAR	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	HIKONA	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
FORESEE	0001	GOLDTECH	0097; 0513	HILINE	0359; 0413; 0513; 0322
FORGESTONE	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	GOLDVISION	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	HINARI	0322; 0513; 0329; 0262; 0327; 0065; 0359; 0080; 0363
FORMENTI	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	GOODMANS	0067; 0359; 0415; 0051; 0545; 0557; 0540; 0262; 0354; 0111; 0554; 0327; 0322; 0230; 0242; 1608; 0141; 0513; 1423; 0097	HISAWA	0513; 0262; 0073; 0544; 0557
FORTRESS	0024	GORENJE	0539; 1657; 0516; 1658; 1296; 0513; 1423; 0051	HISENSE	0004; 0083; 0145; 0539; 0540
FRABA	0513	GPM	0322; 0329; 0262; 0359	HISHITO	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351
FRACI	0077;0540;0513	GRADIENTE	0502	HISONIX	0359; 0415
FRONTECH	0083; 0057; 0329; 0359; 0125; 0230	GRAETZ	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	HITACHI	0513; 0067; 0082; 0083; 0094; 0095; 0119; 0137; 0142; 0160; 0178; 0189; 0197; 0296; 0329; 0326; 0431; 0496; 1393; 0547; 0554; 0569; 1016; 1076; 1259; 1369; 1423; 0052; 0540; 0222; 1711; 1714
FS SOUND	0359	GRANADA	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	HITSU	0262; 0544; 0073; 0513
FST	0065; 0067; 0111; 1637; 0246; 0254; 0302; 0375; 0540; 0513	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HOHER	0513; 0540; 0557; 1383; 1423
FUJI	0424	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HOME ELEC-	1437
FUJITECH	0513;0111	GRANDIN	1453; 1654; 0073; 1548; 1569; 0544; 0141; 0424; 1564; 0230; 0536; 0114; 0262; 0540; 0422; 1549; 1412; 1383; 0557; 0513	TRONICS	
FUJITSU	0077; 0329; 0067; 0153; 0108; 0052; 0282; 0222; 1283; 1408; 1345; 0513	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HORIZONT	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
FUMEO	0052	GRANDE	1453; 1654; 0073; 1548; 1569; 0544; 0141; 0424; 1564; 0230; 0536; 0114; 0262; 0540; 0422; 1549; 1412; 1383; 0557; 0513	HORNYPHONE	0540; 0513
FUNAI	0359; 0557; 1558; 0513; 0149; 1664; 0322; 0230	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HOSHAI	0097; 0424; 0262; 0513
FURICH	1338	GRANDE	1453; 1654; 0073; 1548; 1569; 0544; 0141; 0424; 1564; 0230; 0536; 0114; 0262; 0540; 0422; 1549; 1412; 1383; 0557; 0513	HOSPITALIERE	0513
FUSION	1435;0557	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HOWELL	0513
FUTRONIC	0322	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HPC	0003
FUTURE	0540;0513	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HYD	1467; 1550
FUTURETECH	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0542; 0196; 0067; 1317; 0336	GRANDE	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HYPER	0067; 0125; 0262; 0322; 0329; 0336; 0359; 0415; 0424; 0435; 0497; 0513; 1435; 1638; 1639; 0230
GALA	0329;0296	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HYPSON	0141; 0205; 0544; 1434; 0557; 0336; 0540; 0513; 0097
GALACTEX	0067;0322	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HYUNDAI	1475; 1450; 1568
GALANT	0359;0415;0424	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	I.V.	0513
GALAXI	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0204; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0204; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	IBERIA	0428; 0513
GALAXI	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0204; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0204; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	IBERIASAO	0391
GALAXI	1654	GRANDE	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0204; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HADOR	1338

ICE	0262; 0415; 0057; 0111; 0067; 0540; 0513; 0359; 0322	KANGSLEY	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	LAVA	0513
ICS	0262; 0067; 0322	KAOSHO	0064; 0067; 0075; 0082; 0227; 0296; 0312; 0322; 0359; 0375; 0384; 0422; 0453; 0513; 0515; 0542; 0544; 0547; 1309; 0111; 1382; 0540; 0528; 1657; 1658; 2065; 4267	LAZER	0513
IEG	0067	KAPSCH	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	LEADER	0359
IMC	0513	KARCHER	0238; 0237; 0359; 0067; 0424; 0435; 0516; 0111; 0513; 0540	LECON	0540; 0513
IMPER	0322; 0359; 0111; 0262	KATHREIN	0513	LEGENG	0490; 0359; 0513; 0067; 0322
IMPERIAL	0057; 0060; 0131; 0540; 0227; 0298; 0359; 0374; 0435; 1227; 0467; 0513; 0230	KAWA	0262; 0415	LENCO	0391; 0111; 0359; 0077; 0435; 0354; 0322; 0329; 0162; 0513
INCUBE	0067; 0359; 0290	KAWASHO	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	LENOIR	1399; 0067; 0424; 0359; 0354; 1009; 1639; 0322; 0097; 0409; 1343; 0141; 1638; 1401; 1395; 1394; 1398; 1396; 0513
INDESTIT	0107	KAYA	0359; 0322	LEVIS AUSTRIA	0540; 0513
INDIANA	0513	KB ARISTO-	0162; 0391	LEXUS	0374; 0322; 0513
INGELEN	0162	CRAT		LEYCO	0513; 1453; 0322
INGERSOILL	0359; 0513	KELCINATOR	0062	LG	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207
INNO HIT	0025; 0067; 0075; 0077; 0111; 0115; 0540; 0227; 0262; 0296; 0322; 0359; 0375; 0415; 0424; 0513; 1423; 0409; 1638; 1639; 4367	KENDO	0051; 0222; 0230; 0300; 0295; 0073; 0542; 0080; 0077; 1227; 0359; 0513	LIFE	0359; 1435
INNOVATION	0540; 0513	KENNEDY	0222; 0429; 0115; 0052; 1149; 0153; 0108	LIFETEC	0354; 0536; 0097; 0540; 0513; 0359; 0322; 0262; 1638; 0557
INTERBUY	0125; 0322; 0505; 0359; 1637; 0540; 0262; 0415	KENNEX	0097; 0540; 0513; 4367; 0550; 1423; 0557	LIGHTSTAR	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
INTERDIS-COUNT	0513; 0092; 0119; 0242; 0174	KENY	1317	LINTON	0133
INTEREACTIVE	1637; 0540; 0513	KENDI	0051; 0222; 0230; 0300; 0295; 0073; 0542; 0080; 0077; 1227; 0359; 0513	LLOYD'S	0422; 051; 1052; 0359; 0415; 0052; 0136; 0096; 0067; 0322
INTERECORD	0133	KENNEX	0097; 0540; 0513; 4367; 0550; 1423; 0557	LME	0025; 0067; 0114; 0204; 0237; 0435; 0230
INTERFUNK	0042; 0111; 0047; 0062; 0069; 0079; 0092; 0096; 0162; 0302; 0540; 0374; 1617; 1621; 1445; 0052; 0513; 1654	KENYA	0528	LOCATEL	0351; 0619; 1445
INTERNAL	0540; 0513	KERION	1639; 0513	LOEWE	0024; 0047; 0050; 0246; 0277; 0402; 0513; 0925; 1637
INTERVISION	0067; 0077; 0262; 0322; 0351; 0359; 0435; 0505; 0540; 0544; 1280; 0111; 0542; 1657; 0230	KEYMAT	1491; 1467; 1587; 0467; 0578; 0550; 0480; 0417; 2008; 2395; 1496; 4551; 0540; 1386; 1391	LOGIK	0097; 0384; 0422; 0374; 0513; 0146
INTRON	0322	KEYSMART	0513	LOVE	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
INWAH	0540	KIC	0515; 0067; 0237	LUMATRON	0097; 0337; 0222; 0295; 0052; 0153
IRRADIO	0075; 0097; 0111; 0125; 0136; 0230; 0262; 0322; 0296; 0329; 0359; 0415; 0528; 0557; 0561; 0495; 1126; 1269; 1296; 0547; 1459; 1525; 0542; 0513; 1638	KIMAY	0322	LUXMAX	0540; 0513; 0490
ISKRA	0230; 0025; 0067	KINGHOME	0513	LUXOR	0052; 0075; 0082; 0083; 0067; 0137; 0540; 0178; 0162; 0252; 0390; 0431; 0539; 0556; 1016; 0222; 1713
ISUKAI	0424; 0262; 0513	KIOTA	0359; 0322; 0544; 0415; 1082	LXI	0547
ITC	0513; 0067; 0230	KITON	0540; 0513	LYOTRON	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207
ITL	0359	KITT	0067; 0322; 0513	M.D.C	1638
ITS	0262; 0540; 0359; 0067; 0513; 0322; 0415	KITTEN	0513; 0111	MACROM	0480
ITT	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	KIYOGIN	0067; 0025; 0237; 0230; 1174	MADISON	0513; 0540
ITV	0111; 0060; 0354; 0540; 0322	KLARMAX	0237; 0429; 0073; 1611; 0233; 0295; 0540; 0513; 0354	MAGAVOX	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
JCE	0262	KOBALTRONIC	0067; 0230; 1174	MAGNADYNE	0024; 0025; 0060; 0077; 0115; 0359; 1009; 1639; 0230
JEC	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	KOBIC	0359	MAGNAFON	1639; 0077; 0067; 0025; 0513; 0230; 1126; 0131; 0238
JEJA	0006	KOLSTER	0237; 1614; 0513; 0322; 0262; 1227; 0077; 0067; 0230; 1174	MAGNASONIC	0111
JET POINT	0513; 0384	KONGWAM	0556; 0544; 0424; 0262; 0067; 0513; 0395; 0415; 0073; 1420	MAGNAVOX	0540; 0111
JINLIPU	0359	KONICHI	0359	MAGNEX	0513; 0322
JINPIN	0005	KONKA	0015; 1302; 0513; 1420; 1116; 0540; 0415; 1261; 0145; 0262	MAGROSONIC	1324
JMB	0540; 0513	KONTAKT	0549	MANDI	0540
JOCEL	0513; 0435; 0556	KORPEL	0540; 0513	MANDOR	0322
JOHNSON	0067	KOSMOS	0540; 0513		
JOINTEK	0007; 0008	KOTRON	0322; 0359; 0230		
JPS	0505	KRAKING	0230		
JRC	0435	KRIESLER	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705		
JUBILEE	0540	KRONNE	0067; 0230		
JVC	0262; 0404; 0415; 0502; 1622; 0230; 0167	KTV	0513		
KABEL	0300	KUBA ELEC-TRONIC	0133; 0083; 0391; 0230; 0067		
KAIDO	0083	KUCCAI	0097		
KAISER	0513; 0424	KURO	0024; 0513; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539		
KAISUI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	KYOTO	0230; 0246		
KAMAR	0515	L&S ELE-KTRONIK	0557		
KAMBROOK	0067; 0230; 0111; 0542; 0322; 0119				
KAMOSONIC	0067				
KAMP	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0320; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654				

MANESTH	0513; 0114; 0052; 1654; 0067; 0540; 1608; 0322	MITSUTI GENERAL	0298; 0233	NORDMENDE	0049; 0052; 0062; 0090; 0092; 0094; 0095; 0115; 0119; 0229; 0242; 0424; 0455; 0524; 0556; 0557; 1045; 0513; 1422; 1423; 0540; 1435; 1514
MANHATTAN	0359; 0097; 0513	MIVAR	0025; 0058; 0068; 0067; 0075; 0105; 0408	NORDTON	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
MARANTZ	0513; 0528	MKC	0578	NORDWAY	0298; 1657
MARECH	0513; 0114	MKM	0238	NORFOLK	0441
MARK	0354; 0513; 0336	MOBILE TV	0513	NORM N	0513
MARSHALL	0359; 0262	MOTION	0153; 1149; 0238; 0108; 0114; 0513; 1637; 0133; 0077; 0540; 1126; 0083	NORMEREL	1630; 0540
MASCOM	0513	MTC	0336; 1296; 0083; 1657; 1637; 0296; 0230	NORTEK	0513; 0097; 0141
MASCOT	0057	MULTIMAT	0238	NORTON	0359; 0424
MASUD	0262; 0322; 0513; 0300	MULTISTANDARD	0077	NORWAY	0298; 1657
MATCH ITALIA	0359; 0513; 0322	MULTITECH	0359; 0557; 0141; 0067; 0262; 0149; 0025; 1227; 0125; 0077; 0178; 0162; 0322; 1614; 0490; 0336; 0354; 0545; 0540; 1613; 0230; 1657; 0513	NU-TEC	0539; 0561
MATSUI	0549; 0351; 0397; 0359; 0196; 0067; 0065; 0300; 0536; 1016; 0415; 1422; 0111; 0513; 0322; 0060; 0539; 0336	MURPHY	0052; 0230; 0083; 1445	NUCLEAR	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083
MATSUKA	0067; 0322	MUSIKLAND	0540; 0513	O GENERAL	0359; 0149
MATSUVIANA	0528	MUSTAG	1121	OCEANIC	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
MAXAM	0359; 0322	MYRYAD	0540; 0513	OCTAL	0067
MAXDORF	0322; 0561; 0495	NAD	0547; 0162; 0391	OCTAN	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
MAXELL	0329; 0424; 0359; 0025	NAGOYA	0230; 0441	ODEON	0359; 0322; 0111; 0513
MAXIMAL	0230	NAIKO	0540; 0513	OEC ELEC TRONIC	0329; 1494
MAXON	0359	NAKAMURA	0540; 0513	OKANO	0359; 0227; 0302; 0513
MAXWELL	0025; 0077; 0513	NAONIS	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653	OLIDATA	1378
MB LINE	0322	NARANYA	1531	OLIVETTI	0527
MC MICHAEL	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	NARITA	0547; 0354; 0322; 0067	OLMAL	0025; 0237; 0513; 0262; 0322; 0125; 0230; 1174; 1639
MCE	0359; 0322; 0527; 0513	NASSA NAGEL	1563; 0230; 1611	OLYMPIA	1423
MCM	0359	NATIONAL	0518; 0310	OLYMPIC	0359; 0424
MECOA	0513	NEC	0149; 0359; 0065; 0427; 1497; 1418; 0447; 0430; 1359; 0472; 0540; 0237; 0544; 0354; 0545; 0513	OMEGA	0415; 0322; 0262
MEDIASONIC	0513	NECKERMANN	0024; 0047; 0057; 0060; 0069; 0080; 0083; 0111; 0114; 0133; 0148; 0157; 0167; 1637; 0178; 0195; 0227; 0230; 0295; 0300; 0312; 0337; 0359; 0374; 0409; 0467; 0174; 0540; 1361; 0513; 1638; 1639; 0351; 0495	ONCEAS	0359; 0067; 0060
MEDIATOR	0540; 0513	NEI	0435; 0230; 0490; 0262; 0513	ONDIOLA	0513
MEDION	1638; 0540; 0097; 1435; 1412; 0513; 1396	NEOVIA	0149; 1549; 1568; 1383; 1543; 1382; 1514; 1450; 1301	ONIDA	0302
MEGATRON	0547	NESCO	0327; 0125; 0375; 0312; 0222	ONIEL	0359
MEGAVISION	0359	NETSAT	0540; 0513	ONWA	0415; 0556; 0262; 0361; 0077; 0322
MEGHA	0513	NEUFUNF	0513	OPERA	0540; 0513
MEIN	0009; 0010; 0011	NEW GOLDVISION	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	OR - ON	0424
MELBOX	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611	NEWMAR	0067; 0230; 1174	ORAVA	0230; 0024; 0513
MELECTRONIC	0060; 0066; 0133; 0136; 0137; 0181; 0282; 0295; 0351; 0354; 0359; 0390; 0513; 1009; 1614; 1638; 0540; 0222; 4340; 4341	NEWORLD	0556; 0544; 0242; 0262; 0067; 0513; 0359; 0415; 0073; 1420	ORBISAT	0067
MELVON	0025; 0162	NEWTECH	0067; 0242; 0513	ORBIT	0513
MEMOREX	0322	NESTEC	0149; 0354; 0272; 0230; 0354; 0359; 0415; 0073; 1420	ORIENT	0359
MEMPHIS	0322; 0067; 0490; 0359	NEWGOLD	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	ORION	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540
MERCURY	0322; 0067; 0384; 0359; 0544; 0111; 0513; 0515; 0237	NEXIUS	0556; 1422; 0513; 1393; 0540	ORION	0111; 0119; 0230; 1422; 0415; 0441; 0513; 1059
MERRIT	0162	NEFREN	1555	ORLINE	0540; 0513
METEOR	0238	NICAMAGIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	ORMOND	0097; 0513
METZ	0024; 0078; 0079; 0097; 0103; 0111; 0157; 0338; 0349; 0402; 0460; 0462; 0513; 1487; 1499; 0351; 1621; 1628; 2140	NIKKAI	0513; 0322; 0067; 0329; 0082; 0141	ORSOWE	0025
MERRIT	0162	NIKKI	1467; 1550; 1399; 0540; 0556; 1537; 0513; 0322; 0097	OSAKA	0195
METROTEK	0238	NIKKO	0547; 0513; 0111	OSAKI	0111; 0195; 0513; 0067; 0262
MICRON	0067	NISSAN	0384	OSIO	0075; 0513; 0262
MICROSonic	0572; 1139	NOBLEX	0149; 0354; 0422; 0197; 1661; 0415; 0359; 1283; 0528	OSO	0262
MICROTEK	0561; 1127; 0242; 0495; 0359; 0513	NOBLIKO	0067; 1126; 0136; 0131; 1227	OSUME	0540
MIGROS	0295	NOGAMATIC	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	OTAKE	0300; 0195
MINATO	0540; 0513	NOKIA	0066; 0162; 0513; 0252; 0322; 0390; 0431; 0539; 0556; 0558; 0591; 1423; 0222	OTF	0230; 0111
MINERVA	0096; 0103; 0157; 0295; 0327; 0335; 0549; 1491; 1450; 1649; 1652; 1692; 0351; 1702	NORDING	0077; 0131	OTHER	5013; 5023
MINERVA	0549	NORDLAND	0230	OTHER LINE	0067; 0025; 0435; 0513
FRANCE				OTTO VER-	0047; 0067; 0083; 0111; 0114; 0225;
MINOKA	0540; 0513			SAND	0127; 0133; 0157; 0162; 1637; 0178; 0189; 0195; 0197; 0230; 0233; 0242; 0296; 0300; 0310; 0311; 0321; 0326; 0337; 0359; 0391; 0409; 0415; 0418; 0427; 0434; 0435; 0174; 0351; 0540; 0513; 1652; 0495; 0445; 1684
MISTRAL	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700			OVP	0513
MITRONIC	0329				
mitsubishi	0024; 0513; 0047; 0065; 0103; 0149; 0197; 0230; 0353; 0354; 0359; 0547; 0527; 1637; 0540; 1661; 1691; 1692				

PACIFIC	0513	PROSONIC	0513; 1638; 0415	ROSE&HOLIET	0539
PAEL	0067; 1126; 0096	PROTECH	0067; 0091; 0097; 0111; 0230; 0322;	ROSITA	0359
PALLADIUM	0024; 0069; 0080; 0083; 0114; 0148; 0157; 0174; 1637; 0227; 0295; 0359; 0409; 0351; 0540; 0513		0336; 0359; 0374; 1357; 0540; 0513; 1638; 1639	ROSNER	0067
PALSONIK	0322; 0067; 0329; 0302; 0262; 0359	PROTON	0547	ROWA	0359; 0513; 0528; 0067; 0322
PANAMA	0067; 0322; 0057; 0540; 0513	PROVISION	0359; 0513; 0409; 0540; 0354; 1641; 0390; 0743; 0322	ROWSONIC	0067
PANASHIBA	0359	PVISION	1489	ROYAL	0359; 0322; 0262; 0374; 0513; 0067; 0556; 0424; 0543; 0141; 1420
PANASONIC	0157; 0310; 0349; 0402; 0518; 1371; 1431; 0351; 0052; 0230; 1684; 1685; 1686; 1689; 0427; 2027	PYE	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	ROYAL LUX	0556
PANAVISION	0513; 0295; 0322; 0536; 0505; 1639	PYGMY	0024; 1621	RUEFACH	0391; 0111; 0359; 0077; 0435; 0354; 0322; 0329; 0162; 0513
PANAVOX	0067; 0359; 0424; 1121; 0572; 1325; 1139; 0545; 1447; 0513	QUADRAL	0374	RUKOPIR	0540; 0513
PANDA	0310	QUADRIGA	0540	SABA	0025; 0051; 0055; 0090; 0092; 0094; 0095; 0111; 0119; 0164; 0181; 0229; 0242; 0513; 0557; 0052
PANORAMA	0505; 0067; 0536; 0262; 0359	QUADRO	0579; 1410; 1112; 0374; 0513; 1423	SAGEM	0073
PANORAMIC	0092	QUARTCRAFT	0329; 0262	SAINEL	0230
PATH CINEMA	0025; 0067; 0114; 0204; 0237; 0435; 0230	QUASAR	0077; 0196; 0329; 0136; 0025; 1383; 0237; 1126; 0238; 0131	SAISHO	0083; 0196; 0067; 0065; 0300; 0354; 0418; 0237; 0111; 0322; 0262
PATH MAR-CONI	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	QUEENFIDELITY	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	SAIVOD	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
PAUSA	0359	QUELLE	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 0116; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	SAKAI	0067
PCM	0513; 1639; 0114	R. LINE	0540; 0513	SAKIO	0359; 0354; 0322
PEACOCK	0067; 0111	RADIALVA	0513; 0354; 0540	SAKURA	0359
PEONY	0527	RADIOLA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	SALORA	0052; 0075; 0080; 0082; 0083; 0137; 0540; 0178; 0162; 0513; 0252; 0390; 0431; 0539; 0556; 1016; 0230; 1702; 0222
PERDIO	0513	RADIOMAR-	0029; 1126; 0077; 0025; 1124; 0237; 0238; 0131	SAMBERS	0329; 1126; 0077; 0025; 1124; 0237; 0111; 0119; 1382; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
PERFEKT	0513	REDFERNS	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 0116; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	SAMPO	0111
PERSHIN	0204; 0096	QUESTAR	0197; 0191	SAMSUNG	0064; 0067; 0075; 0082; 0227; 0296; 0312; 0322; 0359; 0375; 0384; 0422; 0453; 0513; 0515; 0542; 0544; 0547; 1309; 0111; 1382; 0178; 0203; 0204; 1658; 2066; 4267; 5064
PHILARMONIC	0060; 0067	R. LINE	0540; 0513	SAND	0540
PHILBIX	0246; 0114; 0025; 0230; 0359; 0513	RADIALVA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	SANDOR	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
PHILCO	0024; 0057; 0060; 0115; 0131; 0149; 0227; 0298; 0359; 0374; 0435; 0572; 1139; 1611; 0513; 0230	RADIOMAR-	0029; 1126; 0077; 0025; 1124; 0237; 0238; 0131	SANDRA	0025; 0067
PHILIPS	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	REDFERNS	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 0116; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	SANSUI	1423; 0359; 0415; 0424; 1469; 0544; 0539; 0540; 0540; 1237; 0322; 0557; 0149; 0513
PHOENIX	0238; 0114; 0111; 0115; 0513	RADIOMAR-	0029; 1126; 0077; 0025; 1124; 0237; 0238; 0131	SANWA	0024; 0151; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PHONOLA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	REDFERNS	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 0116; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	SANYO	0024; 0153; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PIONEER	0540; 0162; 1508; 0464; 0474; 1527; 0095; 0322; 0119	RADIOMAR-	0029; 1126; 0077; 0025; 1124; 0237; 0238; 0131	SAR	0083; 0153; 0067
PLANTRON	0359; 0513; 0322	REFLEX	0547; 0540; 0513	SATRONIC	0057
PLASMATECH	1383; 1436	RADIOTONE	0107; 0359; 0111; 0536; 0322; 0336; 0513; 1638; 0255; 0540; 0227	SATUM	0354; 0359; 0114; 0513; 0227; 0136; 0025
PLATINIUM	0528	RANK / RBM	0025; 0435; 0295; 0230	SAVE	0540; 0513
PLAYDOR	0322	REALISTIC	0547	SAVILLE	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PLAYSONIC	0067; 0237; 0024; 0513	RECOR	0374; 0513; 1637; 0540	SANYO	0024; 0153; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
POLYTRON	0513	RED STAR	0513	SAR	0083; 0153; 0067
POP	0322; 0095	REDDER	0233; 0237; 0197	SATRONIC	0057
POPPY	0359	REDIFFUSION	0162; 0052	SATUM	0354; 0359; 0114; 0513; 0227; 0136; 0025
PORTLAND	0540; 1638; 0513; 0354	REDO	0359; 0354	SAVE	0540; 0513
POWERPOINT	0540; 0513	REDOPOINT	0549	SAVILLE	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PRANDONI	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083	REFLEX	0513; 1639; 0097; 0540	SANYO	0024; 0153; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PRECISION	0067; 0329	REGENTE	0359	SANWA	0024; 0151; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PREMIER	1116; 0322	RELYSIS	1383	SANYO	0024; 0153; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PRIMA	0505; 0067; 0329; 0322	RENDER	0550; 1511; 1412; 0417; 1469; 0513	SBR	0024; 0044; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
PRINCE	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083	REVOX	1637; 0540; 0513	SCHAUB LORENZ	0062; 0097; 0111; 0162; 0178; 0227; 0252; 0322; 0354; 0359; 0374; 0384; 0424; 0431; 0222; 0435; 1393; 1459; 1469; 1475; 1489; 0557; 0052; 0513; 1638; 1639; 1654
PRINCESS	0329; 0540; 0359	RFT	0262; 0540; 0242; 0359; 0336; 1611; 0224; 0363; 0077; 0311	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PRINSTON	0141	RHINEX	0561	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROCYON	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	RICONH	0540; 0513	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROFESSOR	0111	RITZ	0230	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROFEX	0359; 0435; 0131; 0298; 0162; 0230	RM 2000	1639; 0513; 0097	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROFILE	0513	ROADSTAR	0076; 1453; 0359; 0141; 0097; 0540; 0258; 0557; 1423; 1469; 0262; 0513; 1343; 1525; 1435; 0556	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROFITRONIC	0077; 0540; 0513	ROBOTRON	0024; 0363	SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PROLINE	0295; 0554; 0375; 0230; 0418; 0540; 0513	ELECTR		SCHNEIDER	0024; 0044; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1469; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1

SCOPE	0005;0013;0014	SKAY	0540;0513;0424	SUPERTECH	0359;0513;0415;0474;0262;1638;1453;0298
SCOTLAND	0025;0067;0083;0111;0114;0136;0540;0196;0227;0230;0322;0354;0359;0435;0542;0513;1637;1639;1654	SKY LINE	0141;0067	SUPERTONE	0025;0067;0114;0204;0237;0435;0230
SCOTT	0114;1639;1638;0547;0327;1317	SKYWORTH	0012	SUPRA	0359;0354;0322;0329;0547;0067;0422
SEARS	0024;0513;0067;0149;0179;0227;0290;0312;0314;0363;0375;1423;1657;1658;1661;1669;0539	SLAVA	0067	SUPREME	0136;0060
SEAWAY	0513	SLIDING	1549;0513;1555;0556;1383;1543;1453;2008;2395;1496;4551;0540;1569;1564;1412	SUTRON	0359
SEDIP	0025;0067;0114;0204;0237;0435;0230	SMARAGD	0549	SVA	0561
SEELEVER	0540;0513	SMR	0025;0077;0513	SYC LINE	0067;0359
SEG	0111;0057;0077;0097;0067;0131;0540;0252;0262;0322;0329;0359;0363;0435;0513;1227;1423;1639;0230	SOLAVOX	1654;1713;0162;0082;0230	SYDNEY	0067
SEI	0024;0077;0115;0127;0169;0162;0195;0196;0222;0262;0295;0300;0359;0391;0409;0528;0556;0581;1009;1022;1422;0513;1433;1434;1565;1622;0540;0445;1639	SOMBER	0024;0025;0096;0111;0204;0237;0490;0540;0230;1611	SYSLINE	0540;0513
SEIGA	0024;0513;0047;0065;0103;0149;0197;0230;0353;0354;0359;0547;0527;1637;0540;1661;1691;1692	SONICK	0513	SYTEL	0246;0114;0025;0230;0359;0513
SEIKO	0354	SONIKO	0540;0513	TADISTAR	0374;0262
SEITECH	0556	SONITRON	0067;0290;0539;0024	TAISHO	0230
SELECO	0062;0080;0108;0153;0052;0197;0242;0295;0390;0428;0429;0435;0222;0513;1149;1181;0540;1653	SONNECLAIR	0540;0513	TAKARA	0513
SELECT	0513	SONOKO	0322;0359;0067;0513;0505;0424;0111;0557	TALENT	1085
SELTEN	1432	SONOLOR	0162;0431	TALITA	0024;0025;0096;0111;0204;0237;0490;0540;0230;1611
SEMP	0337	SONORO	0359;0322;0111;0513	TAMASHI	1323
SENCORA	0359	SONTEC	0359;1657;1639;0513;0125	TANDBERG	0024;0050;0092;0094;0195;0246;0295;0349;0222;1628
SENDAY	0513	SONY	0065;0149;0539;0513;0785;1382;0167;1672;0174;0495	TANDY	0083;0080;0067;0262
SENTRA	1608;0262;0207	SOUND	1638;0540;0322;0513;0557;0141;0415;0143	TASHIKO	0080
SERINO	0073	SOUND DE-SIGN	0547	TASTER	0111;0322;0262
SET	0435;0513	SOUNDMAS-TER	0359	TATUNG	0246;0067;0111;0375;1637;0254;0065;0242;0513
SETRON	0359	SOUNDVISION	0077;0513;0262	TAUTO	0513
SHARP	0067;0149;0197;0321;0311;0445	SOUNDWAVE	0374;0322;0513	TCL	0561
SHINTOSHI	0513;0540	SOUTHERN CROSS	1614	TCM	0540
SHIVAKI	0311;0540;0513;0230;0111	SOWTECH	1657	TD DESIGN	1637
SHIWAN	0556;0544;0424;0262;0067;0513;0359;0415;0073;1420	SPARKLE	0513	TDA	0557
SHINIED	0322	SPECTRA	0322;0513;0354	TEAC/TEAK	1637;1607;0391;0544;0561;0222;0359;1592;0111;0047;1269;0513
SHORAI	0195	SPECTRUM	0547	TEAM	0424
SHOV	0415;0359;0322;0513;0067	SPORT GEN-EXXA	0025;0067;0083;0111;0114;0136;0540;0196;0227;0230;0322;0354;0359;0435;0542;0513;1637;1639;1654	TEC	0047;0057;0097;0111;0067;0125;0133;0141;0153;0052;0162;0196;0540;0222;0298;0312;0329;0354;0359;0391;0409;0434;0513;0230;2315
SIAREM	0025;0115;0077;0024	SSANGYONG	0064;0067;0075;0082;0227;0296;0312;0322;0359;0375;0384;0422;0453;0513;0515;0542;0544;0547;1309;0111;1382;0540;0528;1657;1658;2066;4267	TECCO	0092;0067;0359
SICANTIC	0052;0075;0082;0083;0067;0137;0540;0178;0162;0252;0390;0431;0539;0556;1016;0222;1713	SSS	0359;0557;1558;0513;0149;1664;0322;0230	TECHLINE	0077;0097;0513;0540
SICE	1652	STAG	0556;0544;0424;0262;0067;0513;0359;0415;0073;1420	TECHNEMA	0025;0067;0083;0111;0114;0136;0540;0196;0227;0230;0322;0354;0359;0435;0542;0513;1637;1639;1654
SIDEK	0230	STANDARD	0359;0060;0067;0262;0513;0111;0114	TECHNICAL	0513
SIEL	0230	STAR	0513	TECHNIKS	0359;0427;0310
SIEMENS	0039;0069;0103;0148;0157;0513;0329;0335;0351;1651;1652	STARLINE	0513	TECHNIKA	0262;0359
SIERA	0540;0513	STARLITE	0322;0359;1638;0111	TECHNILAND	0302
SIESTA	1657;0336;0111	STARLUX	0359;0513;0067	TECHNISAT	0540;4465;0513
SILVA	0149;0359;0067;0302;0322;0298;0513;0329	START	0513	TECHNISSON	0557
SILVER	0149;0262;0513;0540;0322	STASSFURT	0262;0540;0242;0359;0336;0363;1611;0024;0077;0311	TECHNOL	0359;0354;0067;0513;1637;1094;0544;0322
SIMATEC	0065;0127;0195;0196;0262;0300;0322;0329;0359;0407;0409;0415;0418;0447;0472;0544;0556;0557;0513;1009;0141;1368;1422;0540	STENWAY	0424	TECHWOOD	0513;1423
SIMTEL	0111;0262;0322;0424;0133	STERLING	0540;0513;0513	TECNIMAGEN	0540
SINGER	0359;0077;0060;0115;1227;0025;0024;0513;0067;0429;0111;0415;0540;1311;1638	STERN	0062;0080;0108;0153;0052;0197;0242;0295;0390;0428;0429;0435;0222;0513;1149;1181;0540;1653	TECNISON	0111;0067;0359
SINOTECH	0322;0495;0561;0374;0141	STRATO	0540;0513;0322	TECO	0143;0196;0222;0262;0322;0359;0415;0513;1343;1410;1423;0540;1440;1469;1559;1578;1587;1588;1638;1639;1666;1711
SINUODYNE	0024;0077;0115;0127;0169;0162;0195;0196;0222;0262;0295;0300;0359;0391;0409;0528;0556;0581;1009;1022;1422;0513;1433;1434;1565;1622;0540;0445;1639	STENWAY	0424	TECSONIC	0572
SIREL	0025	STRONG	1432;1586	TEDELEX	0230;0359;0111;0302;0067;0490;0561;0513;1094;1243;0528
SKANTIC	0052;0075;0082;0083;0067;0137;0540;0178;0162;0252;0390;0431;0539;0556;1016;0222;1713	STERLING	0540;0513;0513	TEINEL,SA	0230;1639
SINOTECH	0322;0495;0561;0374;0141	STRONG	1432;1586	TEK	1127
SINUODYNE	0024;0077;0115;0127;0169;0162;0195;0196;0222;0262;0295;0300;0359;0391;0409;0528;0556;0581;1009;1022;1422;0513;1433;1434;1565;1622;0540;0445;1639	STT SONIC	0111	TEKA	1127
SINGER	0359;0077;0060;0115;1227;0025;0024;0513;0067;0429;0111;0415;0540;1311;1638	STV	0162	TEKNANT	0424;0513;0359
SINOTECH	0322;0495;0561;0374;0141	STVI	0230;0067	TEKNIKA	1614
SINUODYNE	0024;0077;0115;0127;0169;0162;0195;0196;0222;0262;0295;0300;0359;0391;0409;0528;0556;0581;1009;1022;1422;0513;1433;1434;1565;1622;0540;0445;1639	SUNIC LINE	0513	TEKON	0384;0359
SINGER	0359;0077;0060;0115;1227;0025;0024;0513;0067;0429;0111;0415;0540;1311;1638	SUNKAI	0447;0073;0513;0549;0300;0195	TELEAVIA	0051;0055;0052;0090;0092;0094;0095;0096;0119;0136;0164;0181;0229;0230;0242;0455;0549;1045;1435;1478;1445;2026
SIREL	0025	SUNNY	0415	SUNWOOD	0513;0359
SKANTIC	0052;0075;0082;0083;0067;0137;0540;0178;0162;0252;0390;0431;0539;0556;1016;0222;1713	SUNSTAR	0536;1639;0322;0359;0513	TELECHROM	0424;0513
SIREL	0025	SUNWATT	0111	TELECOR	0540;0513
SKANTIC	0052;0075;0082;0083;0067;0137;0540;0178;0162;0252;0390;0431;0539;0556;1016;0222;1713	SUPERSONIC	0539;0544;1637;0415;0513;0359;1094;0322	TELEFAX	0359

TELEFUNKEN	0051; 0092; 0094; 0095; 0107; 0111; 0119; 0141; 0164; 0229; 0242; 0378; 0524; 0528; 0540; 0513; 0579; 1191; 1269; 1301; 1616	TRILUX	0540	WATSON	0111; 0080; 0097; 0105; 0114; 0115; 0196; 0540; 0262; 0322; 0359; 0536; 0513; 1639; 1651
TELEFUSION	0540; 0513	TSOSHI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	WATT RADIO	0227; 0077; 0115; 0060; 0298; 0067; 0513; 0359; 1657; 0238
TELEGAZI	0391; 0162; 0540; 0513	TTR	0513	WEBER	0359; 0125; 0262; 0322; 0047
TELEKTRON	0359; 0077	TV STAR	0230	WEGA VISION	0149; 0024
TELEMASTER	0513	TVD	0513	WEGA VOX	0374; 0359; 0556; 0302; 0322; 0528; 0540; 0141; 0097; 0057; 0513
TELEMISTER	0540	UHER	0153; 1149; 0238; 0108; 0114; 0513; 1637; 0133; 0077; 0540; 1126; 0083	WELLFUND	0424
TELEOPTA	0359	ULTRAVISION	0237; 0290	WELLINGTON	0513
TELEPAC	0359	ULTRAVOX	1639; 0077; 0354; 0067; 0513; 0406; 0125; 0115; 0189; 0050; 0111; 0024	WELTTECH	0557
TELEPOINT	0513	UNDERWOOD	1391	WELTBUCH	1639; 0540; 0114; 0513; 1638; 1453
TELERTEN	1637	UNIC RADIO	0025; 0067; 0230; 0435; 1657	WESTON	0435; 0540; 0424
TELESONIC	0513; 1338	UNITRON	1338	WESTWOOD	0513; 0540; 1338
TELESTAR	0374; 0359; 0322; 0536; 0336; 0111; 0302; 0513	UNITRONIC	0359	WHARFEDALE	0540; 1338
TELESYSTEM	1548; 1475; 0513; 2008; 2395; 1496; 4551; 0540	UNIVERSUM	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0205; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 1126; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	WHITE WEST- HINGHOUSE	0067; 0077; 0083; 0108; 0114; 0115; 0131; 0136; 0153; 0227; 0295; 0322; 0359; 0374; 0424; 0435; 1149; 0540; 0513; 1639; 1658; 0230
TELETECH	0097; 0513; 0057; 0359; 0540	UNIVOX	0024; 0237; 0230; 0162; 0540	WILSON	0513
TELETON	0067; 0108; 0153; 0052; 0083; 0149	UNK	0025; 0057; 0375; 0230; 0513	WINDSOR	0513; 0097
TELEVIEW	0540; 0513	URANIA	0329; 1126; 0077; 0025; 1124; 0237; 0238; 0131	WINDSTAR	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700
TELEXA	0077	URANYA	0354; 0359; 0114; 0513; 0227; 0136; 0225	WINDY SAM	0540
TELRA	0111; 0513	UTAX	0067; 0359	WINNER	1531; 1346; 0359
TEMCO	0195	VANGUARD	0067; 0083; 0359	WINSTON	0424; 0513
TEMPEST	0540; 0513; 0067; 0359; 0262	VASILINEC	0359	WINTERNITZ	0359; 0067; 0497; 0354
TENNESSEE	0540; 0513	VECO	0359; 0111	WORLD TECH	0513
TENSAI	0060; 0066; 0067; 0077; 0097; 0111; 0114; 0195; 0238; 0262; 0282; 0302; 0354; 0359; 0415; 0540; 0542; 0513; 1639; 0230	VENTANA	0204	WORLDVIEW	0513; 0359; 0544; 0111; 0415
TENSON	0359	VESTEL	0042; 0057; 0083; 0097; 0230; 0298; 1423; 0540; 0513; 1639	WOW	1450
TESLA	0024; 0230; 0111; 0513; 0415; 0262; 0237; 0528; 0540	VEXA	0424; 0359; 0067; 0513	WREMEN	0238
TESLA SLOW	0024; 0230; 0111; 0513; 0415; 0262; 0237; 0528; 0540	VICEROY	0329; 1082; 0067; 0322	XCELLENT	1338; 1638; 0513
TETRAN	0230; 0114	VIDECON	0111	XENA	0204
TEVION	0540; 0557; 0513; 1377	VIDEOLOGIC	0262; 0067; 0322	XONYCS	0513
TEXET	0067	VIDEOMAC	0067; 0322	XRIPTON	0513; 1638; 0374; 0540
THES	1440	VIDEON	0513	YAMISHI	0424; 0359; 0540; 0544
THOMAS	0544	VIDEOSAT	0057; 0125	YAMO	0262
THOMSON	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	VIDEOSYSTEM	0513; 0540	YOCAN	0540
Thomson	5013	VIDEOTON	0153; 0060; 0067; 0097; 0111; 0119; 0178; 0290; 0302; 0374; 0391; 0435; 0441; 1423; 0540; 0230	YOKO	0359; 0207; 0322; 0067; 0092; 0540; 0354; 0125; 0329; 0435; 0262; 0290; 0513; 0230; 0516
3004		VIDEON	0513	YORK	0262
Thomson	5023	VIDEOSAT	0057; 0125	YOSHITA	0513
2100		VIDEOSYSTEM	0513; 0540	YOTAKA	0513
THORN	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	VIDEOTON	0153; 0060; 0067; 0097; 0111; 0119; 0178; 0290; 0302; 0374; 0391; 0435; 0441; 1423; 0540; 0230	YUMATU	0322; 0359; 0111; 0374; 0415
TIME	1537; 1489; 0513	VIDEON	0230	ZAMPA	0052
TMK	0196; 0547	VIDEOSAT	0057; 0125	ZANELA	0311; 0445; 0321
TOBISHI	0262; 0359; 0384; 0195; 0067; 0322	VIDEKRON	0359; 1661; 0114; 0077	ZANUSSI	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
TOBO	0322; 0359	VIDION	0359	ZENOR	0539
TOKAI	0359; 0322; 0435; 0540; 0513	VIDITAL	0322	ZIRWATEL	0495
TOKIWA	0359; 0322; 0435; 0540; 0513	VIISIOLA	0025; 0067; 0114; 0204; 0237; 0435; 0230	ZOPPAS	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
TOKO	0513	VISION 2000	0513; 0359; 0540; 0322		
TOKYO	1608; 0424; 0384	VISION MAGIC	1412		
TOMASHI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	VISIONREX	0025		
TOMITA	0067	VISTAR	0203; 0431		
TOP VISION	0230; 0513; 0435; 0238	VORTEC	0145; 0540; 0513		
TOPSHOW	0561; 0322	VOXSON	0024; 0080; 0136; 0322; 1227; 0556		
TORRE	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	VSM	0181		
TOSHIBA	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	WAGNER	1654		
TOWADA	0230; 0077	WALKIE	0295; 0153		
TRANS. CONT.	1437; 1434; 1453; 1569; 0097; 0540; 1383; 1564; 0513	WALKVISION	0513		
TRANSONIC	1607; 0322; 0536; 0513; 0528	WALTHAM	0513; 0060; 0067; 0097; 0111; 0119; 0178; 0290; 0302; 0374; 0391; 0435; 0441; 1423; 0540; 0230		
TREVI	0424; 1549; 0149; 0359; 0230; 1525; 1343				
TRIAD	0540; 0237; 0513; 0111				
TRIDENT	0067				

# Troubleshooting

**WARNING**

**Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.**

**If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer for help.**

Problem	Solution
The display on the front panel does not light up.	<ul style="list-style-type: none"> <li>- Main cable is not connected. Check that the main cable is plugged into power socket.</li> </ul>
No sound or picture, but the front panel red light is ON.	<ul style="list-style-type: none"> <li>- The unit is in standby mode. Press the standby button.</li> </ul>
No sound or picture.	<ul style="list-style-type: none"> <li>- The satellite dish is not pointing at the satellite. Adjust the dish. Check the Signal Level in the Antenna Setup menu.</li> <li>- No signal or weak signal. Check the cable connections, LNB and other equipment connected between the LNB and the receiver, and/or adjust the dish.</li> </ul>
Bad picture / Blocking error	<ul style="list-style-type: none"> <li>- The satellite dish is not pointing at the satellite. Adjust the dish.</li> <li>- Signal is too strong. Connect a signal attenuator to the LNB input.</li> <li>- Satellite dish is too small. Change to a larger dish.</li> <li>- LNB noise factor too high. Change to an LNB with lower noise factor.</li> <li>- The LNB is faulty. Change the LNB.</li> </ul>
The RCU is not working.	<ul style="list-style-type: none"> <li>- Battery exhausted. Change the battery.</li> <li>- RCU is incorrectly aimed. Aim the RCU at the unit, or check that nothing blocks the front panel.</li> </ul>
I'm not able to record on my external hard disc/pendrive.	<ul style="list-style-type: none"> <li>- Disc is not formated to FAT32. Format this disc.</li> <li>- Your pendrive is too slow therefore PVR function has been disabled. USB flash memory should support USB 2.0 with writing speed over 8 MiB/s for stable recording and playing. Use another faster device.</li> <li>- Device were not uninstalled. Disc checking is in progress. Please wait.</li> <li>- Device is not supported. Use another supported device.</li> </ul>

## Satellite Tuner

Input Frequency	950 to 2150 MHz
Input Level	-65 to - 25 dBm
LNB Supply	13.5V / 18.5V / OFF, max 500 mA
Demodulation Type	QPSK, 8-PSK
Symbol Rate	2~45 MS/s (DVB-S), 10~30 MS/s (DVB-S2)

## Terrestrial Tuner

Input Frequency	174 to 860 MHz UHF & VHF
Input Level	-90 to - 35 dBm
Band	6, 7, 8 MHz
Waveform	COFDM

## Audio/ Video Processing

Audio Standard	ISO/IEC 13818-3
Audio Decoding	MPEG-1 & MPEG-2 layer I and II
Audio Sampling Freq.	32, 44.1 48kHz
Video Standard	ISO/IEC 13818-2, MPEG-2 MP@ML, MPEG-4 AVC/H.264HP@L4
Aspect Ratio	4:3, 16:9
Video Resolution	1920x1080i, 1280x720P, 720x576 (PAL), 720x480 (NTSC)

## Power Supply

Input voltage	AC100 – 240V, 50/60Hz
Power consumption	30W

## Physical Characteristics

Rear Panel Connectors	1x LNB IN 1x LNB LOOP through output 1x ANT IN 1x ANT LOOP through output LOOP through output 2x Audio L/R (RCA) 2x SCART 1x Video SIGNAL (RCA) 1x S/PDIF (Optical) 1x HDMI 1x Y Pb Pr 2x RJ45 (Ethernet)
Front Panel Connectors	1x USB 2.0
Dimensions (w x h x d)	370 x 60 x 262 mm
Weight	approximately 2,8 kg
Operation Temperature	0 to 40 °C
Storage Temperature	-40 to 60 °C
Storage Humidity	20 - 95%

*Specifications subject to change without prior notice*

# Glossary

---

**CA - Conditional Access** - Encryption system used to secure content and grant access only to subscribers.

**CAM - conditional access module** - is an electronic device, usually incorporating a slot for a smart card, which equips a set-top box with the appropriate hardware facility to view conditional access content that has been encrypted using a conditional access system.

**CI - Common Interface** - is the slot on a digital television receiver into which a conditional access module (CAM) may be inserted for satellite television. A receiver with a common interface allows the user to access encrypted television broadcasts as opposed to free-to-air (FTA) channels.

**DVB-S** is the original Digital Video Broadcasting forward error coding and modulation standard for satellite television. DVB-S is used in both MCPC and SCPC modes for broadcast network feeds, as well as for direct broadcast satellite services. The transport stream delivered by DVB-S is mandated as MPEG-2. Today the main use for this standard is the distribution of SDTV services.

**DVB-S2** is an enhanced specification to replace the DVB-S standard. Today the main use for this new standard is the distribution of HDTV. The development of DVB-S2 coincided with the introduction of HDTV and H.264 (MPEG-4 AVC) video codecs.

**DVB-T** is a standard for the broadcast transmission of digital terrestrial television. DVB-T use of source coding methods for MPEG-2 and, more recently, H.264/ MPEG-4 AVC as well as audio encoding systems. Today the use for this standard is the distribution of SD and HDTV services.

**EPG - Electronic Program Guide**, also known as an Interactive Programme Guide or IPG, provides an on screen guide to channel listings, programme information or pay per view events.

**FTA - Free-to-air** - broadcasts that are sent unencrypted and may be received via any suitable receiver.

**JPEG**: A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**LNB - low-noise block converter** - is used in communications satellite (usually broadcast satellite) reception. The LNB is usually fixed on the satellite dish.

**MCPC - multiple channels per carrier** - several subcarriers are combined into a single bitstream before being modulated onto a carrier transmitted from a single location to one or more remote sites.

**Monoblock LNB** - is a unit consisting of two LNBs and is designed to receive satellites spaced close together.

**Pay-TV - Pay television or Premium Television** refers to subscription-based television services, provided digital cable or satellite, but also by digital terrestrial methods.

**SCPC - Single channel per carrier** - refers to using a single signal at a given frequency and bandwidth.

**STB - Set-top box** - Receiver device that processes an incoming signal from a satellite dish, aerial, cable, network or telephone line.

**TP - Transponder** - One of the transmitters on a satellite. A transponder transmits on a particular frequency to which a set-top box must tune to receive a signal. Typically each transponder can carry multiple compressed digital television channels.

**DiSEqC - (Digital Satellite Equipment Control)** is a communication protocol for use between a satellite receiver and a device such as a multi-dish switch or a small dish antenna rotor. It is compatible with the actuators used to rotate large C band dishes if used with a DiSEqC positioner.

**USALS - (Universal Satellites Automatic Location System)** - is a satellite motor protocol that automatically creates a list of available satellite positions in a motorised satellite dish setup. It is used in conjunction with the DiSEqC 1.2 protocol.



**[www.ferguson-digital.eu](http://www.ferguson-digital.eu)**