

ARIVA

User manual



T265

English

 **FERGUSON**

WARNING !!!



Ferguson receivers support recording on external hard disk drives (HDDs) and flash memories (pendrives). In all instances, the correct operation of the recording function depends on the type of connected memory! You must read the following limitations.

REMEMBER:

1. In order to use an external USB memory, the memory must support the USB 2.0 standard. To ensure stable recording and playback, **you must use a memory with a recording speed of 9.0 MB/s or greater**. Slower hard disk drives and flash memories may not function properly, have problems with recording (image jitter), or not function at all!!!
2. Only disks with one basic NTFS or FAT32 partition (we recommend using the NTFS format) will function properly. If you do not have such a format, prepare the disk on your computer before connecting it to the receiver.
3. Highly fragmented or used memories may also not operate smoothly or correctly.
4. External hard disk drives should be autonomously powered, since the built-in USB port is unable to provide sufficient power.
5. Only one of the two USB ports can be used at the same time!

CAUTION

1. Under no circumstances should you disconnect the USB device from the receiver during recording or playback. Disconnecting during operation may cause damage to the receiver and/or flash memory, and to the recorded data.
2. Do not touch the working device (and in particular the USB connector) with wet hands. Risk of electric shock and permanent damage to the receiver!

SAFETY MEASURES

We request that you read the instruction manual and recommendations set forward therein. Also remember to correctly position the antenna!



In order to avoid an electric shock, never open the housing. Damage to the warranty seal shall void the warranty.



Disconnect the device from the mains during thunderstorms or when it is not to be used for an extended period of time. Please remember that the warranty does not cover damage to the equipment caused by a lightning strike.



Do not expose the device to direct sunlight. Place it away from sources of heat and humidity. Do not cover ventilation ducts, in order to ensure the correct circulation of air.



 
Place the device horizontally on a flat, even and stable surface.



If you move the device from a room that is warm to one that is cold (or vice versa), wait at min. 1 hour before connecting it to the mains. Otherwise, problems may arise.



The device should be placed away from vases, bottles, aquariums and other water containers in order to avoid damage. Do not touch the mains plug with your bare hands.



Do not place any objects on the housing of the device. This may cause overheating and reception problems.

Before commencing maintenance or installation work, disconnect the receiver from the mains. Do not clean the receiver with alcohol or liquids containing ammonia. If necessary, clean it with a soft, lint-free cloth wetted with a gentle solution of water and soap.

- Do not connect any cables when the mains plug is in the socket.
- Check the condition of your cables. Damaged cables may cause a fire.
- Please disconnect the receiver from the mains before connecting any cables.

DOWNLOADABLE SOFTWARE

Ferguson has taken every effort to provide users with software updates in order to ensure that the parameters of the terrestrial television receiver are up to date. Ferguson reserves itself the right to amend, change or modify the software used in the terrestrial television receiver as it shall choose and without prior notification. The latest version of the software is available on the website <http://www.ferguson-digital.eu>

ABOUT THE INSTRUCTION MANUAL

Ferguson Sp. z o.o. has made every effort to provide the most current information about its products. Ferguson Sp. z o.o. does not grant any guarantee as to the contents of the present instruction manual and disclaims any implied guarantees concerning market value or suitability for specific purposes. The information contained herein is an instruction intended to enable the correct usage and maintenance of the receiver.

Ferguson Sp. z o.o. reserves itself the right to introduce amendments, changes or translations of the instruction manual without prior notification thereof. For this reason, we recommend you regularly visit our website in order to obtain the latest information.

MARKINGS AND SIGNS APPLIED TO THE RECEIVER



Digital signal transmission logo. This logo informs that the receiver conforms to the Digital Video Broadcasting standards.



Risk of electric shock - do not open. This notice warns the user not to open the receiver housing. The housing may be opened solely by authorized service technicians.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



CE logo. The logo informs that the receiver conforms to the terms and conditions of Directive 2004/108/EC concerning observance by Member States of provisions regulating electromagnetic compatibility, and to the terms and conditions of Directives 2006/95/EC concerning observance by Member States of provisions regulating low voltage electricity and safety with relation to the handling and operation of electrical equipment.



Double insulation logo. This logo informs that the receiver is an electrically safe device, provided that it is used in accordance with the recommendations set forward in the chapter concerning safety.



Hot surface mark
CAUTION: HOT SURFACE. DO NOT TOUCH. The top surface over the internal heat sink may become hot when operating this product continuously. Do not touch hot areas, especially around the "Hot surface mark" and the top panel.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Index

SAFETY MEASURES.....	3
DOWNLOADABLE SOFTWARE.....	3
ABOUT THE INSTRUCTION MANUAL.....	4
MARKINGS AND SIGNS APPLIED TO THE RECEIVER.....	4
BASIC INFORMATION ABOUT THE RECEIVER.....	7
1. Main features.....	7
2. Contents of box.....	7
3. Important instructions concerning handling of the receiver.....	7
4. Remote control.....	8
4.1 Installation of batteries.....	9
5. Front panel.....	10
6. Rear panel.....	10
7. Connecting the terrestrial antenna.....	11
8. Connecting the receiver.....	11
8.1 Connection by means of an HDMI cable (recommended).....	11
8.2 Connection by means of AV cables.....	12
8.3 Connection of an audio system.....	13
8.4 Connection of an external memory.....	13
8.5 Connection of another receiver.....	14
FIRST STEPS.....	15
INFORMATION ABOUT THE USER MENU.....	15
9. Main menu.....	16
10. Channel.....	16
10.1 TV channels list.....	16
How do I move a channel?.....	16
How do I delete a channel?.....	17
How do I add to the group of favourites?.....	17
How do I change a channel name?.....	18
11. Pictures.....	18
11.1 Aspect Ratio.....	18
11.2 Resolution.....	18
12 Search.....	19
12.1 Terrestrial Automatic Scan.....	19
12.2 Terrestrial Manual Scan.....	19
13 Time.....	19
14. Options.....	20
15. System.....	20
15.1 Parental lock.....	20
15.2 Information.....	20
15.3 Factory settings.....	21
15.4 Software Update.....	21
16. USB menu.....	21
16.1 Multimedia.....	21
Music.....	21
Photos.....	22
Video.....	22
16.2 Recordings.....	22
16.3 PVR configuration.....	23
Timer settings.....	23
17. Basic functions supported by the remote control.....	24
17.1 Guide.....	24
17.2 FIND.....	24
17.3 TXT - teletext.....	25
17.4 AUDIO.....	25
17.5 SUBTITLE.....	25
17.6 REC - recording.....	25
SEMI-TWIN TUNER.....	26
17.7 PAUSE - time shift.....	26
17.8 INFO.....	27
17.9 FAV - favourites.....	28
17.10 Aerial Adjustment.....	28
ATTACHMENT A - SPECIFICATION.....	29

BASIC INFORMATION ABOUT THE RECEIVER

1. Main features

- ✓ MPEG-2, MPEG-4, MPEG-4 AVC/H.264, **HEVC/H.265** standards
- ✓ Reception of high definition channels
- ✓ Scaling of PAL signals to a resolution of 720p or 1080p
- ✓ Availability of programmable timers
- ✓ Separate lists of favourite, TV and Radio channels
- ✓ Quick channel search function (QuickFind)
- ✓ Teletext and on-screen captions
- ✓ Compatible with DVB-T/T2 system



2. Contents of box

Unpack the receiver and check whether all of the following elements are present

- ✓ 1 x remote control unit
- ✓ 1 x instruction manual
- ✓ 1 x receiver

3. Important instructions concerning handling of the receiver

The screen menu (OSD) simplifies operation of the receiver and has made it possible to reduce the number of keys on the remote control. All of the functions are displayed on the screen and may be controlled by means of a small number of keys. Common functions have been connected in one "MENU". The selected function is coloured. Depending on the selected option, various "function keys" are displayed: red, yellow, green, blue and white in the form of graphics and descriptions. The colours represent various functions in individual "Menus". The selected function is activated by pressing a key on the remote control unit. The so-called function keys are active only when in the appropriate field there is information about it. The user interface makes it possible to navigate within a menu and between functions in a number of different ways. Certain buttons on the remote control allow direct access to functions. The buttons are multi-functional, i.e. their functions depend on previously activated elements.






NOTE:



Please keep in mind that new software may change the functionality of the receiver. Photographs and descriptions included in the instruction manual are for informational purposes only. If you should notice an error, please report it - we shall make every effort to have it rectified.


4. Remote control

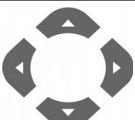Due to the standardization of Ferguson equipment, the majority of these devices use the same remote control unit RCU101.

	Turns the receiver on and sets it in standby mode.
F1	Switching between the list of television and radio channels.
F2	Changes the image resolution. The following resolutions are available: 576i, 576p, 720p, 1080i, 1080p.
1, 2, 3, 4, 5, 6, 7, 8, 9, 0	Select particular channel number on a channel list. Enter numeric values.
info	Displays information about the current programme.
guide	Displays the electronic programme guide.
VOL- VOL+	Used to change the volume level (lower, higher).
	Switches the sound on and off.
ch+ ch-	Switches to the next or previous channel.
	Menu navigation.
	Confirmation of changes. Turn on the channel list.
menu	Displaying the main menu on the screen.
back	Returns to the previously displayed channel. Return to the previous submenu, exit the menu.
text	Switches on the teletext on the screen, if available.
audio	Switching the soundtrack version, if available.
sub	Turn on or off screen subtitles, if available.
find	Quick search for channels according to the consecutive letters of the name.
	Buttons for handling the recording, playback and time shift functions.
pvr	Access to the media and recordings as long as the USB memory device is connected.
fav	Displays the favorite channel list.
P+ P-	Jump a few positions up or down.



 4.1 Installation of batteries

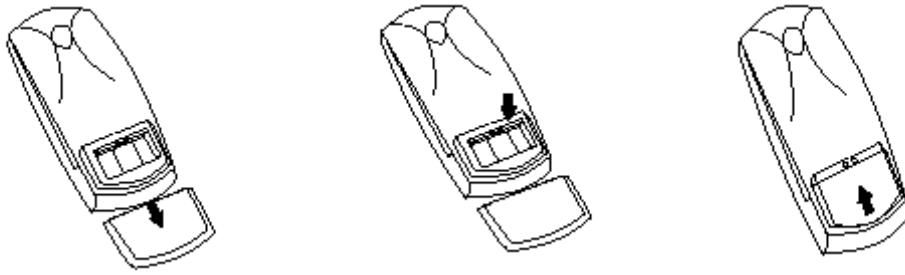

Remove the cover of the battery compartment on the rear panel of the remote control unit; slide it downwards and put it aside. Insert two AAA (R03) batteries into the compartment, observing the indicated polarity. **Do not mix old and new batteries, or batteries of different types.** Replace the battery compartment cover. Slide it upwards until it locks in place.

5. Front panel



6. Rear panel



ANT IN:	Input of the concentric cable from the antenna.
LOOP OUT:	Output signal to another receiver. It is not RF-out.
HDMI:	Digital image and sound output to HD TV.
USB:	Port for connecting an external USB memory device.
AV:	Analog audio-video output.
SPDIF:	Digital audio output.
DC 5V:	Power supply

7. Connecting the terrestrial antenna

There are no special antennas for DVB-T. For collection of digital television, the same antennas as analog TV reception. There is no need to change the antenna system. It is worth to check the quality and condition of the plant, which has so far been used for analog TV reception. Reception problems can be weathered with old antenna systems, or grid antennas. It is recommended to use directional antennas with signal amplifier, depending on the particular situation you may also establish impedance transformer. Indoor antenna may be used only in areas with high signal intensity.

8. Connecting the receiver

The following illustrations show cable connections for a television and other devices connected with the receiver. If you require any assistance in connecting individual devices, contact your local technician. Before connecting or altering cabling, disconnect the receiver from the mains !!!

 


Note: Availability and type of connection depends on your receiver model! Not all of the connections are applicable for your receiver!


8.1 Connection by means of an HDMI cable (recommended)

1. Connect the antenna to the ANT IN socket of the receiver.
2. Connect the HDMI to the receiver out and the television in.

Connection by means of an HDMI cable allows you to obtain the highest image quality.

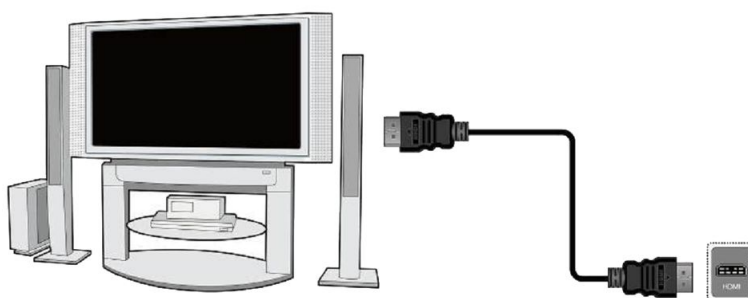


 If you have an amplifier with an HDMI out and in, which supports sound sent over HDMI, connect the devices by two HDMI cables. As in the following figure: one cable to the amplifier, and the other from the amplifier to the television set.

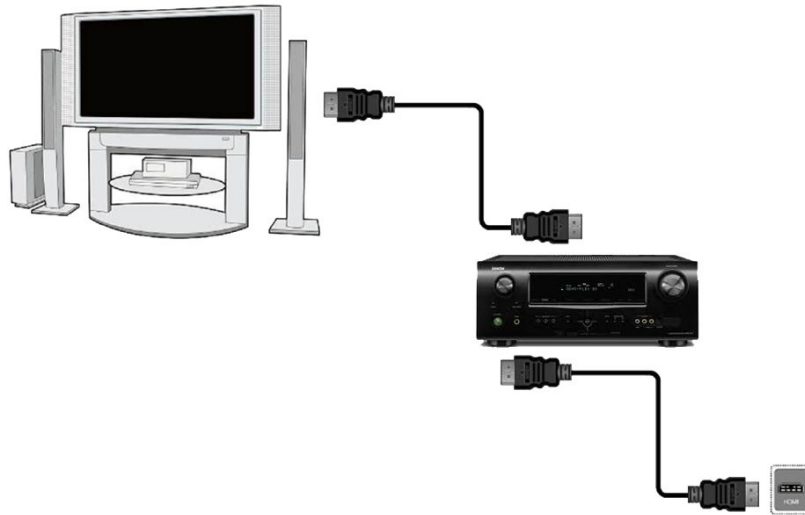

8.2 Connection by means of AV cables

 1. Connect the antenna to the AV socket of the receiver.
2. Connect the television to the port in accordance with the description.

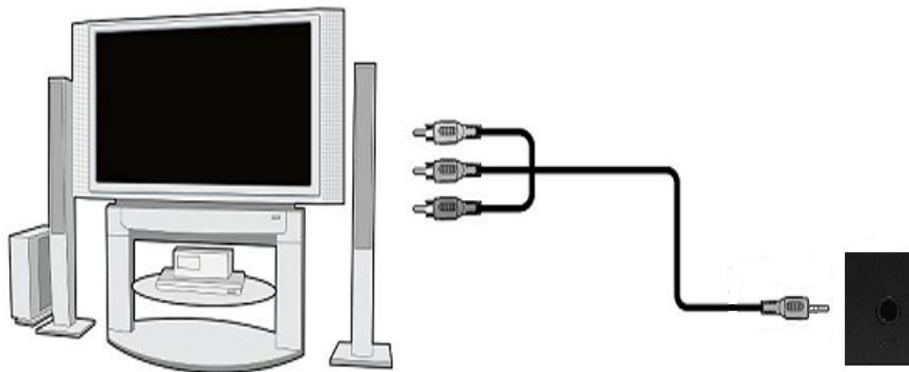

- 4 - GND
- 3 - Video
- 2 - Right channel
- 1 - Left channel

 
8.3 Connection of an audio system

- Digital sound (including surround sound, if broadcast) can be obtained from AUDIO socket.
- Analoge sound can be obtained from the same AUDIO output.



8.4 Connection of an external memory


1. The receiver supports all types of hard disk drives in housings that are equipped with an independent power supply. The sole condition is that the hard disk has to have a single basic partition that is formatted in the NTSF (recommended) or FAT32 system.
2. We recommend that you regularly archive data on your PC computer. A large number of files with recordings may slow down cooperation with the receiver (slow loading of the file list).

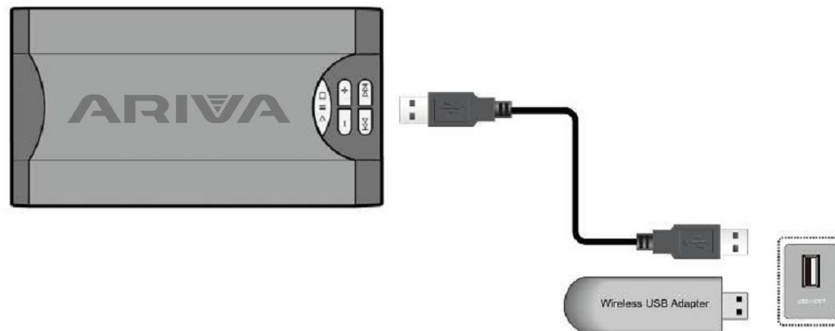

8.5 Connection of another receiver

Another receiver may be connected through the LOOP socket. Please keep in mind, however, that only one device may be used at one time! Permanent damage may result if both are turned on simultaneously.



 **NOTE:** LOOP output in terrestrial receivers is the only signal loop-through. This is not a modulator, so the receiver will not let go of the image decoding (DVB-T and USB) in the form of an analog signal on this connector.

FIRST STEPS

1. Insert the plug of the receiver and other additional devices to a wall socket.
2. Select AV signal source of your television set.
3. Please follow the installation wizard or do the channel scan using one of integrated scan modes.



Note: check all of the connections, i.e. antenna cables, audio and video signal cables, before connecting the receiver to the mains!

INFORMATION ABOUT THE USER MENU

The user interface allows you to use numerous settings and receiver functions. Some buttons on the remote control unit enable direct access to functions of the device. Certain of these buttons have been described, for example Guide, MENU, OK, or coloured for ease of usage. Other buttons are multi-functional and their operation depends on the type of device selected by the user. Hereunder we have presented a brief description of how to use certain device functions available through the user menu.

1. The up/down arrow keys on the remote control are used to move the cursor up and down on the menu.
2. The left/right arrow keys on the remote control are used to move the cursor left and right, and to switch on submenus
3. The OK button is used to enter submenus.
4. The BACK button is used to exit menus or functions.
5. When using a submenu, the OK button is used to confirm your selection; a green background informs that a function is active.

9. Main menu

Press the MENU button on the remote control in order to display the following main menu, which contains five items:



 
1. Channels Edit
2. Program Guide
3. Sort
4. LCN
5. ACU

10. Channel

Menu program is used for operation and setting TV channels.




10.1 TV channels list

In this menu you can edit the list of television channels. Editing is effected by means of the colored buttons on the remote control unit. The raised color function is active - select OK on the selected channel in order to use it. BACK, in order to save.

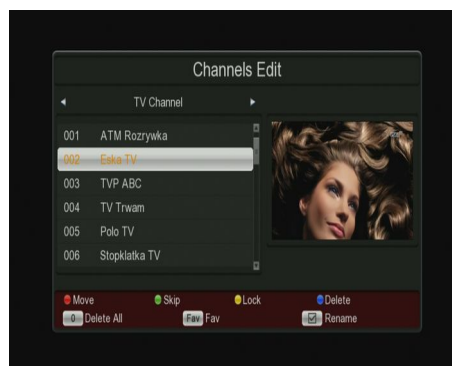


How do I move a channel?

   Proceed to the editing of channel lists. Select a channel and press OK in order to see a preview in a small window. Press the red button in order to turn on the channel movement function. A symbol comprising two arrows will appear next to the channel name.

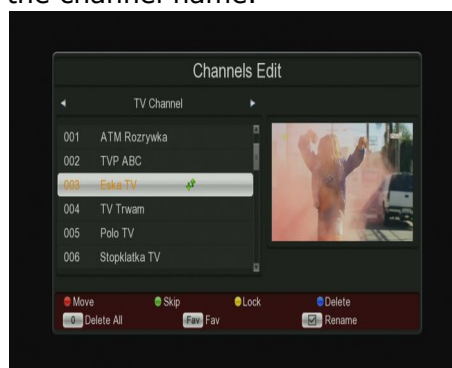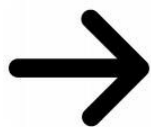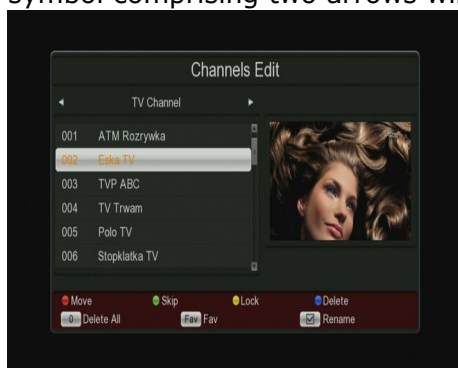

 Press [Red] button and use the up / down arrows move the cursor to the desired position. Press OK to confirm the move.

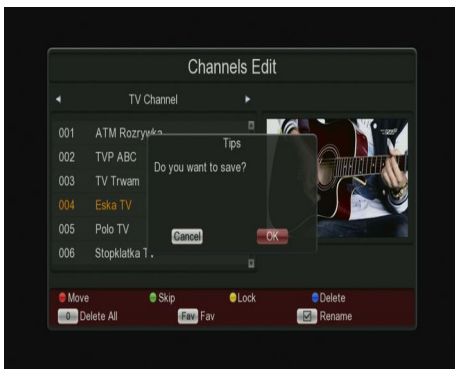


Once you are finished, press **BACK**. A message will appear asking you to confirm the changes made. If you fail to do this, changes in the channel list will not be saved.

Note!: This function is activated when the function LCN is off!

How do I delete a channel?


 
Proceed to the editing of channel lists. Select a channel and press **OK** in order to see a preview in a small window. Press the blue button in order to pass to the channel edition menu. The symbol **X** will appear next to the channel name.

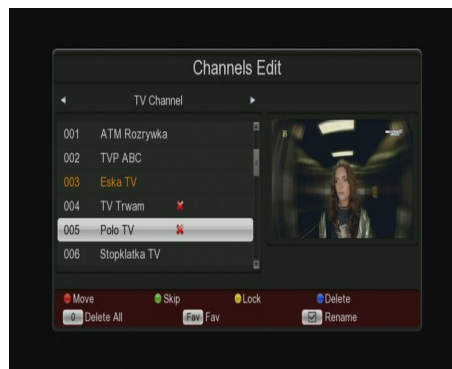


In this way you can mark one or more channels that you want to delete with the **X** symbol. Once you are finished, press **BACK**. A message will appear asking you to confirm the changes made. If you do not do this, the channel(s) will not be deleted.

How do I add to the group of favourites?

  Proceed to the editing of channel lists. Select a channel and press **OK** in order to see a preview in a small window. Press the **FAV** button in order to switch on the add-to-favourite-groups function. A window will appear with a list of favourite groups (names of favourite groups are changed by pressing the renaming ["edit" button]).

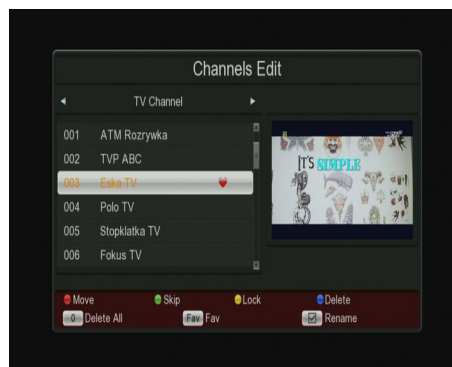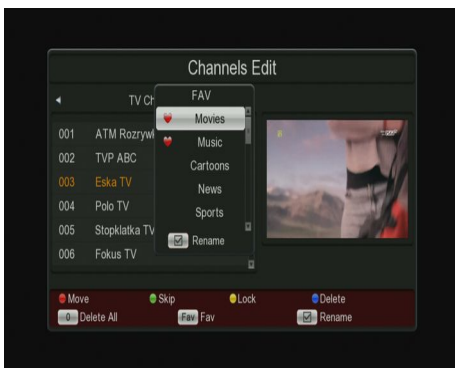

 Use the up/down arrows to select the group to which the selected channel is to be added. Next press **OK** to confirm. Select a channel and press **OK** on this channel in order to add it to the group. The heart symbol, **♥**, will appear next to the channel name.


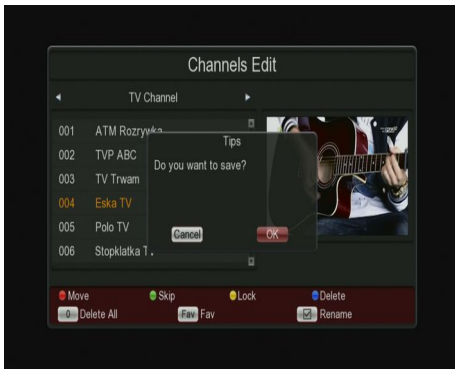


Once you are finished, press BACK in order to switch off the add to favourite groups function.

Having completed the addition of channels to successive favourite groups, press BACK. A message will appear asking you to confirm the changes made. If you fail to do it, the changes made will not be saved!

How do I change a channel name?

  Proceed to the editing of channel lists. Select a channel and press OK in order to see a preview in a small window. Press the Edit button in order to pass to the channel edition menu.

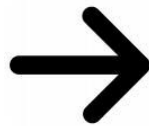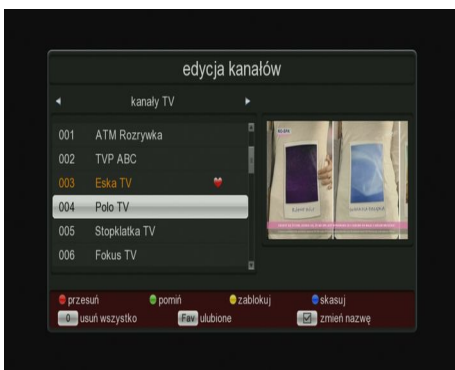

Confirm the new name by pressing the yellow button.

 
11. Pictures

11.1 Aspect Ratio

This function allows you to change the aspect ratio from 7 choices.

11.2 Resolution

This menu is used to set the image parameters. Above all, you should determine the resolution of the image sent over the HDMI connection. Select the highest possible resolution supported by your HD television set in order to obtain the best image quality. The following resolutions are available: 480i, 480p, 720p (50Hz), 1080i (50Hz), 1080p (50Hz). If you select an unsupported resolution, your image will be lost or become illegible – you can always use the **F3** key to return to the basic resolution.

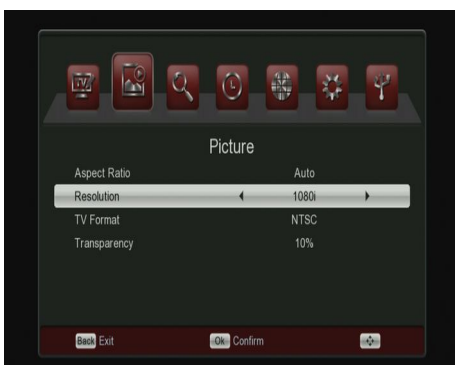


12 Search

The installation menu is used to set antenna installation parameters and to search for channels from terrestrial signal.


12.1 Terrestrial Automatic Scan (recommended method)

 In this menu, you can search for channels automatically - the receiver searches only frequency by frequency according to the saved list of DVB-T. This list can not be edited in a separate menu.

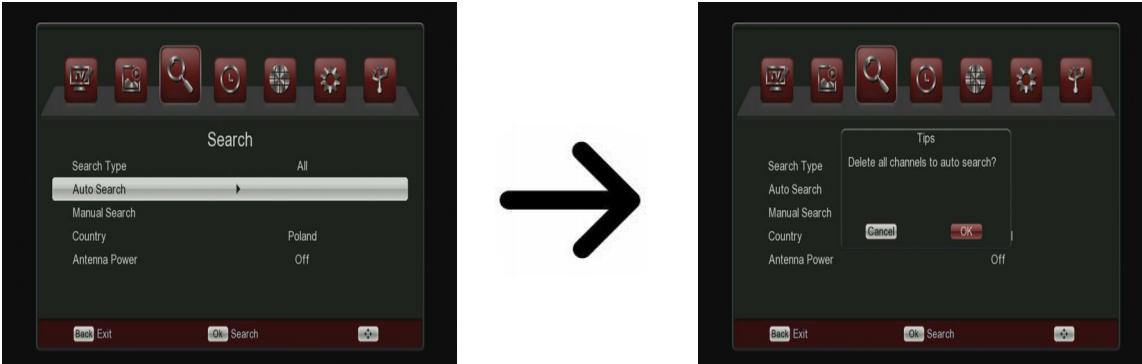


12.2 Terrestrial Manual Scan

 There are two search options manually. Choose the right depending on whether we know the channel or frequency with which it is assigned a channel search.

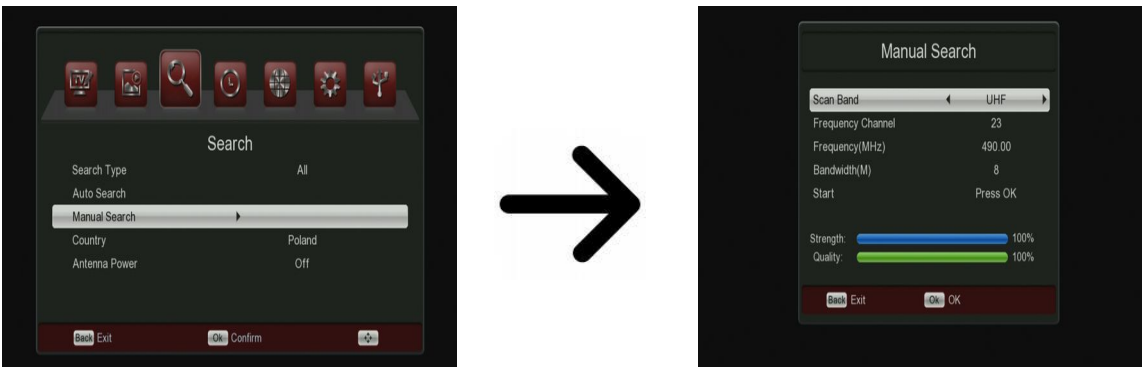

13 Time

 
This menu is used to set the time and region. The receiver can automatically download the time and date from the signal (recommended), or you may set the time manually. If you are using GMT, you should select the correct time shift value (for example +1 hour for Poland) and turn on or off the summer time, depending on the time of year.

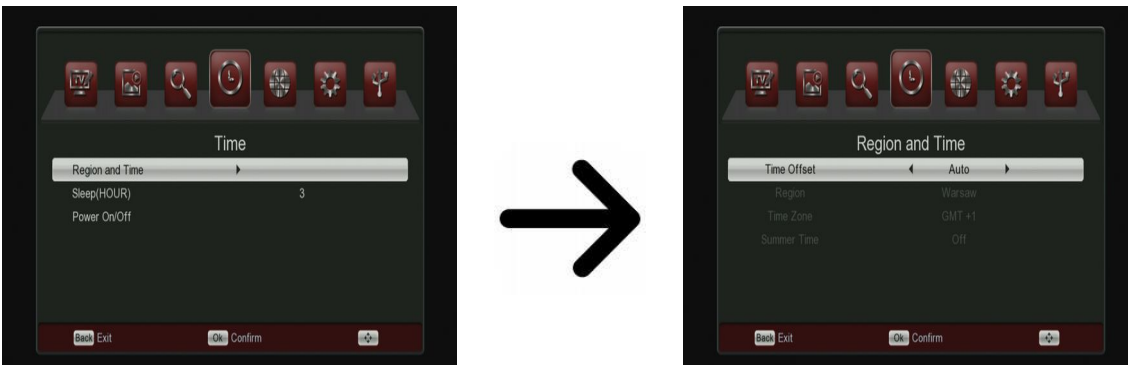

In this menu, you can set the sleep time receiver and times of its startup or shutdown.

14. Options

 This menu is used to define the language in which the receiver's menu is displayed. The preferred and second language options refer to audio soundtracks. If a given channel supports more than one audio soundtrack, the receiver will by default search for soundtracks in the selected languages in this order. The language of subtitled – as in the case of audio soundtracks, this determines the language of subtitles to be used, provided that such subtitles are available and active.

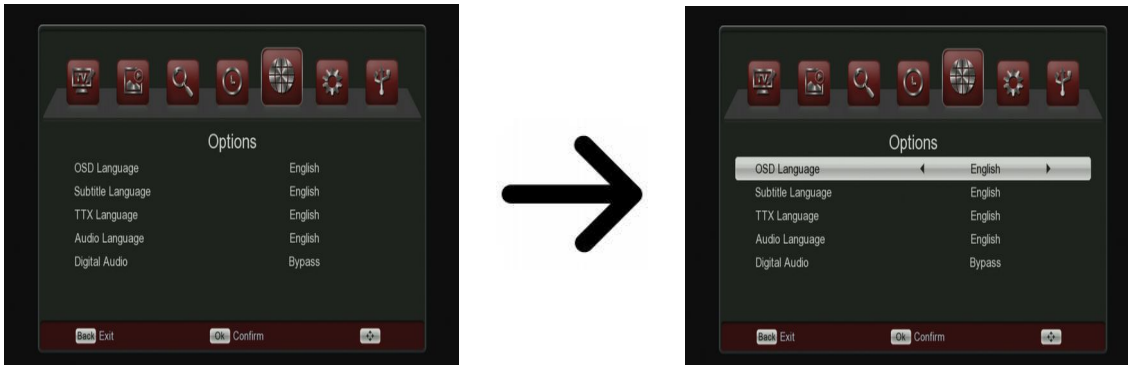


In this menu, you can select the transmission of digital audio PCM (stereo) or Bypass (The signal transmitted to external devices).

15. System


15.1 Parental lock

 In this menu you may specify whether the receiver is to use a parental block or not. In addition, you can turn on or off the password protection function for selected menu options and change the default password. The default password is four zeros: **0000**.

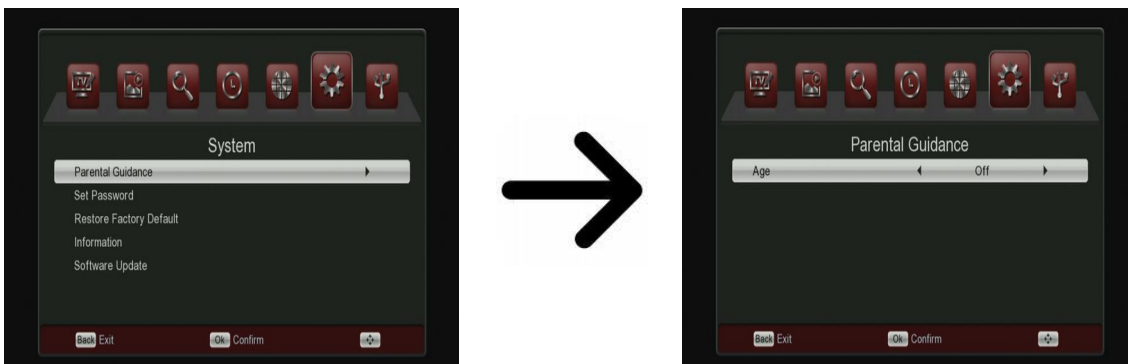

15.2 Information

 In this menu you can obtain detailed information about your software version. The software structure is divided into a number of independent databases.

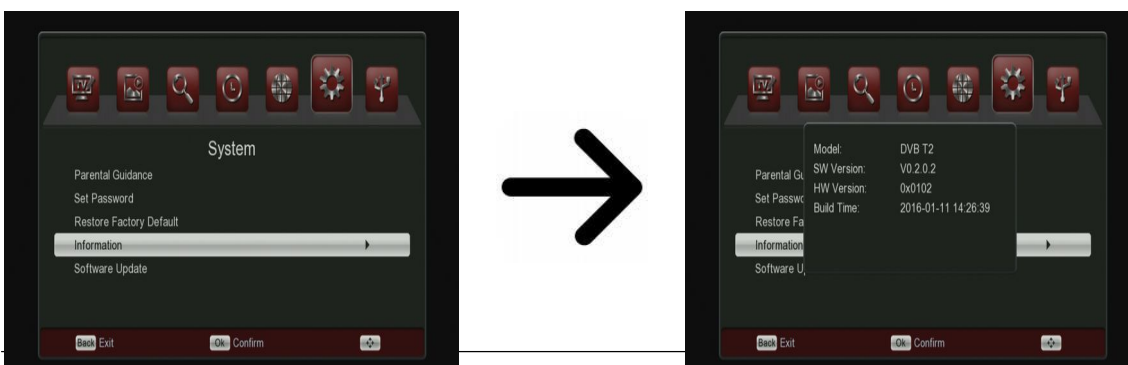


15.3 Factory settings

In this menu you can restore the default settings of the receiver. The default password is four zeros: **0000**.




 Note: Restoration of default settings results in the removal of all user settings and the recall of a default channel list; in some cases, no channel list will be available. All changes introduced by the user, including the channel list and configuration of terrestrial antenna settings, will be removed!!!

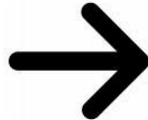

15.4 Software Update

 This menu is used to update the receiver. The latest software is available on the manufacturer's website. The downloaded file needs to be unpacked and recorded to an external USB memory device. Next, select it by means of the LEFT/RIGHT buttons and press start in order to commence the update.

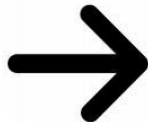


16. USB menu

16.1 Multimedia


The receiver is equipped with a simple multimedia player. You can use it to listen to music, watch photographs and films, and - first and foremost - play back recordings. The player is available through a menu option.

 Music

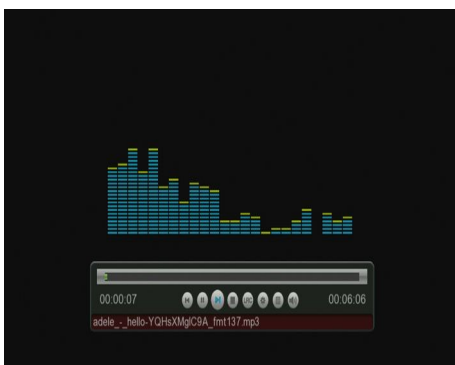

In this tab you can support a music files such as MP3, AAC. There are a few additional functions that can be operated by means of the functional keys described in the lower part of the screen.

 Photos

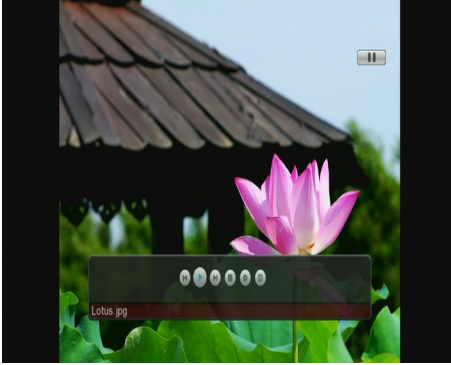

In this tab, you can view photographs in JPEG, BMP format. There are a few additional functions that can be operated by means of the functional keys described in the lower part of the screen.

Video



In this tab, you can play back movie files. Also high resolution files can also be played back.

Recognized multimedia file extensions are listed below.

Not all files with those extensions are playable - some files may include not supported codecs and/or settings.

Video files containers: AVI, MKV, MPEG, MPG, M2TS, VOB, TS, TRP, MP4, DVR (default record format)

- |
- |-> video codec supported in containers: mpeg2, XVID, H.264 (up to 8 RF), H.265
- |-> audio codec supported in containers: MP3, AC3

CAUTION !!!

- Playback of some files may fail or be incorrect.
- Copy protected content is not playable.
- Playback may suffer temporary interruptions (image freeze, faster/slower playback, etc) when the audio language (audio track) is changed.
- A damaged movie file may not be played correctly.
- Videos with resolution higher than 1920x1080@25/30P or 1280x720@50/60P may not work properly.
- We do not guarantee smooth playback of movies encoded in profiles level 4.1 or higher in H.264.
- Playback of movie files with video bitrate over 30 Mbps may be incorrect.

16.2 Recordings



This tab is used to play back recordings made using the receiver. Each recording may be deleted.

 
Options available during playback (subtitles, teletext, audio soundtracks) depend on the selected recording format!!!

During playback, press the PLAY button in order to display the information bar. There are a few different methods of quick viewing/scrolling a recording:

1. Use the Fast forward and Rewind buttons to navigate within a current recording and press the PLAY button in order to start viewing from a selected moment.
2. You can set cursor by means of the LEFT/RIGHT buttons and confirm with OK in order to start viewing from a selected moment.
3. Another option of quick scrolling a recording is based on usage of the blue function key. With its help, you can set the time in which the movie is expected to begin viewing.

16.3 PVR configuration

In this menu you can adapt preferences concerning recording to an external USB memory device. In the first option you decide whether you want to use the time shift option. This mode makes it possible to stop the current transmission at any moment by pressing the **PAUSE** button and resume it after a break by pressing the **PLAY** button.

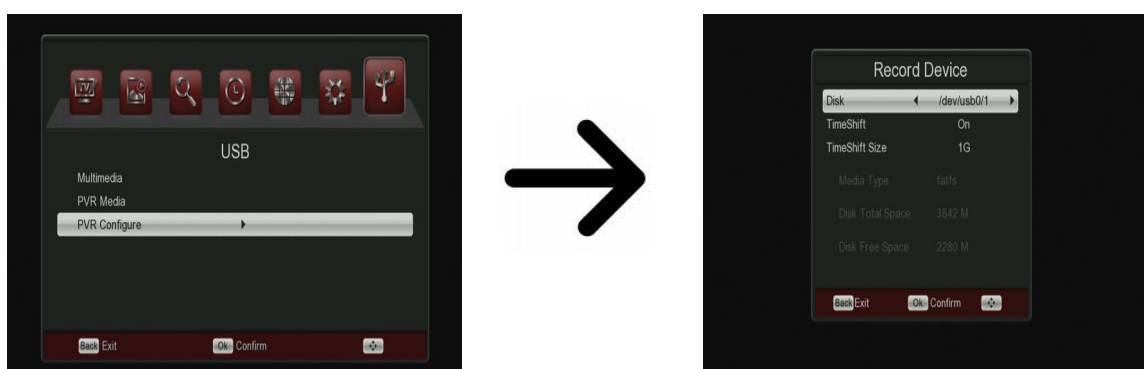



Recordings are automatically split the recording and combined automatically during playback. The "TS file size" specifies the amount of data, after which the recording is split.

Timer settings

This menu serves to programme up to 8 different events. Events enable the automatic switching on or switching of the receiver to a previously planned programme.



  By pressing the GUIDE on the remote control you display a list of channels. Green function key you open a reservation list. Select Add to add the event what you want programmed. Set the mode (open/record) and how often to run the timer. Next set the date, start time, duration and channel you want to record. Press OK to return to the list of events. A new item has been added.

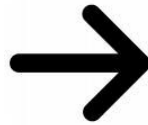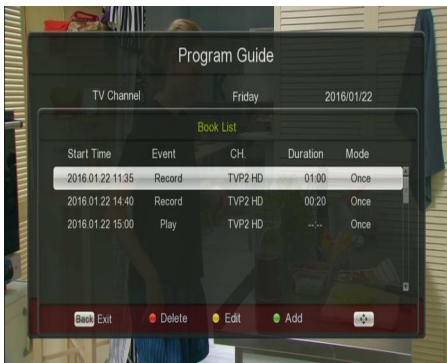


17. Basic functions supported by the remote control

17.1 Guide



This function displays a programme guide. The contents of current, future and detailed information depend on what a given station broadcasts.

 Having selected a programme, you can use the timer function (OK button) to automatically plan the viewing or recording of a given programme.

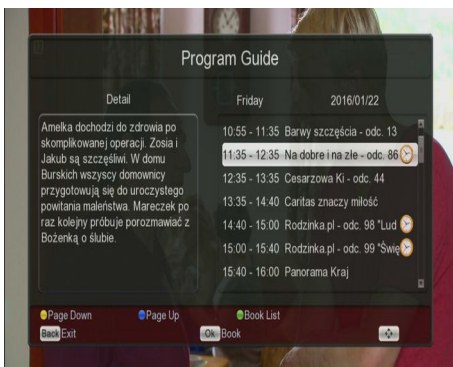

Select the desired programme and press **RED** button in order to view detailed information about the programme. Keep in mind that the availability of the said information depends on what a given television station is broadcasting.

17.2 FIND



The FIND button calls up the quick channel search function. Enter successive letters by choosing them one by one. The results list is updated after each successive letter is added. Press the blue button in order to proceed to the list containing results of the search procedure and select the desired channel.

17.3 TXT - teletext



This function displays the teletext, provided that it is broadcast by the selected television station. Keep in mind that the correct code page (diacritical marks) is displayed depending on the language settings made in the language settings menu!

17.4 AUDIO



The green audio button displays a window with available audio soundtracks. You can select any of the broadcast soundtracks. Please keep in mind, however, that audio soundtracks with AC3 surround sound may be played back solely through an amplifier connected to the digital audio out – Coaxial or Optical.

This function is also available when playing back a recording, provided that the material was recorded in TS format. Audio soundtracks other than those recorded by default will be available during playback only if they are not scrambled or scrambled in the same way as the default recorded soundtrack.

Option [level] can adjust the volume of the channel. This option works independently for each channel.

17.5 SUBTITLE




The yellow button displays a window with available on-screen captions /subtitles. You can select any of the broadcast subtitles. If subtitles for a given language have been activated in the menu, these will be marked as default on the list. You can, however, select any of the broadcast subtitles. Keep in mind that the availability of subtitles and the way in which they are displayed depends on the broadcaster!

This function is also available when playing back a recording, provided that the material was recorded in TS format.

17.6 REC - recording

 *This function is available only when an external USB memory device is correctly connected!!!*




1. Select a channel and press the REC  button. The present channel will now be recorded.

2. If you press the REC button again, a list of options will be displayed, where you can determine the duration of the recording.

3. The information bar indicates which programme you are recording and viewing.

4. In order to terminate recording, press the STOP button and confirm your decision.

 *Keep in mind that during recording, the information bar may be hidden by means of the BACK button. In order to restore the bar, press REC again.*

Browsing through a recording – during recording.

1. The contents of a recording are available for browsing in the course of recording.
2. Use the PAUSE button forward and Rewind buttons to navigate within a current recording and press the PLAY button in order to start viewing from a selected moment.
3. You can set cursor by means of the LEFT/RIGHT buttons and confirm with OK in order to start viewing from a selected moment.

SEMI-TWIN TUNER

The receiver is equipped with a so-called SEMI-TWIN TUNER; during recording, this function allows you to watch a different channel broadcast on the same frequency.

1. When recording a channel, press OK in order to display a list of channels available from this transponder.
2. If the recorded channel is not scrambled (FTA) - select any other channel, which you want to watch.
3. If the recorded channel is scrambled - select any other not scrambled (FTA) channel, which you want to watch.
4. You can stop recording at any time by pressing the STOP button.

17.7 PAUSE - time shift




 *This function is available only when an external USB memory device is correctly connected!!!*

The time shift mode allows the user to control the television broadcast by "pausing" and then resuming it from the same point. From the moment you switch on the time shift mode, the Ferguson receiver will constantly record the signal from the terrestrial in a buffer. The buffer is created automatically on the external USB memory device.

 


Pausing the television broadcast

1. Press **PAUSE**
2. The time elapsed bar will now be visible on the screen
3. Press the **PLAY** button in order to resume the television broadcast. The Ferguson receiver continues to record the television broadcast when viewing the previously broadcast programme.

 *Keep in mind that during buffer playback, the information bar may be hidden by means of the BACK button. In order to restore the bar, press PAUSE/PLAY again.*

Scrolling the contents of the time shift buffer (playback of an earlier television broadcast)

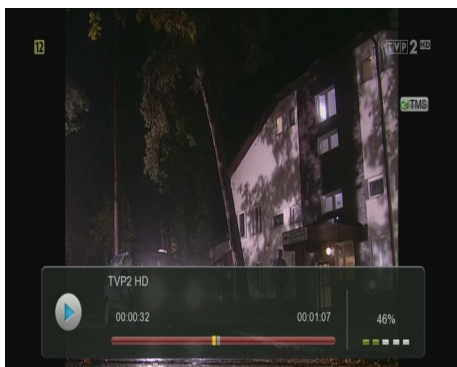


1. Switch on the time shift mode by pressing PAUSE.
2. The contents of the time shift buffer can now be scrolled through.
3. Use the Fast forward and Rewind buttons to navigate through the time shift buffer and press PLAY in order to start playback.
4. You can set marker by means of the LEFT/RIGHT buttons and confirm with OK in order to start playback from a selected moment.

Switching off the time shift mode

Switch off the time shift mode by means of the STOP button.


 *Keep in mind: when no external memory device is connected to the USB port, the PAUSE button is used to temporarily pause the image, i.e. freeze-frame.*

 17.8 INFO

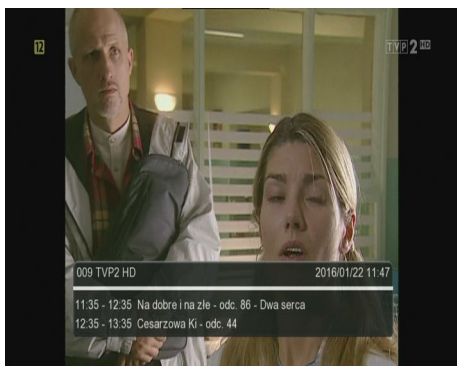

Pressing the INFO button will call up the information bar for the current channel. This contains information about the current and next programmes (if such information is made available by the broadcaster)

 If you press it twice, the receiver will display detailed information about the current and next programme – provided that such information is made available by the broadcaster (select by pressing the LEFT/RIGHT buttons)

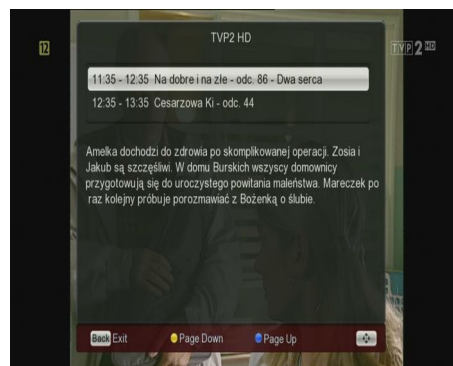


17.9 FAV – favourites



If you press the FAV button, the receiver will display a window with groups of favourites (provided that the user has changed such groups).

17.10 Aerial Adjustment

 Pressing the EDIT button on the remote control you can set the detailed parameters of the terrestrial antenna. By setting or fixing the antenna you should remember that the signal bars appear with a delay!

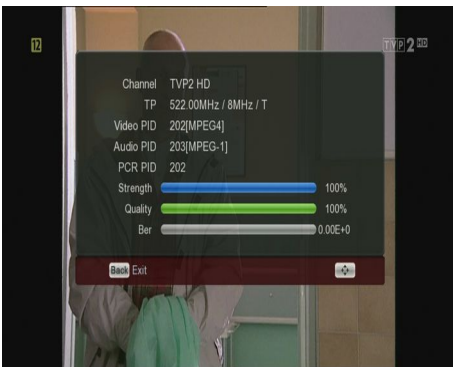

The correct setting of the antenna is indicated by bars presenting the strength and quality of the signal. Both should indicate more than 80% for channel reception to be free of interference.

ATTACHMENT A - SPECIFICATION

Main Features	
STB Type	DVB-T Receiver
Main Chipset	GX3201H
Special Features	
SMPS Type	Adapter
Mechanical	
Dimension	W:134mm,D:88mm,H:27mm
Net Weight	135g
Main Chip Sets	
CPU frequency	660MHz
Flash Memory	4 MB
SDRAM Memory	1PC 64X16 Mbit
DVB-T tuner	
Tuner Type	R836
Frequency Range	50~870 MHz
Input Impedance	75Ω
Active Ant Power	5VDC
TS Demux	
Demultiplexer	MPEG2 ISO/IEC 13818-1
Input Bit Rate	Max 100Mbit/s
Video Decode	
Video Decode	H.265 video (HEVC/H.265), BP/MP/HP up to L4.1& H.263 P3 H.264 video (ISO/IEC 14496-10), BP/MP/HP up to L4.1 MPEG-4 video (ISO/IEC 14496-2), SP/ASP up to L5 AVS&AVS plus MPEG-2 video (ISO/IEC 13818-2), MP@HL MPEG-1 video (ISO/IEC 11172-2)
Aspect Ratio	4:3, 16:9
Video Resolution	1920×1080, 1280×720, 720×480
Audio Decode	
Audio Decode	MPEG-1 layerI/II, PCM downmix IEC958, SPDIF Dolby 5.1 channel, Dolby downmix 2 channel, Dolby Prologic2
Sampling Frequency	32 kHz, 44.1 kHz, 48 kHz
AV Output	
Video Bandwidth	SD:5.0 MHz (-3dB), HD:30 MHz (-3dB)
Video Impedance	75Ω
Video Voltage Level	1.0 Vp-p
Audio Freq. Range	20 ~ 20 kHz
Audio Impedance	600Ω
Audio Voltage Level	2V rms(5.6Vp-p)
Environment	
Input Voltage	5VDC Adapter
Consumption	Max 10 W
Temperature	0~40°C
Humidity	<95%