



FERGUSON

DIGITAL MULTIMEDIA TECHNOLOGY

RCU640 EN  **User manual**
Remote Control
Unit



 **FERGUSON**



EN 

This equipment is marked with the above recycling symbol. It means that at the end of the life of the equipment you must dispose of it separately at an appropriate collection point and not place it in the normal domestic unsorted waste stream. This will benefit the environment for all.

PL 

To urządzenie oznakowane jest specjalnym symbolem odzysku. Po okresie użytkowania trzeba je zwrócić do odpowiedniego punktu zbiórki i nie wolno umieszczać go razem z nieposortowanymi odpadami domowymi. Takie działanie przynosi korzyść dla środowiska.

DE  **AT** 

Dieses Produkt trägt das Recycling-Symbol gemäß der EU-Richtlinie 2002/96/EC. Das bedeutet, dass das Gerät am Ende der Nutzungszeit bei einer kommunalen Sammelstelle zum Recycling abgegeben werden muss (kostenlos). Eine Entsorgung über den Haus-/Restmüll ist nicht gestattet. Dies ist ein aktiver Beitrag zum Umweltschutz.

CZ 

Toto zařízení je označeno výše uvedeným recyklačním symbolem. To znamená, že na konci doby života zařízení musíte zajistit, aby bylo uloženo odděleně na sběrném místě, zřízeném pro tento účel, a ne na místech určených pro ukládání běžného netříděného odpadu. Přispěje to ke zlepšené stavu životního prostředí nás všech.

HU 

A készülék a fenti újratervezési szimbólummal van megjelölve. Ez azt jelenti, hogy a készüléket használati időtartama után egy külön gyűjtőhelyen kell leadni. A normál háztartási hulladékkal és egyéb szeméttel együtt a készüléket kidobni nem szabad. Ezáltal hozzájárulunk környezetünk védelméhez.

ES 

Este equipo está etiquetado con el símbolo de reciclado que puede verse arriba. Esto quiere decir que al final de la vida del equipo, éste debe ser llevado a un punto de recogida específico para equipos electrónicos, y no a los contenedores normales de residuos domésticos. Esto beneficiará al medio ambiente para todos.

RU 

Это устройство обозначено специальным символом утилизации. После истечения эксплуатационного срока следует его вернуть в соответствующий пункт сборки, и запрещено его размещать с не отсортированными домашними отходами. Этим Вы не наносите вреда для окружающей среды.

NL 

Dit Produkt draagt het Recycling-Symbool volgens de EU-norm 2002/96/EC en kan worden gerecycled. Deponeer hem bij een recycle-punt .

Safety Information

- If device is moved from warmer place to a colder one some problem might occur. Please switch off the receiver and turn it on after 1 or 2 hours.
- Don't put any objects on the device.
- The product purchased is a sophisticated electronic device which is not suitable for children under 18 years.
- We do not assume responsibility for damages caused to people or object, deriving from use of the device made by people under 18 years.

User manual

Ferguson has used all the available means to ensure the latest information regarding its products. Ferguson does not give a warranty regarding the contents of this User Manual and waives any implied warranties regarding market value or fitness for specific purposes. The information contained herein provide guidelines allowing the operation and maintenance of the receiver.

Ferguson reserves the right to make changes, corrections or to translate the User Manual without giving prior notice of such changes. Therefore, it is recommended that users visit our website regularly to receive the latest information.

Setup TV via brand name code

1. Switch on the TV for which you wish to use the remote control.
2. Find the code number of your TV brand in the code list (e.g. LG 0075; 0082; 0083; ...).
3. Press TV button for three seconds The POWER button on your remote control lights up, i.e. RCU640 is in set-up mode.
4. You now have to enter the 4-digit device code (e.g. 0075 for LG TV set). If an entry does not occur within 15 seconds, the set-up mode is automatically terminated.
5. The POWER button LED goes out if the remote control accepts the code.

If the POWER button LED flashes twice the code is incorrect; and you need to start from step 2.

If this occurs, re-enter the correct code from the list.

6. Check the function of the buttons on your remote control. If the majority of the buttons on your new remote control do not function correctly, enter another 4-digit device code (e.g. 0082...) from the list under the same brand name. Repeat steps 3 to 6 until all the basic functions operate correctly. The TV is set up correctly as soon as you enter the correct code.

NOTE: Exit the set-up mode by pressing the TV button or OK button. The set-up mode is automatically terminated if a button is not pressed during a 15 second period.

NOTE: After entering the state of setup, ONLY the numeric keyboard, OK, POWER and TV button can work accordingly, the other buttons do not have response when you press them.

Setup TV via auto search

If the set up via brand name and code was not successful or you were unable to find your brand name in the list, you can use the auto search function to find the correct TV code for your remote control.

1. Switch on the TV for which you wish to use the remote control.
2. Point the remote control at the TV. Press and hold down the the TV button for 3 seconds, (or just press TV button for three seconds). The POWER button should start to flash, i.e. the RCU640 is in Auto Search mode.
3. Press MUTE button and then release, the OFF signal is automatically transmitted from the remote control to the TV (code scan). As soon as the TV switches off, immediately press OK button or TV button to terminate Auto Search, now the POWER button LED light goes out.
4. Switch on the TV via the POWER button. Check whether the other buttons on your remote control function correctly. If none of the buttons function (i.e. the search was not be stopped at the correct time) or the majority of the buttons do not function correctly, restart the search (see steps 3 to 4) to find a suitable code. If the majority of the buttons function correctly, set up has been successful. Re-press the TV button to save the code and to terminate the set-up mode.

NOTE: After entering the state of setup, ONLY the MUTE, OK, LEFT, RIGHT and TV button can work accordingly, the other buttons did not have response when you press them.

NOTE: Entering the auto searching mode, it will search backward from the current code backwards ,but you can press LEFT (forward) or RIGHT (backward) to change Search direction.

NOTE: After all codes have been gone through, The POWER button will flash three times and go off. The RCU640 exit from auto search automatically.

Setup TV via manual search

1. Switch on the TV for which you wish to use the remote control.
2. Point the remote control at the TV. Press and hold down the TV button. (or just press TV button for three seconds). Then release the button.
3. The POWER button lights up and the remote control is in set-up mode.
4. Press the POWER button approx. every 1.5 seconds. The device should start to flash, i.e. the device is in Manual Search mode.
5. As soon as the TV switches off (or is reactive), press OK or TV button to save the codes and exit from Manual Search mode, now the POWER button light goes off.
6. Check whether the other buttons on the remote control function correctly. If the majority of the buttons do not function correctly, press the POWER button approx. every 1.5 seconds to initiate the reactive code (manual search is continued, see steps 4 to 5).

NOTE: The Manual Search is automatically terminated if no entry occurs during a 15 second period.

NOTE: After entering the state of setup, ONLY the POWER, OK, LEFT and RIGHT button, and TV button can work accordingly, the other buttons did not have response when you press them.

NOTE: Entering the manual searching mode, it will search backward from the current code backwards, but you can press LEFT (forward) or RIGHT (backward) to change Search direction

Display TV Code

You can call up the TV code which you have set in your new remote control as follows:

1. Press and hold down the TV button simultaneously press number button 1 to display the thousands of the 4-digit code. Count how often the POWER button flashes. If the POWER button does not flash, the number is ZERO.
2. Press and hold down the TV button simultaneously press number button 2 to display the hundreds of the 4-digit code.
3. Press and hold down the TV button simultaneously press number button 3 to display the tens of the 4-digit code.
4. Press and hold down the TV button simultaneously press number button 4 to display the ones of the 4-digit code.

Example for code 0075:

1. Press TV and 1 LED flashes Zero times.
2. Press TV and 2 LED flashes Zero times.
3. Press TV and 3 LED flashes Seven times.
4. Press TV and 4 LED flashes Five times.

Reset / delete function

1. Press TV button for three seconds the POWER button on your remote control lights up.
2. You now have to enter the 4-digit device code 9990.

All the set-up data and commands for TV in the remote control are deleted and the POWER button light goes off.

TV brand codes

@DIKON	1551; 1525	AOC	1540	BEKNETEKNIK	0337; 0207; 1657
A.R. SYSTEM	0237; 0544; 0322; 0513; 0540; 0246	AQP	0096; 0103; 0157; 0295; 0327; 0335; 0549; 1450; 1491; 1649; 1652; 1692; 0351; 1702	BEKO	0141; 0207; 0227; 0230; 0336; 0496; 0540; 0513; 1435; 0557
ACCENT	0322; 0359; 1637; 0540; 0131			BENNET	0540; 0513
ACCUHPHASE	0540	ARC EN CIEL	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	BENSTEN	1511; 0550; 0145; 1491
ACEC	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	ARCAM	0067	BENSTON	0540; 0513
ACER	1363	ARCELJK	0141; 0230; 0557	BEST	0556
ACTION	0359	ARDEM	0141; 0513; 0336; 0557	BESTAR	1657; 0114; 0415; 0359; 0540; 0336; 0513; 0435
ADMIRAL	0024; 0080; 0359; 0428; 0429; 0222	ARGENTINA	0572; 1711; 0569	BIAZET	0513; 0052
ADYSON	0359; 0329; 0067; 0505	ARISTONA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	BIFONIC	0067; 0359
AEA	0540; 0513			BIGSTON	0354; 0359; 0322
AEG	0540; 1423; 0513	ARPHONE	0246; 0114; 0025; 0230; 0359; 0513	BINATONE	0067
AG	0557	ART-TECH	0359; 1638; 0424; 0513	BLACK DIAMOND	0513; 0540
AGASHI	0359; 0322; 0111; 0513	ARTHUR	0075; 0080; 0082; 0083; 0137; 0540; 0178; 0162; 0513; 0390; 0431; 0539; 0556; 1016; 0230; 1702; 0222	BLACK STAR	1608
AGB	0242; 0095; 0119; 0229; 0094; 0090; 0092; 0051; 0052; 0513; 0181; 0055; 0025; 0024	MARTIN	0075; 0080; 0082; 0083; 0137; 0540; 0178; 0162; 0513; 0390; 0431; 0539; 0556; 1016; 0230; 1702; 0222	BLACKSTRIP	0262
AGEF	0262; 0540; 0242; 0359; 0336; 0363; 1611; 0024; 0077; 0311	AS-BERG	0131; 0077; 0302; 0374; 0513	BLACKTRON	0262
AIKO	0262; 0359; 0067; 1608; 0513	ASA	0136; 0066; 0222; 0390; 0282; 0513	BLACKWAY	0351; 0262
AIM	0540; 0329; 0539; 0354; 0237; 0513; 1302	ASORA	0322	BLAUPUNKT	0039; 0069; 0096; 0103; 0148; 0149; 0157; 0266; 0276; 0540; 0544; 0351
AIOSTAY	0136	ASTHON	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0547; 0196; 0067; 1317; 0336	BLAUSONIC	0067
AIWA	1038; 0581; 0513			BLOOM	0540; 0513; 0556; 1399; 1433; 1390; 1386
AKAI	0067; 0070; 0374; 0103; 0111; 0143; 0162; 0262; 0290; 0296; 0298; 0337; 0345; 0354; 0359; 0361; 0375; 0415; 0431; 0222; 0515; 0549; 0556; 0558; 1243; 1311; 1314; 1396; 1423; 0540; 0513; 1652; 0230; 1684	ASTRA	0415; 0329; 0296; 0302; 0359; 0067; 0354; 1485	BLUE SKY	0556; 0557; 1423; 0051; 0097; 0513; 0540; 0549; 0065; 0141; 0262; 0467
AKI	1638; 0513	ASTRO SOUND	0237; 0230	BLUE STAR	0230
AKIBA	0540; 0513; 0262	ASUKA	0067; 0322; 0262; 0230	BOCA	0143; 0196; 0222; 0262; 0322; 0359; 0415; 0513; 1343; 1410; 1423; 0540; 1440; 1469; 1559; 1578; 1587; 1588; 1638; 1639; 1666; 1711
AKIO	1139; 1318	ATAKI	0424	BONDSTEC	0125
AKIRA	1485; 1637; 0141; 0374; 0513	ATLANTIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	BOOTS	0067
AKITA	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540	ATORI	0359	BOSCH/BAUER	0069
AKITO	0540; 0513	AUDIOLA	1432	BOSTON	1621; 0067
AKTRON	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	AUDIOSONIC	0359; 0141; 0262; 0125; 0149; 0111; 1638; 0067; 0025; 1227; 0077; 0230; 0162; 0322; 0060; 0490; 0424; 0336; 0354; 0545; 0540; 0513; 0557; 1657	BOSUN	0001
AKURA	0143; 0231; 0190; 0359; 0322; 1637; 0513; 0540	AUDIOTON	0114; 0359; 0067; 0125	BPL	0540; 0513
ALBA	0415; 0300; 0262; 0230; 0513; 0359	AUDIOVOX	0572	BRANDT	1435; 0051
ALBATRON	1378	AURORA	0024; 0067; 0354	BRANDT ELEC-TRONIQUE	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026
ALBIRAL	0025; 0237; 0513; 0262; 0322; 0125; 0230; 1174; 1639	AUSIND	0131; 0136; 1126	BRAUN	0067
ALBRECHT	1586	AUTOVOX	1423; 0067; 0136; 0131; 1124; 0391; 1126; 1653; 0108; 1367; 0556; 1395; 0513; 0111	BRENDSTAR	0359
ALHORI	0067	AUVISAT	0513	BRINGTON	0067; 0111; 0237
ALKOS	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	AVIOUS	1550	BRINKMANN	0540; 0513
ALL TEL	0550; 0513; 0145; 1383	AWA	0149; 0359; 0067; 0354; 0540; 0513	BRIONVEGA	1622; 0295; 0247; 1367; 1124; 0024; 0111; 0428; 0223; 0222; 1181
ALLORGAN	0391; 0108; 0067	AWATRON	0359	BRITANNIA	0067; 0162
ALTEK	1494; 1399; 1526; 1401; 1395; 1546	AXXWNT	0513	BROKLINE	1319
ALTUS	0557	BAIRD	0375; 0378; 0539	BROKSONIC	0513; 1323
AMBRSSADOR	0196	BANG & OLDFSEN	0024	BROTHER	0322; 0513
AMPLIVISION	0067; 0237	BARCO	0146; 0024; 0090	BROWN	1317
AMSTRAD	0143; 0196; 0222; 0262; 0322; 0359; 0415; 0513; 1343; 1410; 1423; 0540; 1440; 1469; 1559; 1578; 1587; 1588; 1638; 1639; 1666; 1711	BARCOM	0329	BRUNS	0262; 0540; 0242; 0359; 0336; 1611; 0024; 0363; 0077; 0311
ANAM	0540; 0513	BASIC LINE	0203; 0262; 1423; 0424; 0097; 0513; 0354; 0539; 0557; 0230; 0359; 0141	BSR	0300; 0052; 0329; 0230
ANEX	1639; 0513	BASTIDE	0067	BTC	0262
ANGLO	0322; 0359	BAUER	0561; 1302; 0513; 0069; 0275; 0114	BUSH	0097; 0052; 0083; 0513
ANIS	0322; 0336	BAUMATIC	0322	CADMOS	0513; 0246; 0114; 0025; 0230; 0359; 1319
ANITECH	0111; 0513; 0077; 0359; 0505; 0322; 0424; 0329; 0114; 0540	BAUR	0111; 0083; 0103; 0133; 0157; 0162; 0178; 0290; 0337; 0351; 0540; 0359; 0391; 0434; 0467; 0528; 0174; 0513; 1637; 1652; 0495	CALIFORNIA	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654
ANSONIC	0322; 1657; 0336; 0057; 0359; 0077; 0141; 0513	BAZIN	0067; 0441	CAMPER	0230; 0336; 0513; 0141
ANTECNO	0262	BEAUMARK	0547	CANALS	0042
				CANALERA	1363
				CANALSANTE	0230

CANDLE	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	CROWN	0540; 0374; 1639; 1657; 0336; 0359; 0262; 0057; 0513; 0131; 0077; 0097; 0141; 1420	DOMOH	1639; 0513
CANTON	0252	CRYSTAL	0111; 0513	DORIC	0052
CAPSONIC	0322; 0513	CS ELECTRON-ICS	0125; 0067; 0262	DUAL-TEC	0359; 0513; 0153
CARAD	0540; 0513	CTC CLA-TRONIC	0057; 0322; 0114; 0374; 1423; 0067; 0230; 0262; 0415; 0359; 0513; 0077; 0557; 0540; 0227; 0131; 0424	DUMONT	0390; 0066; 0374; 0131; 0282; 0077; 0115; 1639; 0513; 0136; 0024
CARENA	0544; 0513; 0540	CXC	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0547; 0196; 0067; 1317; 0336	DUNAI	0230
CARREFOUR	0540; 0513	CYBERTRON	0262	DURABRND	0557; 0513
CARYONSE	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	CYBTRON	0067; 0025; 0230	DUX	0111; 0540
CASCADE	0540; 0513	CYV	0513	DYNAMTC	0359; 0374
CASIO	1611; 0540; 0409	D-VISION	0554; 0513; 0540	DYNATRON	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
CASONIO	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341	DAEWOO	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	EASY LICING	1525; 1394; 1398; 1399
CAT	4575; 1410	DAICHI	0540; 0359	ECCO	1346
CATHAT	0540; 0513	DAIMOND	1637	ECHO	0561
CCE	0540; 0513	DAINICHI	0067; 0262	ECHOSTAR	0359; 0513; 0067
CDV	1410	DALMAN	1453	ECCO LINE	0513
CELINT	0052	DANSAI	0329; 1608; 0513; 0067	EDAN LINE	0513
CENTURION	0540; 0513	DANTAX	1423; 0513	EDISON	0549
CENTURY	0057; 0024; 1227	DATRONIC	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	EI	0230; 0162; 0513; 1423; 1657; 0227
CGE	0057; 0131; 0227; 0298; 1711; 0374; 0513; 1638; 0230	DCE	0557	EL	1525
CGM	0097; 0227; 0322; 0336; 0359; 0424; 0513; 0064; 1657; 0230	DE GRAAF	0513	ELBE	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
CIE	0060; 0196; 0262; 0354; 0359; 0513	DECCA	0065; 0067; 0111; 1637; 0246; 0254; 0302; 0375; 0540; 0513	ELCIT	0024; 0025; 0060; 0077; 0115; 0359; 1009; 1639; 0230
CIHAN	0230; 0115	DEITRON	0540; 0513	ELECTRO	0359
CIMLINE	0359	DELTON	0557	TECH	
CINEMA	0513	DEMACOLOR	0513	ELEKTA	0359; 0424; 0322; 0354; 0111; 0513
CITIZEN	1324	DENKO	0322	ELEKTRONIKA	1657; 0516
CITY	0359	DENTAL	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	ELEKTRONSKA IND.	0025; 0230
CLARITRONIC	1657	DENVER	1546; 0359; 1638; 0513; 1522	ELEMIS	0230; 0513; 0336
CLARIVOX	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611	DESMET	0246; 0114; 0025; 0230; 0359; 0513	ELG	0540; 0513
CLATRONIC	0540	DEWO	1085	ELIN	0111; 0359; 0513; 0067; 0153; 0162; 0282; 0083; 0066; 0431
CLAYTON	0230; 0513	DHS	0415; 0329; 0296; 0302; 0359; 0067; 0354; 1485	ELITE	0262; 0322; 0114; 0513
COFANDEL	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	DIADDEM	0222	ELLEVISION	0322; 0527
COLOR MAT	0024	DIAMAT	0540; 0513	ELMAN	0025; 0230; 0077; 0196; 0067; 1700
COLUMBIA	0111	DIAMOND	0359; 0354; 1264; 1112; 1121; 1241; 0513; 0540; 1338; 0047	ELSAV	0513
COMBITECH	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540	DIBOSS	0513	ELTA	0359; 0435; 0057; 0067; 0322; 0513
COMET	0540; 0556; 0536; 0262; 0513	DIFFE	1514	EMATEC	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
COMPUTRON	0431; 0415; 0359; 0513	DIGATRON	0540; 0513	EMCO	0057; 0060; 0131; 0227; 0298; 0374; 0435; 0540; 1227; 0467; 0513; 0230
CONCERTO	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	DIGHOME	1435; 0557	EMERSON	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0547; 0196; 0067; 1317; 0336
CONCORDE	0359	DIGILINE	0513	ENERGY	0016; 0017
CONDOR	0114; 0131; 0227; 0337; 0322; 0359; 0374; 0424; 0513; 0540	DIGITOR	0513; 0540	SYSTEM	
CONFORAMA	0431	DIK	0540; 0513; 0359	ENGL	1563; 0230; 1611
CONIC	0002; 0329; 0296	DIKON	1551	ENIE	0513
CONRAC	1435	DINASTY	0359; 0354; 0513	ENZER	0579; 0513; 0561; 1485
CONRAD	0513	DISTAR	1085; 0513	EROICA	0329
CONTEC	0322; 0359; 0197; 0067; 0540; 0424	DIXI	0513; 0540; 1611; 0359	ERRES	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
CONTI.M.	0513	DMTECH	1489	ESC	0067; 0539; 0336; 0513; 0540
CONTIN. EDIS.	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	DOMEOS	0513; 0434	ESTEL	0230
CONTINENTAL	0549; 1639; 0513; 0114	DOMLAND	0047; 0057; 0097; 0111; 0067; 0125; 0133; 0141; 0153; 0052; 0162; 0196; 0540; 0222; 0298; 0312; 0329; 0354; 0359; 0391; 0409; 0434; 0513; 0230; 2315	ETRON	0230; 0384; 1082; 0359; 0513; 0415; 1063
COSMEL	0359; 0490; 0513; 0540			EULANDER	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
COSMOS	0513; 0359; 0262			EUMIG	0114
CRC	0111			EUROCOM	0230
CROSLEY	0115; 0057; 0024; 0131				

EUROLINE	0513; 0540	GALAXY - GALAXIS	0409; 0057; 0227; 0374; 0513; 0067	HAIER	0540
EUROMAN	0111; 0322; 0513; 0067; 0336	GALERIA	0359	HALIFAX	0322
EUROPA	0540; 0513	GBC	0262; 0230; 0359; 0513; 0375; 0354; 1489; 0125; 0197; 0415; 0060; 0424; 0115	HAMMER-STEIN	0322; 0067; 0384; 0422; 1082; 0359
EUROPHON	0067; 0025; 0077; 1227; 0114; 0127; 0238; 0230	GE	0242; 0547; 0051	HAMPTON	0067; 0115
EUROSTATUS	0513	GEANT CA-SONTO	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 0430; 4381	HANIMEX	0262
EUROVISION	1423	GEBER	0162	HANNOVER	1139; 1420
EVELUX	0513	GEC	0052; 0067; 1076; 0063; 0246; 0375; 1714; 0189; 0513; 1372	HANSEATIC	0359; 1639; 0114; 0424; 0162; 0195; 0230; 0554; 0540; 0435; 0513; 1638; 0262; 0351; 0557; 1601; 0391; 0296; 0336; 0067; 0025
EXCEL	0540; 0513	GELOSO	0359; 0262; 0230; 0115; 0025; 0080; 0060; 0354	HARROW	0513
EXPERT	0153; 0204; 1654	GEMSOUND	0359; 0262	HARWOOD	0540; 0513
EXQUISIT	0540; 0513	GENERAL	0359; 0067; 0354; 0111; 0513; 0540; 0197	HAUPPAGE	0540; 0513
FAGOR	0513; 0435	GENERAL CORPORATION	0067; 0108; 0153; 0513	HB	0557; 0513; 1489; 1459
FAIRMOST	0359	GENERAL TECHNIC	0354; 0359	HCM	0322; 0359; 0424; 0513; 0543; 0540; 0067; 0230
FALCON	0359	GENESIS	0540; 0513	HEDZON	0540; 0513
FAMILY LIFE	0540; 0513	GENEXXA	0390; 0162; 0540; 0262	HEIRU	0322
FELIX	0262; 0322; 0415; 0513	GERICOM	1383	HELECTRONIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654
FENNER	0359; 0424; 0513; 0540; 0544; 0354; 0111; 0516	GIANT	0067; 0527; 0111; 0561; 0359	HEMMER-MANN	0391; 0127; 1009; 0077
FERGUSON	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	GITEM	0242; 0513; 0351; 0111	HENA	0513
FIDELIS	0067; 0296; 0359; 0513	GM - GMC	0359; 0513; 0322	HEXA	0230; 0204
FIDELITY	0391; 0067; 0329; 1713; 0359; 0415; 1637; 0513; 0262	GOLD	1526	HIFIVOX	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026
FILSAI	0359; 0067	GOLD TOP	0424	HIGASHI	0067
FINLANDIA	0083	GOLDFUNK	0094	HIGHIWA	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
FINLUX	0066; 0077; 0115; 0127; 0131; 0136; 0137; 0230; 0246; 0282; 0295; 0359; 0374; 0375; 0390; 0431; 0513; 0556; 0558; 1126; 0557; 0540; 0222	GOLDHAND	0359; 0067	HIGHLINE	0540; 0513
FIRST LINE	0237; 0359; 0354; 1453; 0391; 0111; 0302; 0375; 0067; 0057; 0097; 1654; 0540; 0298; 0114; 0539; 0222; 0513; 0557; 0230; 1435; 0203; 1637; 1009; 1420	GOLDLINE	0073	HIKONA	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
FISHER	0363; 0133; 0066; 0067; 0314; 0115; 0197; 0149; 0290; 0024; 1657; 0391; 0539; 1658; 0572	GOLDSTAR	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207	HILINE	0359; 0415; 0513; 0322
FLINT	0513; 0073; 0544	GOLDTECH	0097; 0513	HINARI	0322; 0513; 0329; 0262; 0327; 0065; 0359; 0080; 0363
FLORIDA	0067	GOLDVISION	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	HISAWA	0513; 0262; 0073; 0544; 0557
FNR	0077	GOODMANS	0067; 0359; 0415; 0051; 0545; 0557; 0540; 0262; 0354; 0111; 0554; 0327; 0322; 0230; 0242; 1608; 0141; 0513; 1423; 0097	HISENSE	0004; 0083; 0145; 0539; 0540
FORESEE	0001	GORENJE	0539; 1657; 0516; 1658; 1296; 0513; 1423; 0051	HISHITO	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351
FORGESTONE	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	GPM	0322; 0329; 0262; 0359	HISONIX	0359; 0415
FORMENTI	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	GRADIENTE	0502	HIT	0024
FORTRESS	0024	GRAETZ	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	HITACHI	0513; 0067; 0082; 0083; 0094; 0095; 0119; 0137; 0142; 0160; 0178; 0189; 0197; 0296; 0329; 0326; 0431; 0496; 1393; 0547; 0554; 0569; 1016; 1076; 1259; 1369; 1423; 0052; 0540; 0222; 1711; 1714
FRABA	0513	GRANADA	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	HITSU	0262; 0544; 0073; 0513
FRAC	0077; 0540; 0513	GRANDEN	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	HOHER	0513; 0540; 0557; 1383; 1423
FRONTECH	0083; 0057; 0329; 0359; 0125; 0230	GRANDIN	1453; 1654; 0073; 1548; 1569; 0544; 0141; 0424; 1564; 0230; 0536; 0114; 0262; 0540; 0422; 1549; 1412; 1383; 0557; 0513	HOME ELECTRONICS	1437
FS SOUND	0359	GREAT WALL	0490; 0322	HORIZONT	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
FST	0065; 0067; 0111; 1637; 0246; 0254; 0302; 0375; 0540; 0513	GRENADIER	0547; 0513; 0230; 1174	HORNYPHON	0540; 0513
FUJI	0424	GRONIC	0238; 1174; 0067; 0359; 0230	HOSHAI	0097; 0424; 0262; 0513
FUJITECH	0513; 0111	GRUNDIG	0096; 0103; 0157; 0295; 0327; 0335; 0549; 1491; 1450; 1649; 1652; 1692; 0351; 1702	HOSPITALIERE	0513
FUJITSU	0077; 0329; 0067; 0153; 0108; 0052; 0282; 0222; 1283; 1408; 1345; 0513	GTRONIC	0495; 0513	HOWELL	0513
FUMEO	0052	GTT	0359; 0424; 1638; 0374; 0513	HPC	0003
FUNAI	0359; 0557; 1558; 0513; 0149; 1664; 0322; 0230	GUTTA	0495	HYD	1467; 1550
FURICHI	1338	H & B	0513	HYPER	0067; 0125; 0262; 0322; 0329; 0336; 0359; 0415; 0424; 0435; 0497; 0513; 1435; 1638; 1639; 0230
FUSION	1435; 0557	HADOR	1338	HYPSON	0141; 0025; 0544; 1434; 0557; 0336; 0540; 0513; 0097
FUTRONIC	0322			HYUNDAI	1475; 1450; 1568
FUTURE	0540; 0513			I.V.	0513
FUTURETECH	1638; 0415; 0114; 0490; 0131; 1639; 0136; 1657; 1658; 0230; 1363; 0125; 0097; 0513; 0077; 0024; 1227; 0111; 0327; 0547; 0196; 0067; 1317; 0336			IBERIA	0428; 0513
GALA	0329; 0296			IBERVIAO	0391
GALACTEX	0067; 0322				
GALANT	0359; 0415; 0424				
GALAXI	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654				

ICE	0262; 0415; 0057; 0111; 0067; 0540; 0513; 0359; 0322	KANGSLEY	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	LAVA	0513
ICS	0262; 0067; 0322			LAVIS	1611; 0162; 0025
IEG	0067			LAZER	0513
IMC	0513	KAOSHO	0064; 0067; 0075; 0082; 0227; 0296; 0312; 0322; 0359; 0375; 0384; 0422; 0453; 0513; 0515; 0542; 0544; 0547; 1309; 0111; 1382; 0540; 0528; 1657; 1658; 2066; 4267	LCE	0415
IMPER	0322; 0359; 0111; 0262			LEADER	0359
IMPERIAL	0057; 0060; 0131; 0540; 0227; 0298; 0359; 0374; 0435; 1227; 0467; 0513; 0230			LECSON	0540; 0513
				LEGENG	0490; 0359; 0513; 0067; 0322
				LENCO	0391; 0111; 0359; 0077; 0435; 0354; 0322; 0329; 0162; 0513
INCOBE	0067; 0359; 0290	KAPSCH	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	LENOIR	1399; 0067; 0424; 0359; 0354; 1009; 1639; 0322; 0097; 0409; 1343; 0141; 1638; 1401; 1395; 1394; 1398; 1396; 0513
INDESIT	0107			LEVIS AUSTRIA	0540; 0513
INDIANA	0513	KARCHER	0238; 0237; 0359; 0067; 0424; 0435; 0516; 0111; 0513; 0540	LEXUS	0374; 0322; 0513
INGELEN	0162			LEYCO	0513; 1453; 0322
INGERSOLL	0359; 0513	KATHREIN	0513	LG	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207
INNO HIT	0025; 0067; 0075; 0077; 0111; 0115; 0540; 0227; 0262; 0296; 0322; 0359; 0375; 0415; 0424; 0513; 1423; 0409; 1638; 1639; 4367	KAWA	0262; 0415	LIFE	0359; 1435
		KAWASHO	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	LIFETEC	0354; 0536; 0097; 0540; 0513; 0359; 0322; 0262; 1638; 0557
INNOVATION	0540; 0513	KAYA	0359; 0322	LIGHTSTAR	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420
INTERBUY	0125; 0322; 0505; 0359; 1637; 0540; 0262; 0415	KB ARISTO-CRAT	0162; 0391	LINTON	0133
				LLOYD'S	0422; 0515; 1082; 0359; 0415; 0052; 0136; 0096; 0067; 0322
INTERDIS-COUNT	0513; 0092; 0119; 0242; 0174	KELCINATOR	0062	LME	0025; 0067; 0114; 0204; 0237; 0435; 0230
INTEREACTIVE	1637; 0540; 0513	KEN	1317	LOCATEL	0351; 0619; 1445
INTERFORD	0133	KENDO	0051; 0222; 0230; 0300; 0295; 0073; 0542; 0080; 0077; 1227; 0359; 0513	LOEWE	0024; 0047; 0050; 0246; 0277; 0402; 0513; 0925; 1637
INTERFUNK	0042; 0111; 0047; 0062; 0069; 0079; 0092; 0096; 0162; 0302; 0540; 0374; 1617; 1621; 1445; 0052; 0513; 1654	KENEDY	0222; 0429; 0115; 0052; 1149; 0153; 0108	LOGIK	0097; 0384; 0422; 0374; 0513; 0146
INTERNAL	0540; 0513	KENNEX	0097; 0540; 0513; 4367; 0550; 1423; 0557	LOVE	0428; 0295; 0528; 0073; 0067; 0429; 0237; 0233; 0025; 0230; 0513; 0222; 0255; 1595; 1594; 1410; 1453; 0540; 1450
INTERVISION	0067; 0077; 0262; 0322; 0351; 0359; 0435; 0505; 0540; 0544; 1280; 0111; 0542; 1657; 0230	KENYA	0528	LS ELE-KTRONIK	0557
		KERION	1639; 0513	LTV	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
INTRON	0322	KEYMAT	1491; 1467; 1587; 0467; 0578; 0550; 0480; 0417; 2008; 2395; 1496; 4551; 0540; 1386; 1391	LUMA	0354; 0067; 0359; 0080; 0108; 0513; 0540; 0337; 0222; 0295; 0052; 0153
INWAH	0540	KEYSMART	0513	LUMATRON	0513
IRRADIO	0075; 0097; 0111; 0125; 0136; 0230; 0262; 0322; 0296; 0329; 0359; 0415; 0528; 0557; 0561; 0495; 1126; 1269; 1296; 0547; 1459; 1525; 0542; 0513; 1638	KIC	0515; 0067; 0237	LUXMAY	0540; 0513; 0490
		KIMAY	0322	LUXOR	0052; 0075; 0082; 0083; 0067; 0137; 0540; 0178; 0162; 0252; 0390; 0431; 0359; 0556; 1016; 0222; 1713
ISKRA	0230; 0025; 0067	KINGDHOME	0513	LXI	0547
ISUKAI	0424; 0262; 0513	KIOTA	0359; 0322; 0544; 0415; 1082	LYOTRON	0075; 0082; 0083; 0111; 0067; 0125; 0141; 0145; 0153; 0052; 0227; 0277; 0275; 0329; 0540; 0359; 0384; 0557; 0561; 0925; 0547; 1459; 1498; 1476; 0513; 1607; 0542; 1614; 0230; 3044; 4206; 4207
ITC	0513; 0067; 0230	KITON	0540; 0513	M.D.C	1638
ITL	0359	KITT	0067; 0322; 0513	MACROM	0480
ITS	0262; 0540; 0359; 0067; 0513; 0322; 0415	KITTEN	0513; 0111	MADISON	0513; 0540
		KIYOGIN	0067; 0025; 0237; 0230; 1174	MAGAVOX	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
ITT	0062; 0066; 0083; 0096; 0108; 0111; 0136; 0149; 0153; 0162; 0252; 0290; 0322; 0327; 0374; 0390; 0391; 0222; 0513; 0539; 1423; 1445; 0052; 1654; 1713	KLARMAX	0237; 0429; 0073; 1611; 0233; 0295; 0540; 0513; 0354	MAGNADYNE	0024; 0025; 0060; 0077; 0115; 0359; 1009; 1639; 0230
		KOBALTRONIK	0067; 0230; 1174	MAGNAFON	1639; 0077; 0067; 0025; 0513; 0230; 1126; 0131; 0238
ITV	0111; 0060; 0354; 0540; 0322	KOBIC	0359	MAGNASONIC	0111
JCE	0262	KOLSTER	0237; 1614; 0513; 0322; 0262; 1227; 0077; 0067; 0230; 1174	MAGNAVOX	0540; 0111
JEC	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	KONG WAM	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	MAGNEX	0513; 0322
		KONICHI	0359	MAGNUUN	0141; 0374; 0359; 1638; 0255; 0540
JEJA	0006	KONKA	0015; 1302; 0513; 1420; 1116; 0540; 0415; 1261; 0145; 0262	MAKROSONIC	1324
JET POINT	0513; 0384	KONTAKT	0549	MANDI	0540
JINLIPU	0359	KORPEL	0540; 0513	MANDOR	0322
JINPIN	0005	KOSMOS	0540; 0513		
JMB	0540; 0513	KOTRON	0322; 0359; 0230		
JOCEL	0513; 0435; 0556	KRAKING	0230		
JOHNSON	0067	KRIESLER	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705		
JOINTEK	0007; 0008	KUBA ELEC-TRONIC	0133; 0083; 0391; 0230; 0067		
JPS	0505	KUCCAI	0097		
JRC	0435	KURO	0024; 0513; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539		
JUBILEE	0540	KYOTO	0230; 0246		
JVC	0262; 0404; 0415; 0502; 1622; 0230; 0167	L&S ELE-KTRONIK	0557		
KABEL	0300				
KAIDO	0083				
KAISER	0513; 0424				
KAISUI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420				
KAMAR	0515				
KAMBROOK	0067; 0230; 0111; 0542; 0322; 0119				
KAMOSONIC	0067				
KAMP	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654				

MANESTH	0513; 0114; 0052; 1654; 0067; 0540; 1608; 0322	MITSUTI GENERAL	0298; 0233	NORDMENDE	0049; 0052; 0062; 0090; 0092; 0094; 0095; 0115; 0119; 0229; 0242; 0424; 0455; 0524; 0556; 0557; 1045; 0513; 1422; 1423; 0540; 1435; 1514
MANHATTAN	0359; 0097; 0513	MIVAR	0025; 0058; 0068; 0067; 0075; 0105; 0408	NORDTON	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
MARANTZ	0513; 0528	MKC	0578	NORDWAY	0298; 1657
MARECH	0513; 0114	MKM	0238	NORFOLK	0441
MARK	0354; 0513; 0336	MOBILE TV	0513	NORM N	0513
MARSHALL	0359; 0262	MOTION	0153; 1149; 0238; 0108; 0114; 0513; 1637; 0133; 0077; 0540; 1126; 0083	NORMEREL	1630; 0540
MASCOM	0513	MTC	0336; 1296; 0083; 1657; 1637; 0296; 0230	NORTEK	0513; 0097; 0141
MASCOT	0057	MULTIMAT	0238	NORTON	0359; 0424
MASUDA	0262; 0322; 0513; 0300	MULTISTANDARD	0077	NORWAY	0298; 1657
MATCH ITALIA	0359; 0513; 0322	MULTITECH	0359; 0557; 0141; 0067; 0262; 0149; 0025; 1227; 0125; 0077; 0178; 0162; 0322; 1614; 0490; 0336; 0354; 0545; 0540; 1613; 0230; 1657; 0513	NOVA	0329
MATSUI	0549; 0351; 0397; 0359; 0196; 0067; 0065; 0300; 0536; 1016; 0415; 1422; 0111; 0513; 0322; 0060; 0539; 0336	MURPHY	0052; 0230; 0083; 1445	NOVAK	0540; 0513
MATSUKA	0067; 0322	MUSIKLAND	0540; 0513	NOVATRONIC	0359; 0111; 0322; 0513; 0354; 0540; 0329
MATSUVIANA	0528	MUSTAG	1121	NU-TEC	0539; 0561
MAXAM	0359; 0322	MYRAD	0540; 0513	NUCLEAR	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083
MAXDORF	0322; 0561; 0495	NAD	0547; 0162; 0391	O GENERAL	0359; 0149
MAXELL	0329; 0424; 0359; 0025	NAGOYA	0230; 0441	OCEANIC	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
MAXIMAL	0230	NAIKO	0540; 0513	OCTAL	0067
MAXON	0359	NAKAMURA	0540; 0513	OCTAN	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
MAXWELL	0025; 0077; 0513	NAONIS	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653	ODEON	0359; 0322; 0111; 0513
MB LINE	0322	NARANYA	1531	OEI ELEC-TRONIC	0329; 1494
MC MICHAEL	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	NARITA	0547; 0354; 0322; 0067	OKANO	0359; 0227; 0302; 0513
MCE	0359; 0322; 0527; 0513	NASSA NAGEL	1563; 0230; 1611	OLIDATA	1378
MCM	0359	NATIONAL	0518; 0310	OLIVETTI	0527
MECOA	0513	NEC	0149; 0359; 0065; 0427; 1497; 1418; 0447; 0430; 1359; 0472; 0540; 0237; 0544; 0354; 0554; 0513	OLMAL	0025; 0237; 0513; 0262; 0322; 0125; 0230; 1174; 1639
MEDIASONIC	0513	NECKERMANN	0024; 0047; 0057; 0060; 0069; 0080; 0083; 0111; 0114; 0133; 0148; 0157; 0167; 1637; 0178; 0195; 0227; 0230; 0295; 0300; 0312; 0337; 0359; 0374; 0409; 0467; 0174; 0540; 1361; 0513; 1638; 1639; 0351; 0495	OLYMPIA	1423
MEDIATOR	0540; 0513	NEI	0435; 0230; 0490; 0262; 0513	OLYMPIC	0359; 0424
MEDION	1638; 0540; 0097; 1435; 1412; 0513; 1396	NEOVIA	0513; 1459; 1568; 1383; 1543; 1382; 1514; 1450; 1301	OMEGA	0415; 0322; 0262
MEGATRON	0547	NESCO	0327; 0125; 0375; 0312; 0222	ONCEAS	0359; 0067; 0060
MEGAVISION	0359	NETSAP	0540; 0513	ONDIOLA	0513
MEGHA	0009; 0010; 0011	NEUFUNK	0513	ONIDA	0302
MEIN	0009; 0010; 0011	NEW GOLDVISION	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	ONIEL	0359
MELBOX	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611	NEWMAR	0067; 0230; 1174	ONWA	0415; 0556; 0262; 0361; 0077; 0322
MELETRONIC	0060; 0066; 0133; 0136; 0137; 0181; 0282; 0295; 0351; 0354; 0359; 0390; 0513; 1009; 1614; 1638; 0540; 0222; 4340; 4341	NEWORLD	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	OPERA	0540; 0513
MELVOX	0025; 0162	NEWTECH	0067; 0242; 0513	OR - ON	0424
MEMOREX	0322	NEXIUS	0556; 1422; 0513; 1393; 0540	ORAVA	0230; 0024; 0513
MEMPHIS	0322; 0067; 0490; 0359	NFRE	1555	ORBITAS	0067
MERCURY	0322; 0067; 0384; 0359; 0544; 0111; 0513; 0515; 0237	NICAMAGIC	0025; 0067; 0083; 0111; 0114; 0115; 0136; 0540; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	ORBIT	0513
MERRIT	0162	NIKKAI	0513; 0322; 0067; 0329; 0082; 0141	ORIENT	0359
METEOR	0238	NIKKEI	1467; 1550; 1399; 0540; 0556; 1537; 0513; 0322; 0097	ORION	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540; 0111; 0119; 0230; 1422; 0415; 0441; 0513; 1059
METZ	0024; 0078; 0079; 0097; 0103; 0111; 0157; 0338; 0349; 0402; 0460; 0462; 0513; 1487; 1499; 0351; 1621; 1628; 2140	NIKKO	0547; 0513; 0111	ORLINE	0540; 0513
MGA	0322; 0262; 0354; 1637; 0513; 0547	NISSAN	0384	ORMOND	0097; 0513
MGAON	0322	NOBLEX	0149; 0354; 0422; 0197; 1661; 0415; 0359; 1283; 0528	ORSOWE	0025
MICROMAXX	0295; 0513; 0540	NOBLIKO	0067; 1126; 0136; 0131; 1227	OSAKA	0195
MICRON	0067	NOGAMATIC	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	OSAKI	0111; 0195; 0513; 0067; 0262
MICROSONIC	0572; 1139	NOKIA	0066; 0162; 0513; 0252; 0322; 0390; 0431; 0539; 0556; 0558; 0591; 1423; 0222	OSIO	0075; 0513; 0262
MICROTEK	0561; 1127; 0242; 0495; 0359; 0513	NORDING	0077; 0131	OSO	0262
MIGROS ELECTR	0295	NORDLAND	0230	OSUME	0540
MIGROS ELECTR	0295			OTAKE	0300; 0195
MINATO	0540; 0513			OTF	0230; 0111
MINERVA	0096; 0103; 0157; 0295; 0327; 0335; 0549; 1491; 1450; 1649; 1652; 1692; 0351; 1702			OTHER	0513; 5023
MINERVA FRANCE	0549			OTHER LINE	0067; 0025; 0435; 0513
MINOKA	0540; 0513			OTTO VER-SAND	0047; 0067; 0083; 0111; 0114; 0125; 0127; 0133; 0157; 0162; 1637; 0178; 0189; 0195; 0197; 0230; 0233; 0242; 0296; 0300; 0310; 0311; 0321; 0326; 0337; 0359; 0391; 0409; 0415; 0418; 0427; 0434; 0435; 0174; 0351; 0540; 0513; 1652; 0495; 0445; 1684
MISTRAL	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700			OVP	0513
MITRONIC	0329				
MITSUBISHI	0024; 0513; 0047; 0065; 0103; 0149; 0197; 0230; 0353; 0354; 0359; 0547; 0527; 1637; 0540; 1661; 1691; 1692				

PACIFIC	0513	PROSONIC	0513; 1638; 0415	ROSE&HOLIET	0539
PAEL	0067; 1126; 0096	PROTECH	0067; 0091; 0097; 0111; 0230; 0322; 0336; 0359; 0374; 1357; 0540; 0513; 1638; 1639	ROSITA	0359
PALLADIUM	0024; 0069; 0080; 0083; 0114; 0148; 0157; 0174; 1637; 0227; 0295; 0359; 0409; 0351; 0540; 0513	PROTON	0547	ROSNER	0067
PALSONIK	0322; 0067; 0329; 0302; 0262; 0359	PROVISION	0359; 0513; 0409; 0540; 0354; 1641; 0390; 0743; 0322	ROWA	0359; 0513; 0528; 0067; 0322
PANAMA	0067; 0322; 0057; 0540; 0513	PVISION	1489	ROWSONIC	0067
PANASHIBA	0359	PYE	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	ROYAL	0359; 0322; 0262; 0374; 0513; 0067; 0556; 0424; 0543; 0141; 1420
PANASONIC	0157; 0310; 0349; 0402; 0518; 1371; 1431; 0351; 0052; 0230; 1684; 1685; 1686; 1689; 0427; 2027	PYGMY	0024; 1621	ROYAL LUX	0556
PANAVISION	0513; 0295; 0322; 0536; 0505; 1639	QUADRAL	0374	RUEFACH	0391; 0111; 0359; 0077; 0435; 0354; 0322; 0329; 0162; 0513
PANAVOX	0067; 0359; 0424; 1121; 0572; 1325; 1139; 0545; 1447; 0513	QUADRIGA	0540	RUKOPIR	0540; 0513
PANDA	0310	QUADRA	0579; 1410; 1112; 0374; 0513; 1423	SABA	0025; 0051; 0055; 0090; 0092; 0094; 0095; 0111; 0119; 0164; 0181; 0229; 0242; 0513; 0557; 0052
PANORAMA	0055; 0067; 0536; 0262; 0359	QUALCRAFT	0329; 0262	SAGEM	0073
PANORAMIC	0092	QUASAR	0077; 0196; 0329; 0136; 0025; 1383; 0237; 1126; 0238; 0131	SAINEL	0230
PATH CINEMA	0025; 0067; 0114; 0204; 0237; 0435; 0230	QUEENFIDELITY	0060; 0067; 0111; 0354; 0359; 0361; 0375; 0502; 0513; 0545; 0554; 0557; 1390; 1412; 1450; 1453; 1574; 1601; 1613; 0540	SAISHO	0083; 0196; 0067; 0065; 0300; 0354; 0418; 0237; 0111; 0322; 0262
PATH MARCONI	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	QUELLE	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 1126; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	SAITO	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
PAUSA	0359	R LINE	0540; 0513	SAIVOD	0540; 0513
PCM	0513; 1639; 0114	RADIALVA	0513; 0354; 0540	SAKAI	0067
PEACOCK	0067; 0111	RADIOLA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	SAKIO	0359; 0354; 0322
PEONY	0527	RADIOMAR-ELLI	0060; 0024; 0359; 0077; 0025; 0115; 0230; 0111; 0374; 0513; 1009; 1639	SAKURA	0359
PERDIO	0513	RADIONETTE	0066; 0282; 0052; 1654	SALORA	0052; 0075; 0080; 0082; 0083; 0137; 0540; 0178; 0162; 0513; 0252; 0390; 0431; 0539; 0556; 1016; 0230; 1702; 0222
PERFEKT	0513	RADIOESHACK	0547; 0540; 0513	SAMBERS	0329; 1126; 0077; 0025; 1124; 0237; 0238; 0131
PERSHIN	0204; 0096	RADIOTONE	0107; 0359; 0111; 0536; 0322; 0336; 0513; 1638; 0255; 0540; 0227	SAMPO	0111
PHILARMONIC	0060; 0067	RANK / RBM	0052; 0435; 0295; 0230	SAMSUNG	0064; 0067; 0075; 0082; 0227; 0296; 0312; 0322; 0359; 0375; 0384; 0422; 0453; 0513; 0515; 0542; 0544; 0547; 1309; 0111; 1382; 0540; 0528; 1657; 1658; 2066; 4267; 5064
PHILBIX	0246; 0114; 0025; 0230; 0359; 0513	REALISTIC	0547	SAND	0540
PHILCO	0024; 0057; 0060; 0115; 0131; 0149; 0227; 0298; 0359; 0374; 0435; 0572; 1139; 1611; 0513; 0230	RECOR	0374; 0513; 1637; 0540	SANDOR	0062; 0083; 0162; 0178; 0203; 0204; 0251; 0252; 0431; 0539; 0052; 1654; 0222; 2356; 4340; 4341
PHILIPS	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	RED STAR	0513	SANDRA COLOR	0025; 0067
PHOENIX	0238; 0114; 0111; 0115; 0513	REDDER	0233; 0237; 0197	SANSUI	1423; 0359; 0415; 0424; 1469; 0544; 0539; 1340; 0540; 1237; 0322; 0557; 0149; 0513
PHONOLA	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705	REDIFFUSION	0162; 0052	SANWA	0024; 0513; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PIONEER	0540; 0162; 1508; 0464; 0474; 1527; 0095; 0302; 0119	REDO	0359; 0354	SANYO	0024; 0513; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539
PLANTRON	0359; 0513; 0322	REDPOINT	0549	SAR	0083; 0513; 0067
PLASMATECH	1383; 1436	REFLEX	0513; 1639; 0097; 0540	SATRONIC	0057
PLATINIUM	0528	REGENTE	0359	SATUM	0354; 0359; 0114; 0513; 0227; 0136; 0025
PLAYDOR	0322	RELISYS	1383	SAVE	0540; 0513
PLAYSONIC	0067; 0237; 0024; 0513	RENDER	0550; 1511; 1412; 0417; 1469; 0513	SAVILLE	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0515; 1009; 0141; 1368; 1422; 0540
POLYTRON	0513	REVOX	1637; 0540; 0513	SBR	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705
POP	0322; 0095	REX	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653	SCHAUB LORENZ	0062; 0097; 0111; 0162; 0178; 0227; 0252; 0322; 0354; 0359; 0374; 0384; 0424; 0431; 0222; 0435; 1393; 1459; 1469; 1475; 1489; 0557; 0052; 0513; 1638; 1639; 1654
POPPY	0359	RFT	0262; 0540; 0242; 0359; 0336; 1611; 0240; 0363; 0077; 0311	SCHNEIDER	0024; 0042; 0067; 0077; 0080; 0097; 0111; 0115; 0119; 0125; 0133; 0141; 0153; 0157; 0222; 0230; 0262; 0272; 0298; 0302; 0329; 0359; 0374; 0391; 0409; 0415; 0434; 0513; 0533; 0536; 0540; 0544; 0586; 1269; 1317; 1364; 1380; 1383; 1423; 1496; 1533; 1557; 1607; 1617; 1618; 1630; 1639; 1672; 1705; 2008; 2395; 4551
PORTLAND	0540; 1638; 0513; 0354	RHINEX	0561		
POWERPOINT	0540; 0513	RICONH	0540; 0513		
PRANDONI	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083	RITZ	0230		
PRECISION	0067; 0329	RM 2000	1639; 0513; 0097		
PREMIER	1116; 0322	ROADSTAR	0076; 1453; 0359; 0141; 0097; 0540; 0528; 0557; 1423; 1469; 0262; 0513; 1343; 1525; 1435; 0556		
PRIMA	0505; 0067; 0329; 0322	ROBERTS	0327		
PRINCE	1227; 0080; 0115; 0540; 0097; 0302; 0513; 1126; 0025; 0077; 0083	ROBOTRON	0024; 0363		
PRINCESS	0329; 0540; 0359	ELECTR			
PRINSTON	0141	RODEX	0540; 0513		
PROCYON	0024; 0042; 0067; 0111; 0119; 0133; 0153; 0157; 0302; 0391; 0536; 0586; 1317; 1364; 1380; 1383; 1557; 1607; 1617; 1618; 1630; 0540; 0513; 0409; 1672; 1705				
PROFESSOR	0111				
PROFEX	0359; 0435; 0131; 0298; 0162; 0230				
PROFILINE	0513				
PROFILO	0111; 0513; 0025				
PROFITRONIC	0077; 0540; 0513				
PROLINE	0295; 0554; 0375; 0230; 0418; 0540; 0513				

SCOPE	0005; 0013; 0014	SKAY	0540; 0513; 0424	SUPERTECH	0359; 0513; 0415; 0474; 0262; 1638; 1453; 0298
SCOTLAND	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	SKY LINE	0141; 0067	SUPERTONE	0025; 0067; 0114; 0204; 0237; 0435; 0230
SCOTT	0114; 1639; 1638; 0547; 0327; 1317	SKYWORTH	0012	SUPRA	0359; 0354; 0322; 0329; 0547; 0067; 0422
SEARS	0024; 0513; 0067; 0149; 0197; 0227; 0290; 0312; 0314; 0363; 0375; 1423; 1657; 1658; 1661; 1669; 0539	SLAVA	0067	SUPREME	0136; 0060
SEAWAY	0513	SLIDING	1549; 0513; 1555; 0556; 1383; 1543; 1453; 2008; 2395; 1496; 4551; 0540; 1569; 1564; 1412	SUTRON	0359
SEDIP	0025; 0067; 0114; 0204; 0237; 0435; 0230	SMARAGD	0549	SVA	0561
SEELVER	0540; 0513	SMR	0025; 0077; 0513	SYCLINE	0067; 0359
SEG	0111; 0057; 0077; 0097; 0067; 0131; 0540; 0252; 0262; 0322; 0329; 0359; 0363; 0435; 0513; 1227; 1423; 1639; 0230	SOLAVOX	1654; 1713; 0162; 0082; 0230	SYDNEY	0067
SEI	0024; 0077; 0115; 0127; 0169; 0162; 0195; 0196; 0222; 0262; 0295; 0300; 0359; 0391; 0409; 0528; 0556; 0581; 1009; 1022; 1422; 0513; 1433; 1434; 1565; 1622; 0540; 0445; 1639	SOMBER	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611	SYSLINE	0540; 0513
SEIGA	0024; 0513; 0047; 0065; 0103; 0149; 0197; 0230; 0353; 0354; 0359; 0547; 0527; 1637; 0540; 1661; 1691; 1692	SONICX	0513	SYTEL	0246; 0114; 0025; 0230; 0359; 0513
SEIKO	0354	SONIKO	0540; 0513	TADISTAR	0374; 0262
SEITECH	0556	SONITRON	0067; 0290; 0539; 0024	TAIHSO	0230
SELECO	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653	SONNECLAIR	0540; 0513	TAKARA	0513
SELECT	0513	SONOKO	0322; 0359; 0067; 0513; 0505; 0424; 0111; 0557	TALENT	1085
SELTEN	1432	SONOLOR	0162; 0431	TALITA	0024; 0025; 0096; 0111; 0204; 0237; 0490; 0540; 0230; 1611
SEMP	0337	SONORO	0359; 0322; 0111; 0513	TAMASHI	1323
SENCORA	0359	SONOROC	0359; 1657; 1639; 0513; 0125	TANDBERG	0024; 0050; 0092; 0094; 0195; 0246; 0295; 0349; 0222; 1628
SENDAY	0513	SONTEC	0359; 1657; 1639; 0513; 0125	TANDY	0083; 0080; 0067; 0262
SENTRA	1608; 0262; 0207	SONY	0065; 0149; 0539; 0513; 0785; 1382; 0167; 1672; 0174; 0495	TASHIKO	0080
SERINO	0073	SOUND	1638; 0540; 0322; 0513; 0557; 0141; 0415; 0143	TASTER	0111; 0322; 0262
SET	0435; 0513	SOUND DE-SIGN	0547	TATUNG	0246; 0067; 0111; 0375; 1637; 0254; 0065; 0242; 0513
SETRON	0359	SOUNDMAS-TER	0359	TAUTO	0513
SHARP	0067; 0149; 0197; 0321; 0311; 0445	SOUNDVISION	0077; 0513; 0262	TCL	0561
SHINTOSHI	0513; 0540	SOUNDWAVE	0374; 0322; 0513	TCM	0540
SHIVAKI	0311; 0540; 0513; 0230; 0111	SOUTHERN	1614	TD DESIGN	1637
SHIWAN	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	CROSS		TDA	0557
SHINIED	0322	SOOWTECH	1657	TEAC/TEAK	1637; 1607; 0391; 0544; 0561; 0222; 0359; 1592; 0111; 0047; 1269; 0513
SHORAI	0195	SPARKLE	0513	TEAM	0424
SHOV	0415; 0359; 0322; 0513; 0067	SPECTRA	0322; 0513; 0354	TEC	0047; 0057; 0097; 0111; 0067; 0125; 0133; 0141; 0153; 0052; 0162; 0196; 0540; 0222; 0298; 0312; 0329; 0354; 0359; 0391; 0409; 0434; 0513; 0230; 2315
SIAREM	0025; 0115; 0077; 0024	SPECTRUM	0547	TECCO	0092; 0067; 0359
SICANTIC	0052; 0075; 0082; 0083; 0067; 0137; 0540; 0178; 0162; 0252; 0390; 0431; 0539; 0556; 1016; 0222; 1713	SPORT GEN-EXXA	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654	TECHLINE	0077; 0097; 0513; 0540
SICE	1652	SSANGYONG	0064; 0067; 0075; 0082; 0227; 0296; 0312; 0322; 0359; 0375; 0384; 0422; 0453; 0513; 0515; 0542; 0544; 0547; 1309; 0111; 1382; 0540; 0528; 1657; 1658; 2066; 4267	TECHNEMA	0025; 0067; 0083; 0111; 0114; 0136; 0540; 0196; 0227; 0230; 0322; 0354; 0359; 0435; 0542; 0513; 1637; 1639; 1654
SIDEC	0230	SSS	0359; 0557; 1558; 0513; 0149; 1664; 0322; 0230	TECHNIC	0513
SIEL	0230	STAG	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	TECHNICS	0359; 0427; 0310
SIEMENS	0039; 0069; 0103; 0148; 0157; 0513; 0329; 0335; 0351; 1651; 1652	STANDARD	0359; 0060; 0067; 0262; 0513; 0111; 0114	TECHNIKA	0262; 0359
SIERA	0540; 0513	STAR	0513	TECHNILAND	0302
SIESTA	1657; 0336; 0111	STARLINE	0513	TECHNISAT	0540; 4465; 0513
SILVA	0149; 0359; 0067; 0302; 0322; 0298; 0513; 0329	STARLITE	0322; 0359; 1638; 0111	TECHNISSON	0557
SILVER	0149; 0262; 0513; 0540; 0322	STARLUX	0359; 0513; 0067	TECHNOL	0359; 0354; 0067; 0513; 1637; 1094; 0544; 0322
SIMATEC	0065; 0127; 0195; 0196; 0262; 0300; 0322; 0329; 0359; 0407; 0409; 0415; 0418; 0447; 0472; 0544; 0556; 0557; 0513; 1009; 0141; 1368; 1422; 0540	START	0513	TECHWOOD	0513; 1423
SIMTEL	0111; 0262; 0322; 0424; 0133	STASSFURT	0262; 0540; 0242; 0359; 0336; 0363; 1611; 0024; 0077; 0311	TECHMIMAGEN	0540
SINGER	0359; 0077; 0060; 0115; 1227; 0025; 0024; 0513; 0067; 0429; 0111; 0415; 0540; 1311; 1638	STENWAY	0424	TECNISON	0111; 0067; 0359
SINOTECH	0322; 0495; 0561; 0374; 0141	STERLING	0540; 0513	TECO	0143; 0196; 0222; 0262; 0322; 0359; 0415; 0513; 1343; 1410; 1423; 0540; 1440; 1469; 1559; 1578; 1587; 1588; 1638; 1639; 1666; 1711
SINUDYNE	0024; 0077; 0115; 0127; 0169; 0162; 0195; 0196; 0222; 0262; 0295; 0300; 0359; 0391; 0409; 0528; 0556; 0581; 1009; 1022; 1422; 0513; 1433; 1434; 1565; 1622; 0540; 0445; 1639	STERN	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653	TECCSONIC	0572
SIREL	0025	STRATO	0540; 0513; 0322	TEDELEX	0230; 0359; 0111; 0302; 0067; 0490; 0561; 0513; 1094; 1243; 0528
SKANTIC	0052; 0075; 0082; 0083; 0067; 0137; 0540; 0178; 0162; 0252; 0390; 0431; 0539; 0556; 1016; 0222; 1713	STRONG	1432; 1586	TEINEL_SA	0230; 1639
		STT SONIG	0111	TEK	1127
		STV	0162	TEKA	1127
		STVI	0230; 0067	TEKNANT	0424; 0513; 0359
		SUNICLINE	0513	TEKNIKA	1614
		SUNKAI	0447; 0073; 0513; 0549; 0300; 0195	TEKON	0384; 0359
		SUNNY	0415	TELEAVIA	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026
		SUNSTAR	0536; 1639; 0322; 0359; 0513	TELECHROM	0424; 0513
		SUNWATT	0111	TELECOR	0540; 0513
		SUNWORLD	0513; 0359	TELEFAX	0359
		SUPERLA	0230; 0025		
		SUPERSONIC	0539; 0544; 1637; 0415; 0513; 0359; 1094; 0322		

TELEFUNKEN	0051; 0092; 0094; 0095; 0107; 0111; 0119; 0141; 0164; 0229; 0242; 0378; 0524; 0528; 0540; 0513; 0579; 1191; 1269; 1301; 1616	TRILUX	0540	WATSON	0111; 0080; 0097; 0105; 0114; 0115; 0196; 0540; 0262; 0322; 0359; 0536; 0513; 1639; 1651
TELEFUSION	0540; 0513	TRISTRAR	0374; 0111; 0262	WATT RADIO	0227; 0077; 0115; 0060; 0298; 0067; 0513; 0359; 1657; 0238
TELEGAZI	0391; 0162; 0540; 0513	TRIUMPH	0196; 0540; 0513	WEBER	0359; 0125; 0262; 0322; 0047
TELEKTRON	0359; 0077	TRIVISION	0359	WEGA VISION	0149; 0024
TELEMASTER	0513	TSOSHI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	WEGAVOX	0374; 0359; 0556; 0302; 0322; 0528; 0540; 0141; 0097; 0057; 0513
TELEMEISTER	0540	TTR	0513	WELLFUND	0424
TELEOPTA	0359	TV STAR	0230	WELLINGTON	0513
TELEPAC	0359	TVD	0513	WELLTECH	0557
TELEPOINT	0513	UHER	0153; 1149; 0238; 0108; 0114; 0513; 1637; 0133; 0077; 0540; 1126; 0083	WELTBlich	1639; 0540; 0114; 0513; 1638; 1453
TELERENT	1637	ULTRAVISION	0237; 0290	WESTON	0435; 0540; 0424
TELESONIC	0513; 1338	ULTRAVOX	1639; 0077; 0354; 0067; 0513; 0409; 0125; 0115; 0189; 0050; 0111; 0024	WESTWOOD	0513; 0540; 1338
TELESTAR	0374; 0359; 0322; 0536; 0336; 0111; 0302; 0513	UNDERWOOD	1391	WHARFEDALE	0540; 1338
TELESYSTEM	1548; 1475; 0513; 2008; 2395; 1496; 4551; 0540	UNIC RADIO	0025; 0067; 0230; 0435; 1657	WHITE WEST-HINGHOUSE	0067; 0077; 0083; 0108; 0114; 0115; 0131; 0136; 0153; 0227; 0295; 0322; 0359; 0374; 0424; 0435; 1149; 0540; 0513; 1639; 1658; 0230
TELETECH	0097; 0513; 0057; 0359; 0540	UNIMOR	1657; 0513; 0336; 0153	WILSON	0513
TELETON	0067; 0108; 0153; 0052; 0083; 0149	UNITED	1423; 0557; 1657; 0145; 0141; 0513	WINDSOR	0513; 0097
TELEVIEW	0540; 0513	UNITRON	1338	WINDSTAR	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700
TELEXA	0077	UNITRONIC	0359	WINDY SAM	0540
TELRA	0111; 0513	UNIVERSUM	0047; 0065; 0066; 0069; 0374; 0075; 0077; 0083; 0094; 0096; 0097; 0103; 0108; 0111; 0067; 0125; 0136; 0137; 0148; 0149; 0157; 0162; 0164; 0167; 1637; 0195; 0196; 0197; 0230; 0242; 0282; 0290; 0295; 0296; 0298; 0300; 0302; 0310; 0312; 0322; 0326; 0329; 0337; 0351; 0359; 0375; 0390; 0391; 0409; 0418; 0427; 0431; 0222; 0434; 0516; 0558; 1126; 0540; 0513; 1639; 1649; 1651; 1652; 1653; 1654; 1657; 1658; 1672; 0174; 0495	WINNER	1531; 1346; 0359
TEMCO	0195	UNIVOX	0024; 0237; 0230; 0162; 0540	WINSTON	0424; 0513
TEMPEST	0540; 0513; 0067; 0359; 0262	UNK	0025; 0557; 0375; 0230; 0513	WINTERNITZ	0359; 0097; 0497; 0354
TENNESSEE	0540; 0513	URANIA	0329; 1126; 0077; 0025; 1124; 0237; 0238; 0131	WORLD TECH	0513
TENSAI	0060; 0066; 0067; 0077; 0097; 0111; 0114; 0195; 0238; 0262; 0282; 0302; 0354; 0359; 0415; 0540; 0542; 0513; 1639; 0230	URANYA	0354; 0359; 0114; 0513; 0227; 0136; 0025	WORLDVIEW	0513; 0359; 0544; 0111; 0415
TENSON	0359	UTAX	0067; 0359	WOV	1450
TESLA	0024; 0230; 0111; 0513; 0415; 0262; 0237; 0528; 0540	VANGUARD	0067; 0083; 0359	WREMEN	0238
TESLA SLOW	0024; 0230; 0111; 0513; 0415; 0262; 0237; 0528; 0540	VASILINEC	0359	XCELLENT	1338; 1638; 0513
TETTRAN	0230; 0114	VECO	0359; 0111	XENA	0204
TEVION	0540; 0557; 0513; 1377	VENTANA	0513	XONYCS	0513
TEXET	0067	VESTEL	0042; 0057; 0083; 0097; 0230; 0298; 1423; 0540; 0513; 1639	XRIPTON	0513; 1638; 0374; 0540
THES	1440	VEXA	0424; 0359; 0067; 0513	YAMISHI	0424; 0359; 0540; 0544
THOMAS	0544	VICEROY	0329; 1082; 0067; 0322	YAMO	0262
THOMSON	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	VIDECON	0111	YOCAN	0540
Thomson 3004	5013	VIDEOLOGIC	0262; 0067; 0322	YOKO	0359; 0207; 0322; 0067; 0092; 0540; 0354; 0125; 0329; 0435; 0262; 0290; 0513; 0230; 0516
Thomson 2100	5023	VIDEOMAC	0067; 0322	YORK	0262
THORN	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700	VIDEON	0513	YOSHITA	0513
TIME	1537; 1489; 0513	VIDEOSAT	0057; 0125	YOTAKA	0513
TMK	0196; 0547	VIDEOSYSTEM	0513; 0540	YUMATU	0322; 0359; 0111; 0374; 0415
TOBISHI	0262; 0359; 0384; 0195; 0067; 0322	VIDEOTON	0513; 0060; 0067; 0097; 0111; 0119; 0178; 0290; 0302; 0374; 0391; 0435; 0441; 1423; 0540; 0230	ZAMPA	0052
TOBO	0322; 0359	VIDESON	0230	ZANELA	0311; 0445; 0321
TOKAI	0359; 0322; 0435; 0540; 0513	VIDIKRON	0359; 1661; 0114; 0077	ZANUSSI	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
TOKIWA	0359; 0322; 0435; 0540; 0513	VIDION	0359	ZENOR	0539
TOKO	0513	VIDITAL	0322	ZIRWATEL	0495
TOKYO	1608; 0424; 0384	VISIOLA	0025; 0067; 0114; 0204; 0237; 0435; 0230	ZOPPAS	0062; 0080; 0108; 0153; 0052; 0197; 0242; 0295; 0390; 0428; 0429; 0435; 0222; 0513; 1149; 1181; 0540; 1653
TOMASHI	0556; 0544; 0424; 0262; 0067; 0513; 0359; 0415; 0073; 1420	VISION 2000	0513; 0359; 0540; 0322		
TOMITA	0067	VISION MAGIC	1412		
TOP VISION	0230; 0513; 0435; 0238	VISIONREX	0025		
TOPSHOR	0561; 0322	VISTA	0051; 0217; 0229; 0237; 0242; 0254; 0302; 0378; 0455; 0513; 1616; 0322; 1700		
TORRE	0051; 0055; 0052; 0090; 0092; 0094; 0095; 0096; 0119; 0136; 0164; 0181; 0229; 0230; 0242; 0455; 0549; 1045; 1435; 1478; 1445; 2026	VISTAR	0203; 0431		
TOSHIBA	0513; 0197; 0207; 0296; 0337; 0557; 1423; 1608; 0467; 0351	VORTEC	0145; 0540; 0513		
TOWADA	0230; 0077	VOXSON	0024; 0080; 0136; 0322; 1227; 0556		
TRANS CONT.	1437; 1434; 1453; 1569; 0097; 0540; 1383; 1564; 0513	VSM	0181		
TRANSONIC	1607; 0322; 0536; 0513; 0528	WAGNER	1654		
TREVI	0424; 1549; 0149; 0359; 0230; 1525; 1343	WALKIE	0295; 0153		
TRIAD	0540; 0237; 0513; 0111	WALKVISION	0513		
TRIDENT	0067	WALTHAM	0513; 0060; 0067; 0097; 0111; 0119; 0178; 0290; 0302; 0374; 0391; 0435; 0441; 1423; 0540; 0230		

www.ferguson-digital.eu