

User Manual

SmartEYE100 IP Cam




*Please read the user manual carefully before operation.

Specification

| | | |
|--------------|---------------|---|
| System | P2P | Free, Plug and Play, no port forwarding |
| Video | Pixel | 1 Megapixel |
| | Frame rate | 1~20fps(50Hz), 1~25fps(60Hz) |
| | Resolution | (1280*720), VGA(640*352), QVGA(320*176) |
| | Lens | 3,6mm; 70° angle view |
| | WB&BLC | Auto |
| Night vision | IR | 12 pcs LED lights, Wavelength 850nm |
| | Distance | IR distance 8m |
| Audio | Talk | Two way audio |
| Structure | Motor Control | -- |
| | IR-CUT | Auto switch, without color cast |
| | Pan & Tilt | -- |
| Network | Wire | -- |
| Wireless | WiFi | WiFi IEEE 802.11B/G/N |
| | Antenna | 2.4GHz antenna |
| Recording | Micro SD size | Max 64GB |
| | Protocol | Compatible with Onvif 2.1 |
| Power | Power | DC5V 1A USB |
| | Frequency | 50Hz / 60Hz |
| Environment | Assembly | Indoor |
| | Temperature | -10 ~ 60°C |
| | Humidity | 10% - 90% RH |
| Packing | Dimension | Product size: Φ 76*33mm |
| | Weight | Net weight: 65g |

Start-up

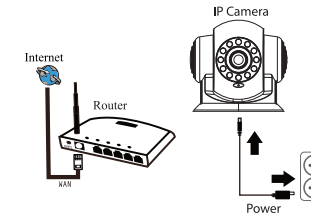

1. Near the wireless router, plug on the camera to the power supply (via the supplied power adapter);
2. When you hear melody tone from camera, it means that camera is waiting for receiving WiFi signal;
3. Then set up an Internet connection through the application on your phone.

Note: When camera is in initial state, there is melody tone coming out from it. Only Internet connection setup or power off may turn off the melody.

Application

Scan QR Code, download "Ferguson Smart" application, register a user account. The app is available for Android on Google Play and iOS in the App Store.





Configuration


1. Run the application and log in,

Note: The smartphone must be connected to your home 2.4GHz WiFi network.


2. Connect the camera to the power and wait for it to start, you will hear a melody.
3. In the application select "+" to add more devices to system,
4. Click on "IP Camera"

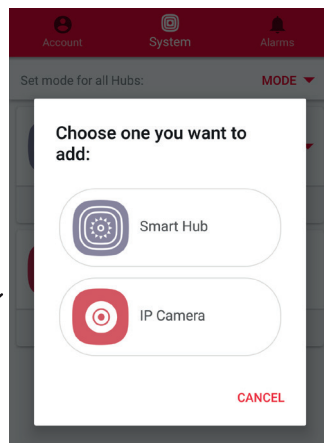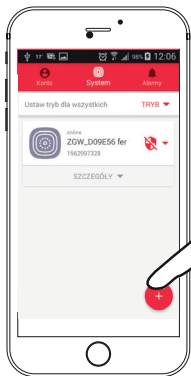

5. Select the camera you want to add from the list and confirm your selection,

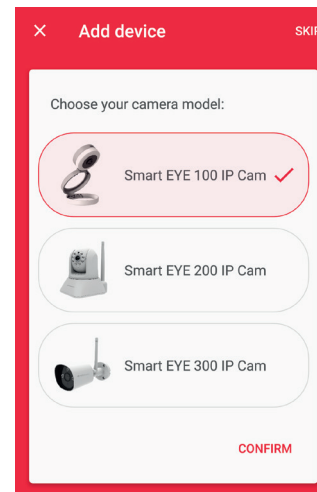


6. In the next window, enter the UID number. You can enter it manually or scan the QR code on the back of the camera with camera on your phone and confirm,

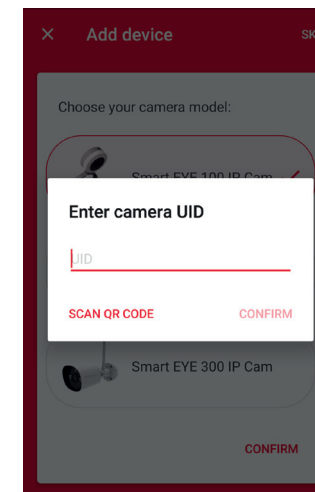

7. In the next step enter the WiFi password with which our smartphone is connected and confirm again.


8. The pairing process occurs. Wait for its completion,

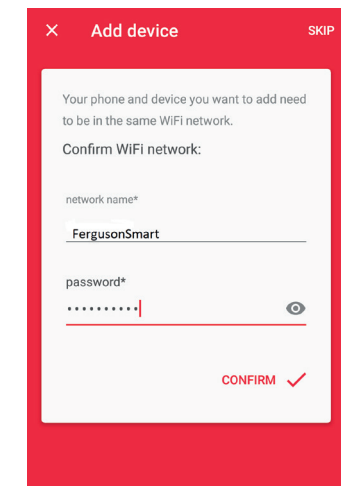


9. When the pairing is complete, the app will detect the added camera. Select and confirm.

The camera is ready to work.

By clicking on the selected preview from the list, we go to the window with additional options.

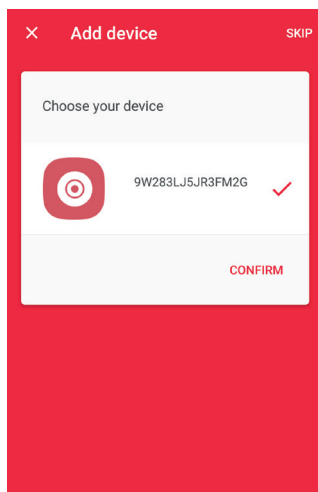

Handling

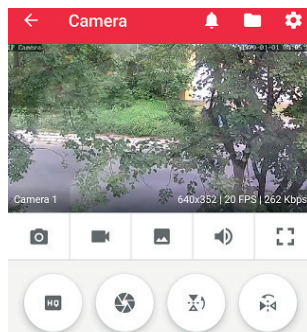


In the camera view is several features:

- Photo - click to take a photo and save it in phone's memory.
- Camera - click to start recording, click again to end recording and save in phone memory.
- Microphone - Holding while speaking, transmits sound to the camera.
- View full screen image.
- Quality - select the quality of the projected image. The higher the quality, the more delayed the transmitted image and sound.
- Environment (recommended setting "inside 50Hz").
- Camera settings.
- Saved events.
- Gallery of photos and videos stored in phone's memory.

Camera settings

By opening the camera settings we are able to make basic camera settings such as:

- change camera name,
- change the access password to the camera,
- setting the time zone and daylight saving time,
- setting the motion detection sensitivity, enabling this feature will result in notification from the application detecting motion by the camera. The higher the sensitivity, the more events will be recorded,
- Recording settings (continuous recording - means 24-hour recording in the loop. When the memory is full, the new data is written to the oldest file, in alarm - when motion is detected or off). The recording function only works if the SD card is installed,
- WiFi settings - possibility to change network and password WiFi,
- SD card memory and the ability to format it,
- delete camera,
- version of camera software,
- current IP address of the camera.

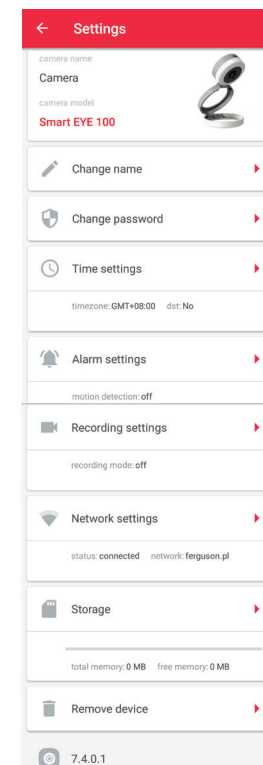

Camera support by web browser

Browser support allows you to access advanced camera settings not available from phone's application. One of the more interesting features is setting the camera to send a photo when it detects motion to an email address.

Ferguson IP camera can be operated by web browser on Port 81, or any computer program that supports IP cameras.

To configure the camera by a web browser, your computer must be connected to the same local network (LAN) as the camera is. Next start program "IPCameraSearch", which can be downloaded from our website. This program will search all cameras connected to your local network and indicate their IP addresses. By clicking on the "open", you will be redirected to the browser where you enter your camera login and password (default login: admin, password: admin).

Knowing the IP address of the camera, you can also enter an IP address with port 81 in your browser.

Example: <http://192.168.1.25:81>

You can reset the camera to the factory settings by pressing and holding the RESET button on the back of the camera for 8 seconds.

More information can be found on our page www.wiki.ferguson.pl

Safety measures

We request that you read the instruction manual and recommendations set forward therein.

- In order to avoid an electric shock, never open the housing. Damage to the warranty seal shall void the warranty.
- After prolonged use, it is normal that the unit temperature will rise.
- Please use the accessories provided by the manufacturer.
- Before commencing maintenance or installation work, disconnect the device from the mains. Do not clean the device with alcohol or liquids containing ammonia. If necessary, clean it with a soft, lint-free cloth wetted with a gentle solution of water and soap.

Downloadable software

Ferguson has taken every effort to provide users with software updates in order to ensure that the parameters of the device are up to date. Ferguson reserves itself the right to amend, change or modify the software used in the device as it shall choose and without prior notification.

The latest version of the software is available on the website <http://www.ferguson-digital.eu>

About the user manual

Ferguson Sp. z o.o. has made every effort to provide the most current information about its products. Ferguson Sp. z o.o. does not grant any guarantee as to the contents of the present instruction manual and disclaims any implied guarantees concerning market value or suitability for specific purposes. The information contained herein is an instruction intended to enable the correct usage and maintenance of the receiver. Ferguson Sp. z o.o. reserves itself the right to introduce amendments, changes or translations of the instruction manual without prior notification thereof. For this reason, we recommend you regularly visit our website in order to obtain the latest information.

Hereby Ferguson Sp. z o.o. declares that the device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EC. You can find the Declaration of Conformity on www.deklaracje.ferguson.pl. This product has been designed, tested and manufactured according the European R&TTE directive 2014/53/UE.

